


ASSEMBLY INSTRUCTIONS

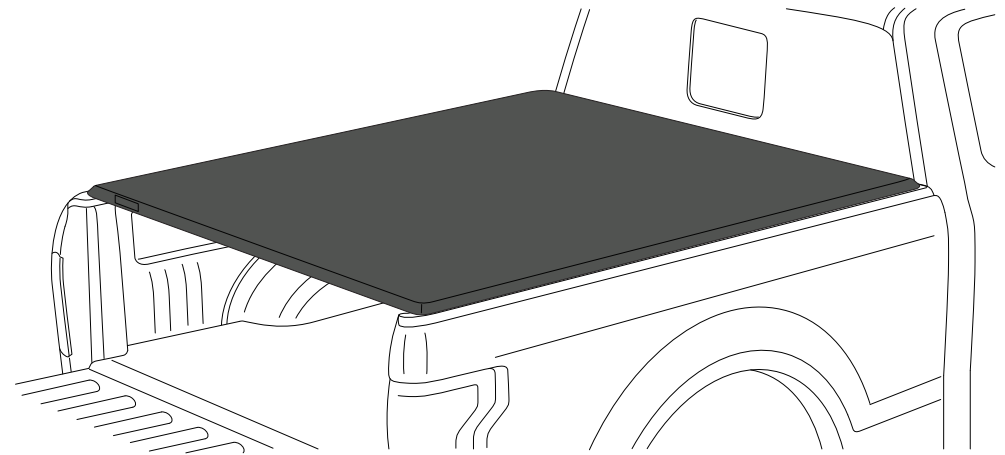

Soft Roll-up Tonneau Cover

Part List

| | 5ft | 5.5ft-6.5ft | 8ft | |
|---|-----|-------------|-----|---------------------|
| ① | | X1 | | Cover Roll Assembly |
| ② | | X2 | X4 | Side Rail |
| ③ | X4 | X6 | X8 | Mounting Clamp |
| ④ | X4 | X6 | X6 | Clamp Foam Pad |
| ⑤ | | X1 | | Seal Strip |
| ⑥ | | X1 | | 4mm Hex Drive |
| ⑦ | | X1 | | LED Light |

⚠ Warning:


1. Tonneau cover must be completely secure in the closed position or opened position while driving. DO NOT DRIVE with cover in partially opened position.
2. Clean the debris before roll up the tonneau cover.
3. Period check to ensure all clamps remain secure and tight.
4. Remove the tonneau cover before tow the truck from rear.
5. Make sure the locking clip on both sides are completely inserted into the side rails to avoid end of the cover becoming unlatched.

Step 1:



Clean the bulkhead and bedrail before installation.

Step 2:

1. Place cover roll assembly on front truck bed rail against the cab.
2. Loosen the screw on mounting tab and slide into side rail.
3. Re-install the screw to attach the side rail to cover roll assembly.

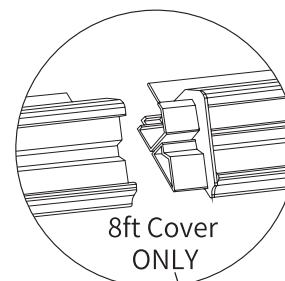





Make sure the mounting tab is fully inserted.

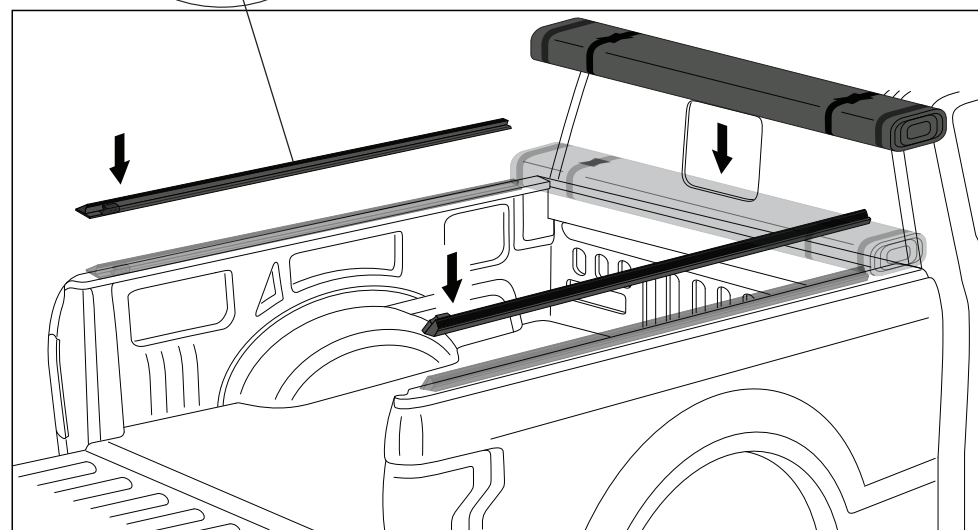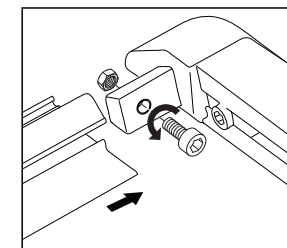

Step 3:


1. Attach the clamps to the side rail and truck bed rails.
2. Stick clamp foam pad onto bed rail for painting protection.

A: Short Bed
B: Standard Bed
C: Long Bed

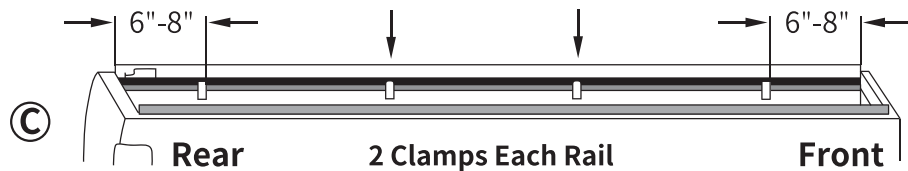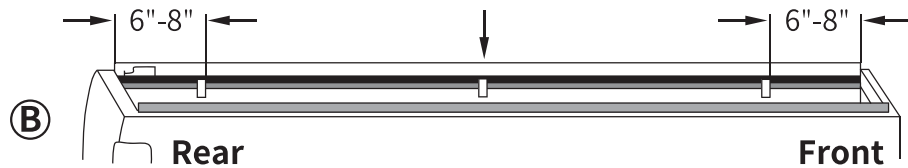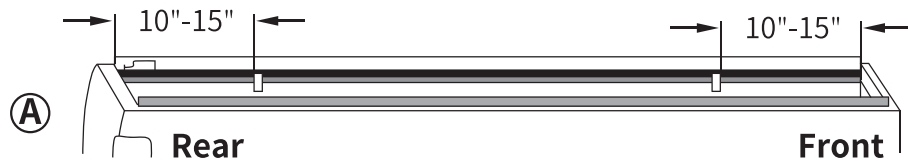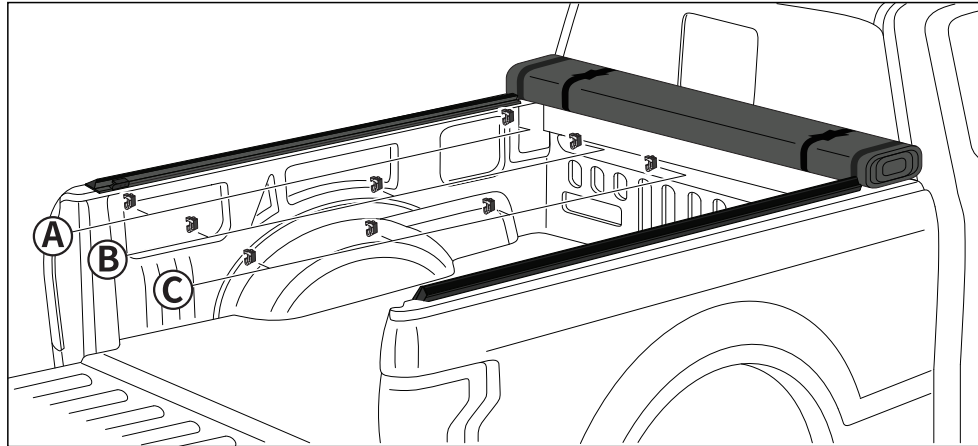


Step 4:


1. Tighten the clamps after whole cover assembly in place.
Hand tight ONLY, do not use power tools.

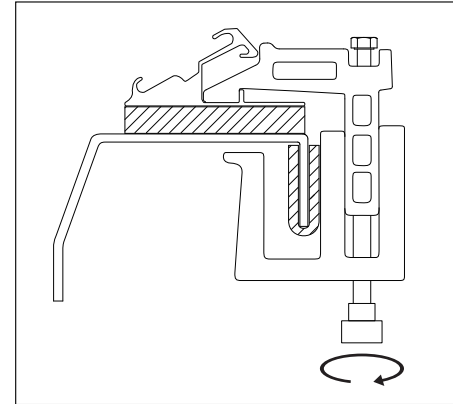


Without Utility Rail

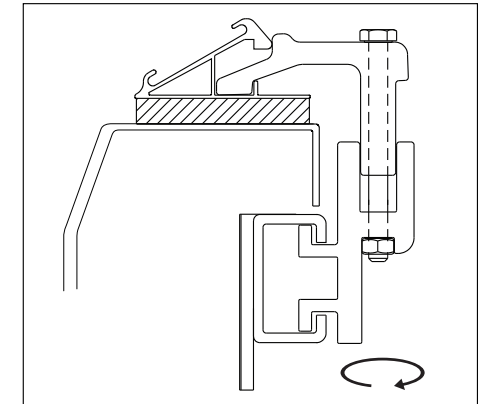


With Utility Rail

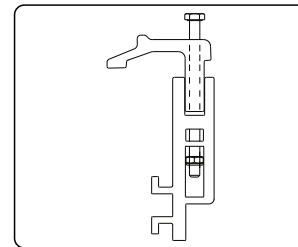

For Nissan Frontier

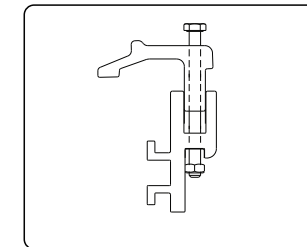

For Nissan Titan

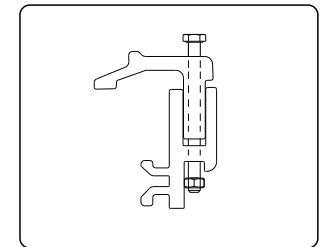


For Toyota/Jeep

Step 5:

1. Unlock the safety straps.
2. Roll the cover over the side rails.

Note:
Do NOT offset the cover off the side rails.



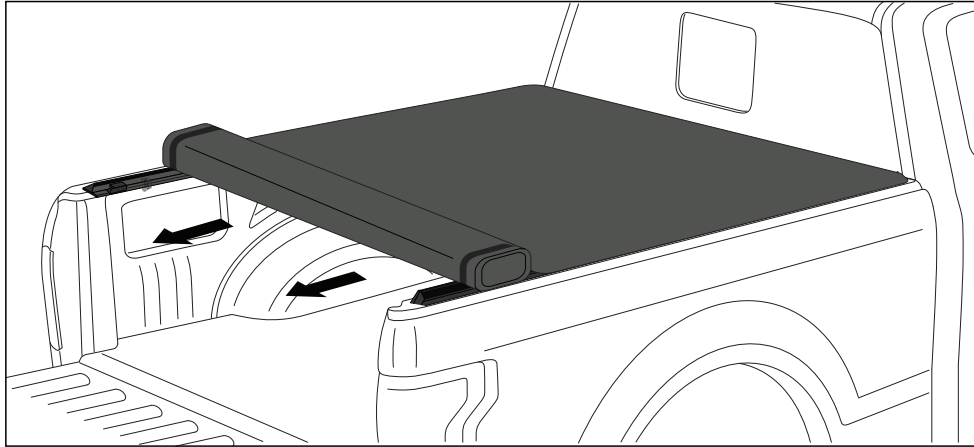


Step 6:

1. Push down the end of cover to close.

Note:


Latch the cover with tailgate open.

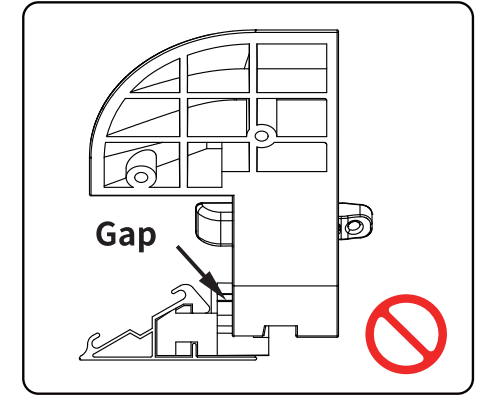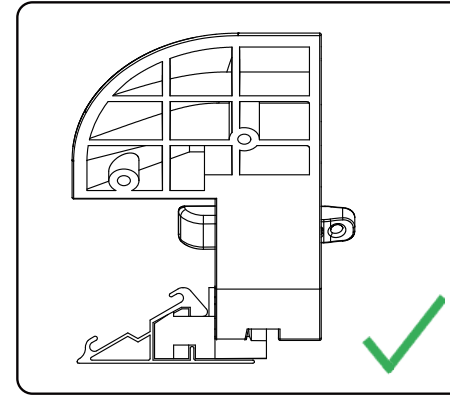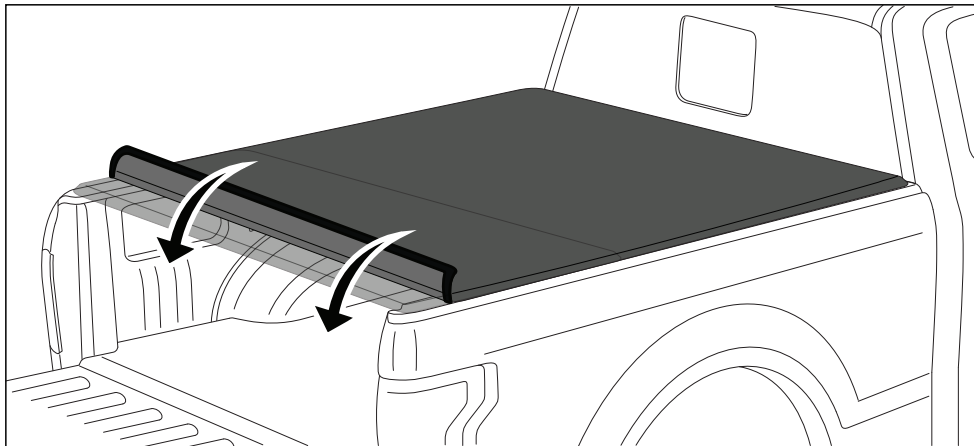

Make sure the locking clip on both sides are completely inserted into the side rails to avoid end of the cover becoming unlatched.


Step 7:

1. Press along the edge to secure the Velcro tape.
2. Seal the tailgate using weather seal strip.

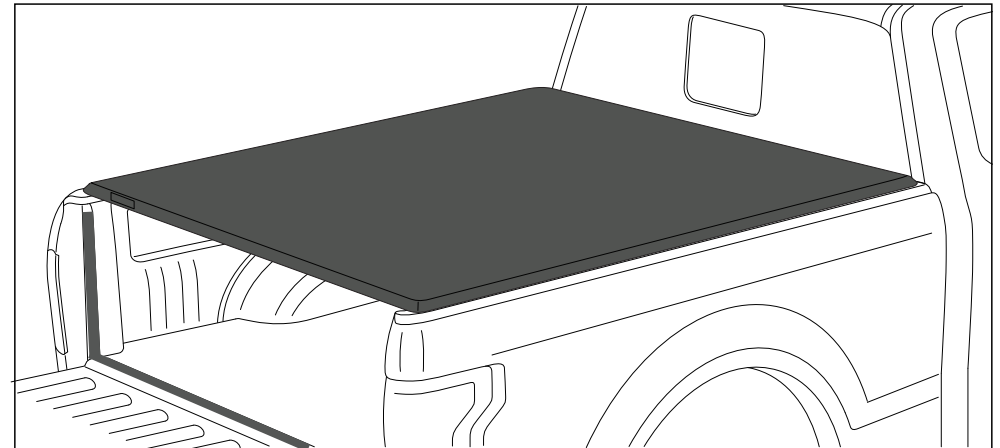

Step 8:


1. Clean the snow and any debris before roll up the cover.
2. Pull the cable to unlatch the cover.
3. Carefully roll up the cover. Do not off-set the cover off the side rail.
3. Secure the cover roll with safty straps.

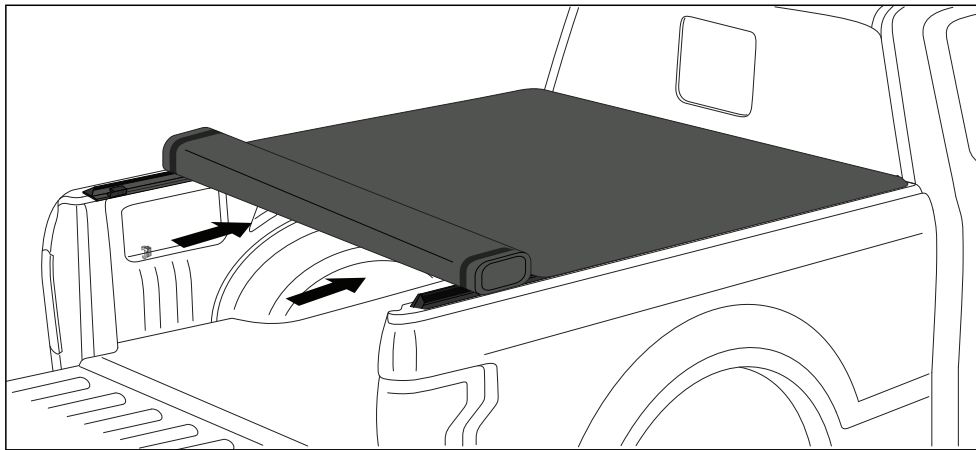

Tension Control Unit:



The cover assembly has been set a moderate tension to keep the cover tight and wrinkles free.

If you wish to adjust the tension, simply loosen the socket head bolt on the tension plate and slide the plate.


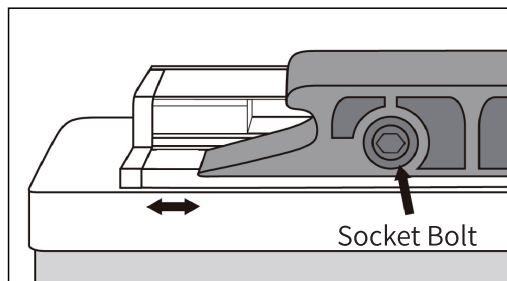


If Cover Doesn't Stay In Latched:

1. Make sure the locking clip is fully inserted. Check both sides.

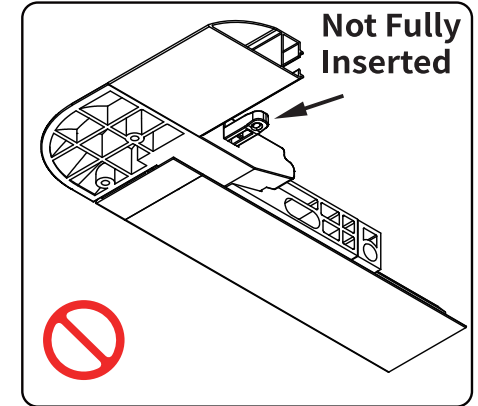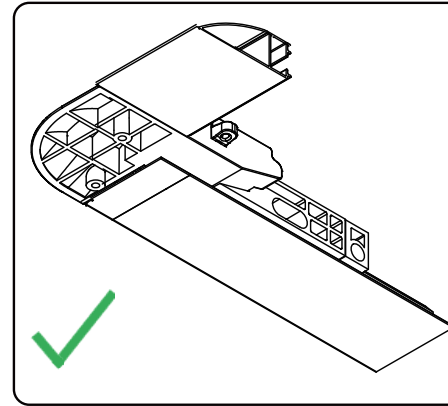

2. Adjust the tension control unit towards the tailgate at both side.

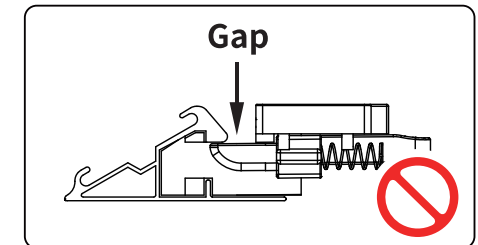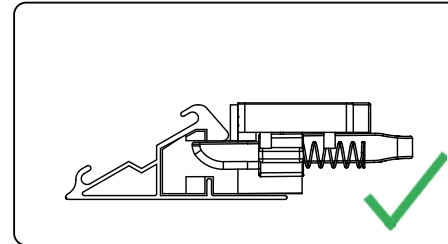

3. If the locking clip still not fully inserted, loosen mounting clamps and adjust side rails close to cover rear latch end.
4. Re-tighten mounting clamps after the cover latched.