



Reference Image

Installation:

1. Adjust front seats to the rear end when installing the first row floor mats.
2. Take the driver side floor mat, carefully install to the driver side floor and avoid accelerator and brake pedals.
3. Engage the retaining hooks if equipped.

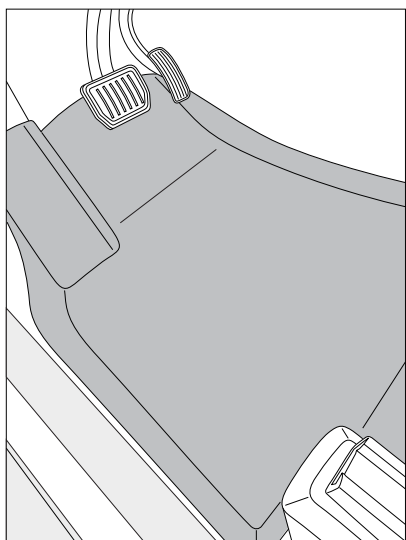

Without the Retaining Hook

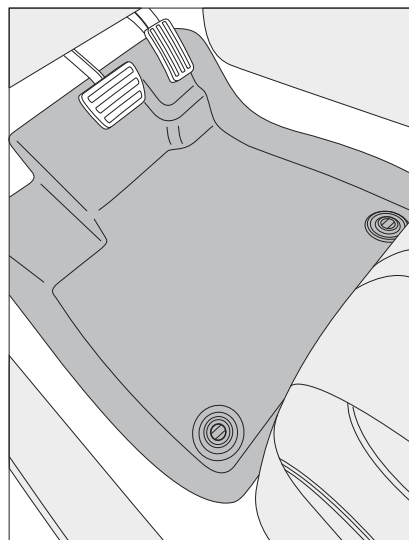

With the Retaining Hook

Before Installation:

1. After take the floor mats out of the package, lay the floor mats on a flat surface to restore resilience.



If necessary, fold the floor mats in the opposite direction to restore resilience.
2. Recheck fitment details before installation.

Including but not limited to:
Model/Model Year/Trim Level/Cab Style/
Seat Type/Transmission Type/Floor Type
3. Verify the directions of each floor mat refer to our listing images.
4. Remove factory or other floor mats.
5. Clean the carpet from dust and debris.

4. With the engine stopped and the parking brake set, fully depress the pedals to make sure there is no interference with the floor mat.

If the pedals have interference with the floor mat, please remove the floor mats and contact us.
5. Repeat steps 2 thus 3 to install the front passenger side floor mat.
6. Adjust front seats to the front end when installing the second row floor mat(s) .
7. For pickup trucks fold up the second row seats. For SUVs and MPVs adjust the second row seats to the rear end.
8. Take the second row floor mat(s) and fully install to the second row floor.

Please refer to our listing images to verify the upside and the downside.

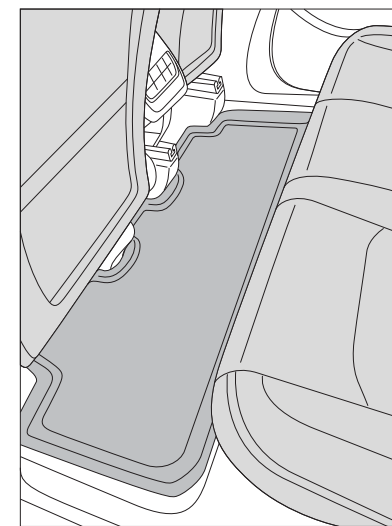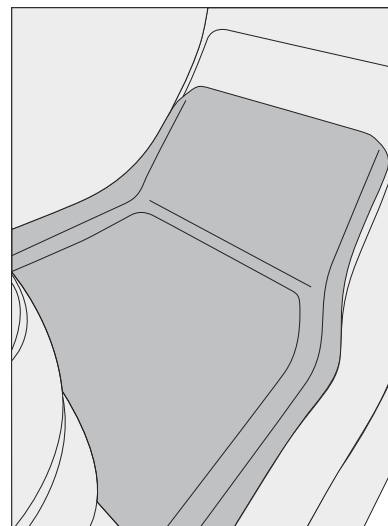

9. Repeat steps 6 thus 8 to install the third row floor mat(s) if equipped.
10. Adjust all the seats back to original positions.

Clean:

1. Periodic cleaning extends service life of your floor mats.
2. Remove the floor mats from vehicle and shake off loosen debris and dust.
3. Clean the floor mats using neutral cleaner and a soft cloth.
4. Lay the floor mats flat to dry.
5. Reinstall the floor mats.

NOTICE:

1. Keep this instruction with the vehicle's owner manual.
2. Please inform the following safety information to all drivers of this vehicle.
3. When selling the vehicle with floor mat, please inform the next owner.

OPEN-BOX:

1. Lay the floor mats on a flat surface to restore resilience.
2. If necessary, fold the second row floor mat in the opposite direction to restore resilience.

RECHECK FITMENT DETAILS:

1. The YITAMOTOR floor mats are designed to fit specific vehicles.

Fitment details including but not limited to:

Make/Model/Year/Trim/Cab Style/Seat Type/Transmission Type/Floor Type/Country of Origin

2. Unfitted floor mats on the driver side may cause danger when driving.
3. Do not try to modify the unfitted floor mats, please contact us.

RETAINING HOOK:

1. If the retaining hooks are loosened, please contact your dealer to reinstall the retaining hooks.
2. Periodic check to make sure the retaining hook is secure and tight.
3. Some vehicles may not equipped retaining hook.

CLEAN:

1. Do not use a scrubbing brush to clean the floor mats.
2. Reinstall the floor mats after dry up.

WARNING:

1. Always use floor mats that are designed to fit your vehicle.
2. Pedals interference can cause loss of vehicle control and increase the risk of serious injury.
3. Always make sure that the floor mats are properly secured to the retaining hooks in the carpet, if your vehicle is equipped with retaining hooks.
4. Do not use two or more floor mats on top of each other.
5. Always properly reinstall and secure floor mats that have been removed for cleaning or replacement.
6. Failure to properly follow floor mat installation or attachment instructions can potentially cause interference with pedal operation causing a loss of vehicle control.
7. Keep your foot dry. Do not drive barefoot.
8. Do not leave loose objects in or near the driver side footwell.
9. Always use the floor mat with the correct side up. Do not turn it over.