

# For Trucks with Utility Rail:

Part List				
	4.5ft-5ft	5.5ft-6.8ft	8ft	
①	X1			Cover Roll Assembly
②	X2		X4	Side Rail
③	X4	X6	X8	Mounting Clamp Set
④	X6		X8	Clamp Foam Pad
⑤	X1			Seal Strip
⑥	X1			4mm Hex Drive
⑦	X1			LED Light
⑧	X2			Replacement Bolt

## ⚠ Warning:


- 1. The tonneau cover must be completely secured in the closed position or opened position while driving. DO NOT DRIVE with cover in partially opened position.
- 2. Clean the debris before rolling up the tonneau cover.
- 3. Professional installation would be highly recommended.
- 4. Period check to ensure all clamps remain secure and tight.
- 5. Remove the tonneau cover before towing the truck from rear.
- 6. Make sure the locking clip on both sides are completely inserted into the side rails to avoid the end of the cover becoming unlatched.
- 7. To reduce noise and jittering, please install weather stripping along the front of the bed and tighten the clamps strongly to make sure there is no gap between the cover and truck.
- 8. The tonneau cover needs to be removed in extreme weather, such as typhoon, hurricane, heavy rain and hail.

## Step 1:

- 1. Clean the bulkhead and bedrail before installation.
- 2. For Tacoma truck stick the seal sticker on the bulkhead bar.
- 3. Stick the seal strip onto the bulkhead.




## Step 2:

- 1. Place the cover roll assembly on the front truck bed rail against the cab.
- 2. Loosen the screw on mounting tab and slide into side rail.
- 3. Re-install the screw to attach the side rail to cover roll assembly.

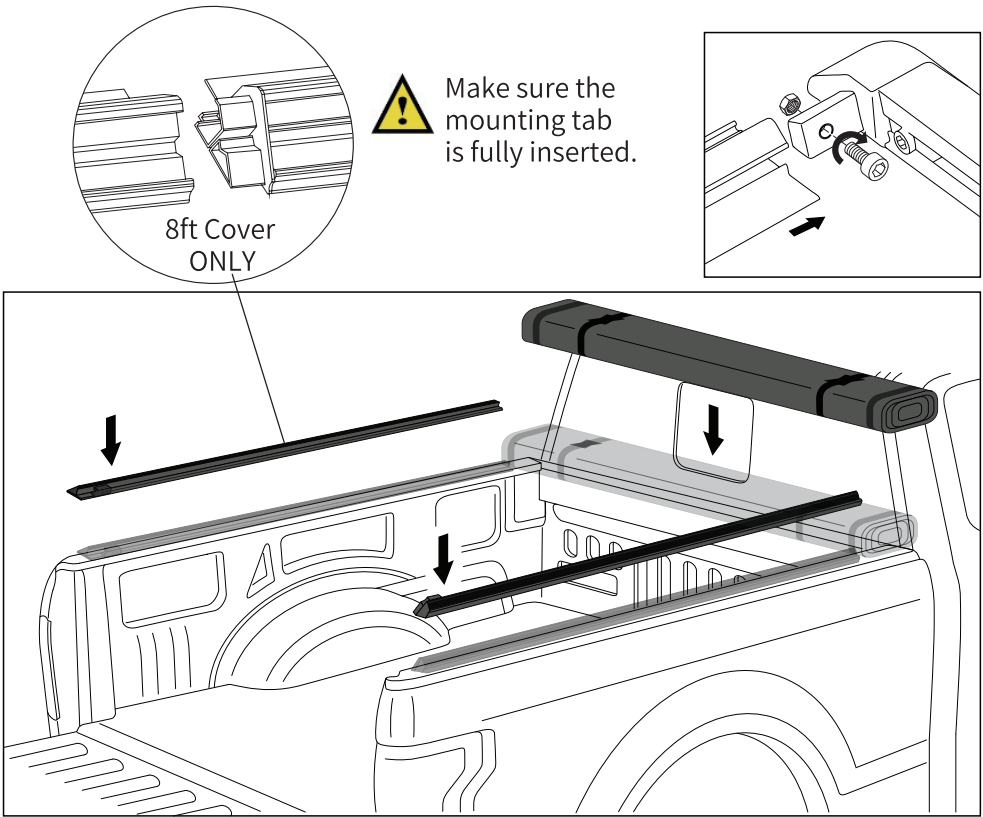


### Step 3:

1. Insert the clamps to the side rail and truck utility rails.
  2. Stick clamp foam pad onto bed rail for painting protection.
- A: Short Bed      B: Standard Bed      C: Long Bed

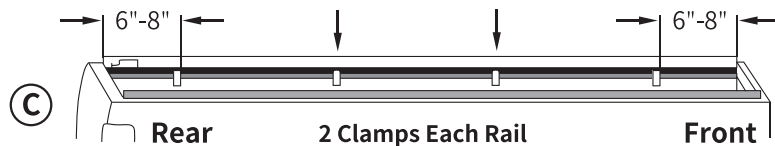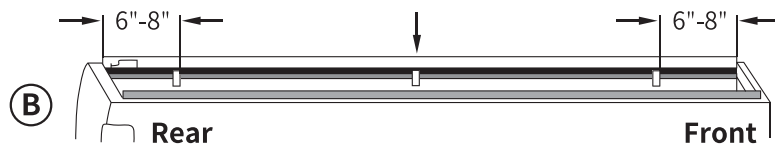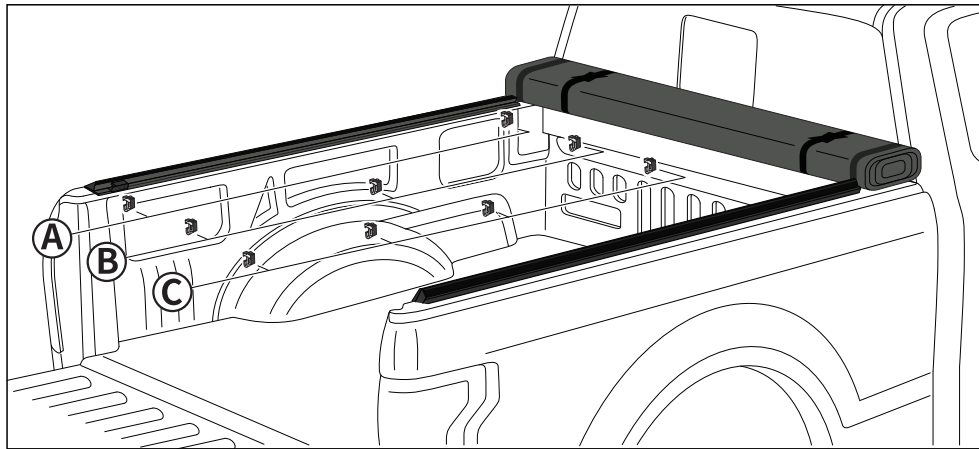


### Step 4:


1. Tighten the clamps after whole cover assembly in place.  
Hand tight ONLY, do not use power tools.

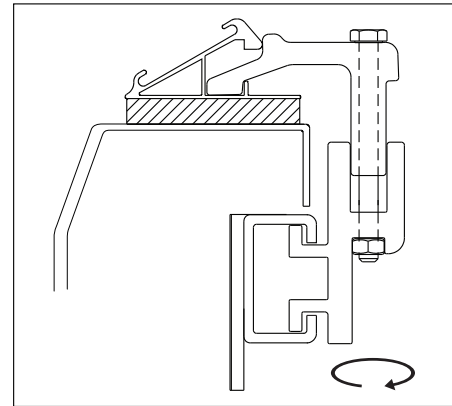


With Utility Rail

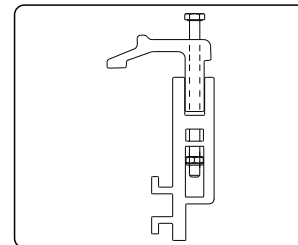

For Nissan Frontier

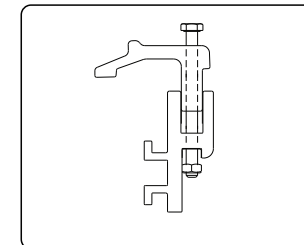

For Nissan Titan

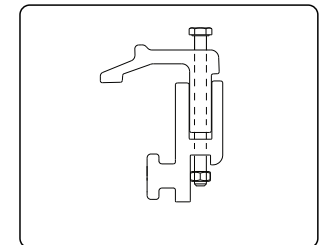




For Toyota/Jeep


### Step 5:

1. Unlock the safety straps.
2. Roll the cover over the side rails.

Note:

Do NOT offset the cover off the side rails.

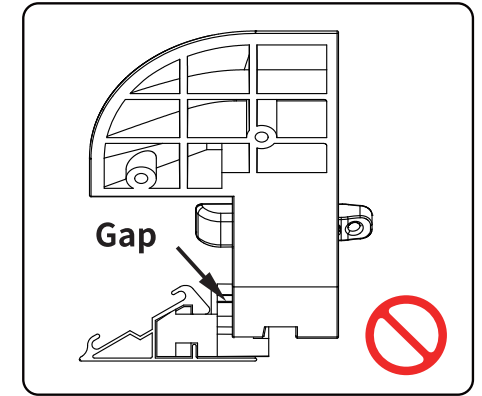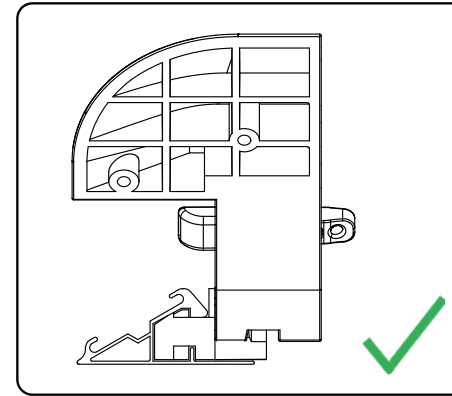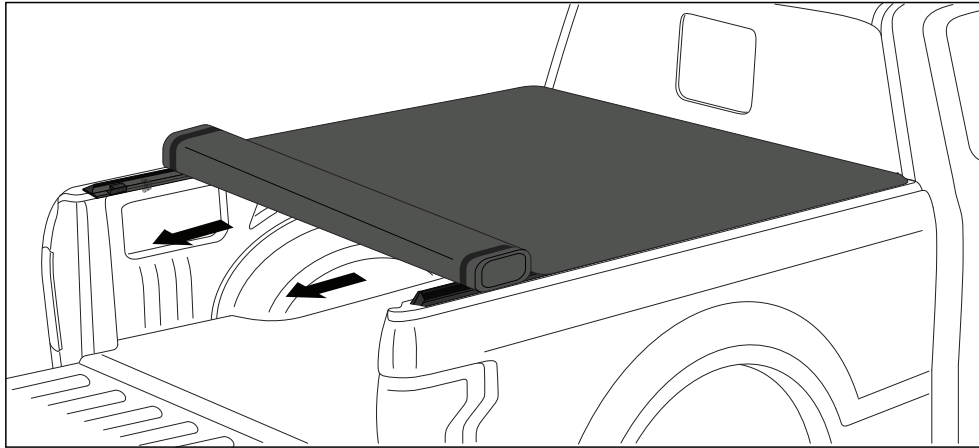


 Make sure the locking clip on both sides are completely inserted into the side rails to avoid end of the cover becoming unlatched.

## Step 6:


1. Push down the end of cover to close.

Note:  
Latch the cover with tailgate open.

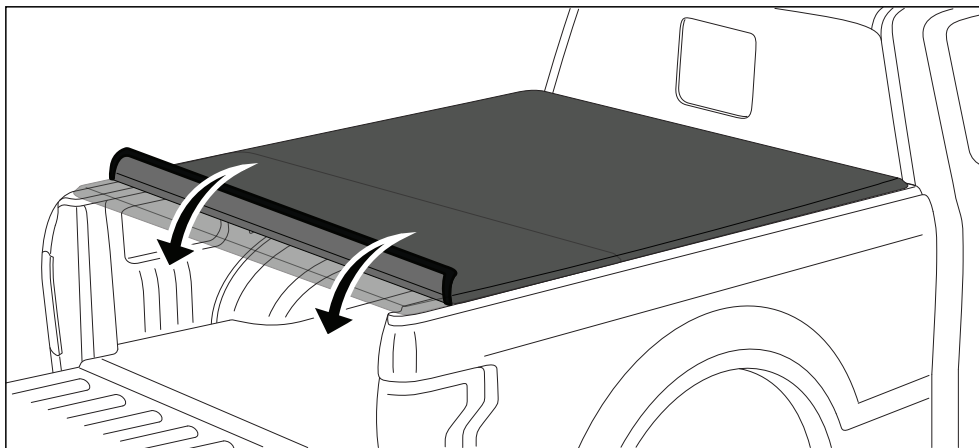


## Step 7:

1. Press along the edge to secure the Velcro tape.

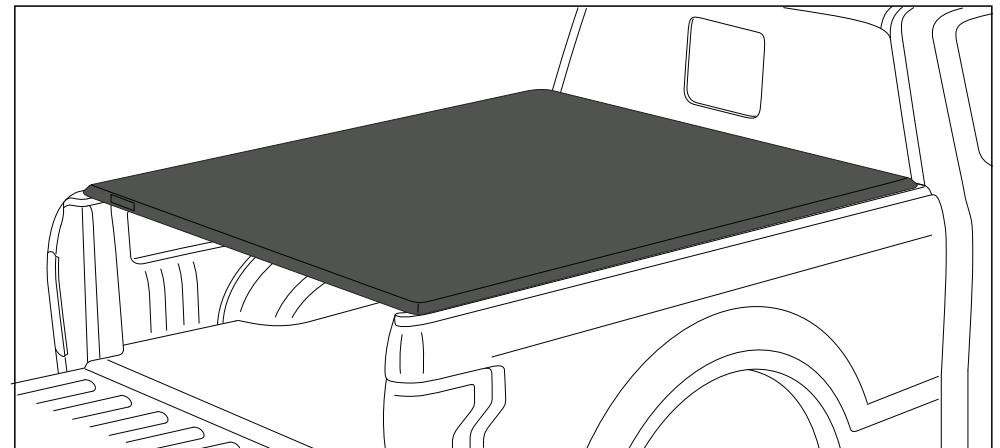


## Step 8:


1. Clean the snow and any debris before roll up the cover.
2. Pull the cable to unlatch the cover.
3. Carefully roll up the cover. Do not off-set the cover off the side rail.
3. Secure the cover roll with safty straps.

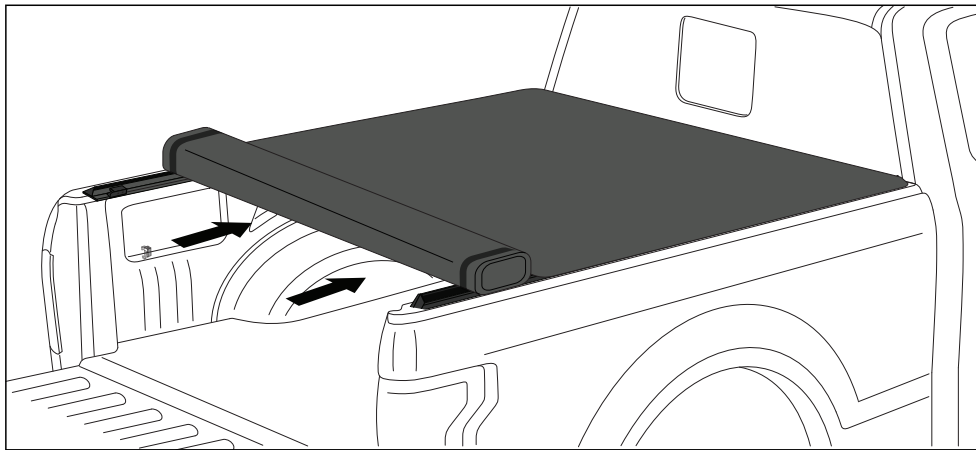


## Sealing Instruction for Tacoma Trucks:

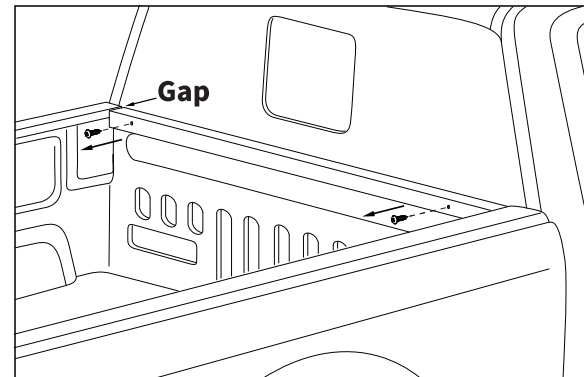

1. Remove (2) screws securing the bulkhead bar.

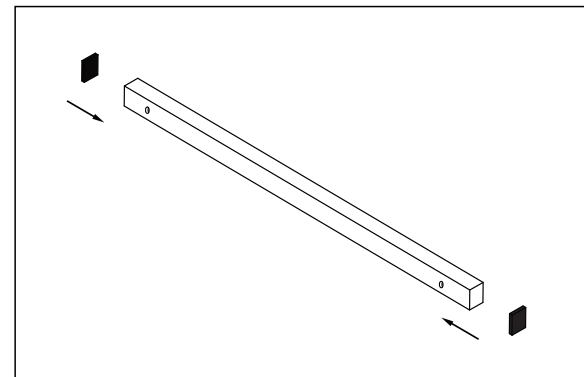

2. Stick the seal pads on both ends of bar.

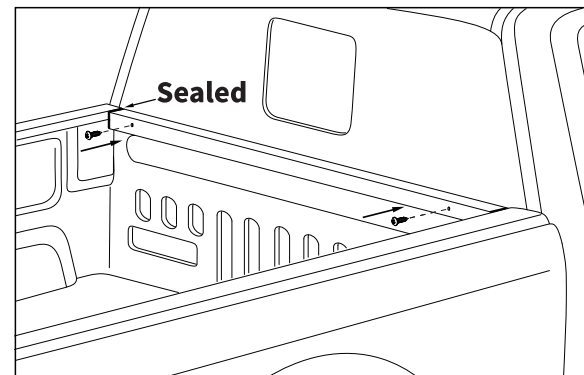


3. Install the bulkhead bar back to truck.

## Maintain and Repair

### Tension Adjustment:



The cover assembly has been set a moderate tension to keep the cover tight and wrinkles free.

If you wish to adjust the tension, simply loosen the socket head bolt on the tension plate and slide the plate.


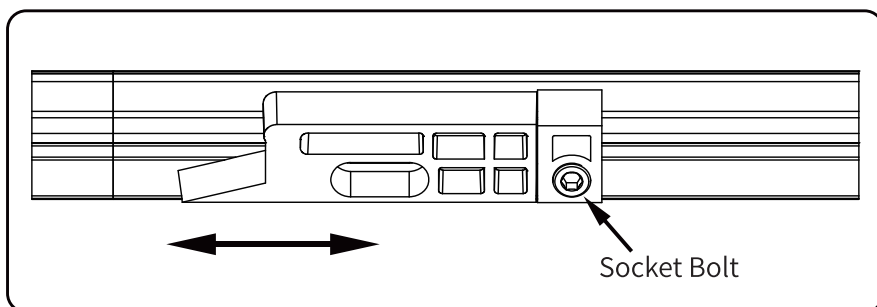


### If Cover Doesn't Stay In Latched:

1. Make sure the locking clip is fully inserted. Check both sides.

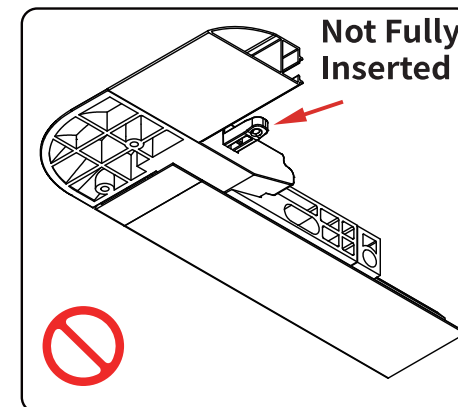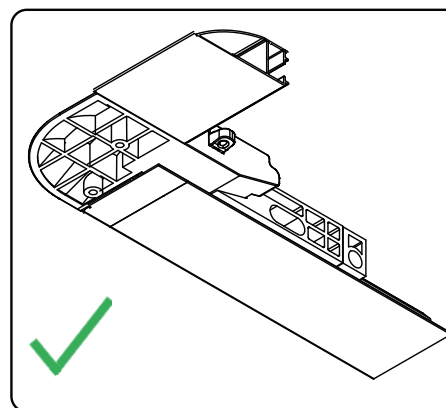

2. Adjust the tension control unit towards the tailgate at both side.

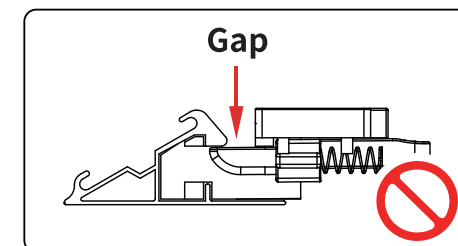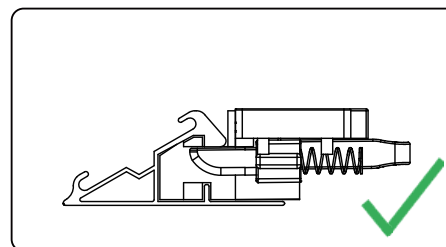

3. If the locking clip still not fully inserted, loosen mounting clamps and adjust side rails close to cover rear latch end.

4. Re-tighten mounting clamps after the cover latched.