

Pure & Easy



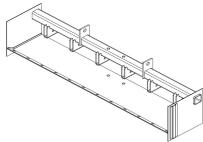

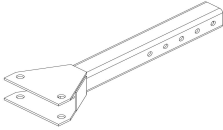
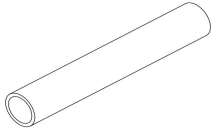
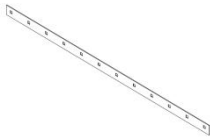
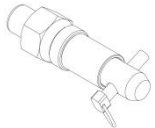




ASSEMBLY INSTRUCTIONS

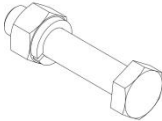





"IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY"

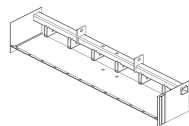



1. Gather and organize all required parts prior to assembly.

2. Assemble on a flat, clean and soft surface.

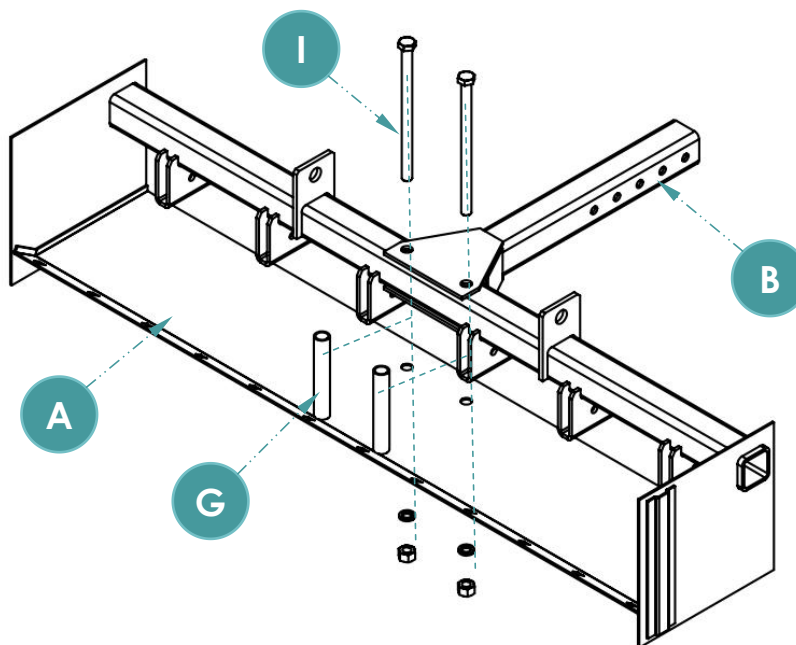
Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
A		x1	F		x6
B		x1	G		x2
C		x1	H	 M22-Φ22x192	x2
D		x2	I	 M16x250	x2
E		x6	J	 M12x100	x2

Item no.	Reference Image	Qty.
K	 M8x40	x6
L	 M8x25	x12
M	 $\varphi 11.5 \times 73$	x6
N	 $\Phi 19 \times 150$	x1

1

**A 1pcs****B 1pcs****G 2pcs****I 2pcs**

The first part is as shown in the figure below. After the part #2 is clamped into the part #1, the part #7 is clamped into the part #1, and the bolt of the part #8 is inserted into the corresponding hole and locked.



2



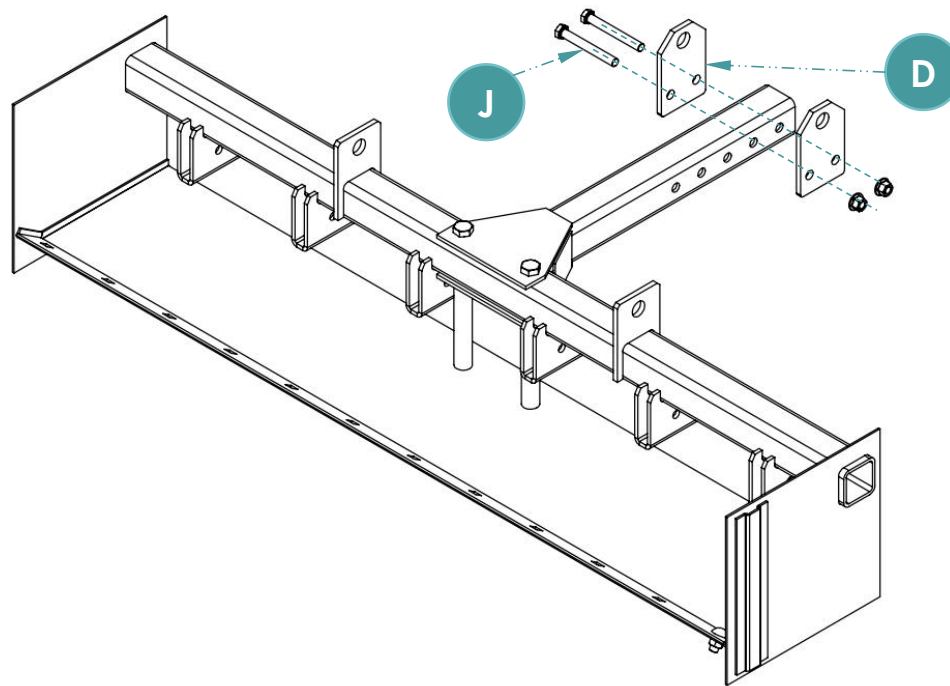
D

2pcs

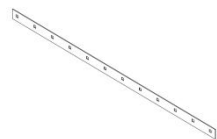


J

2pcs



3



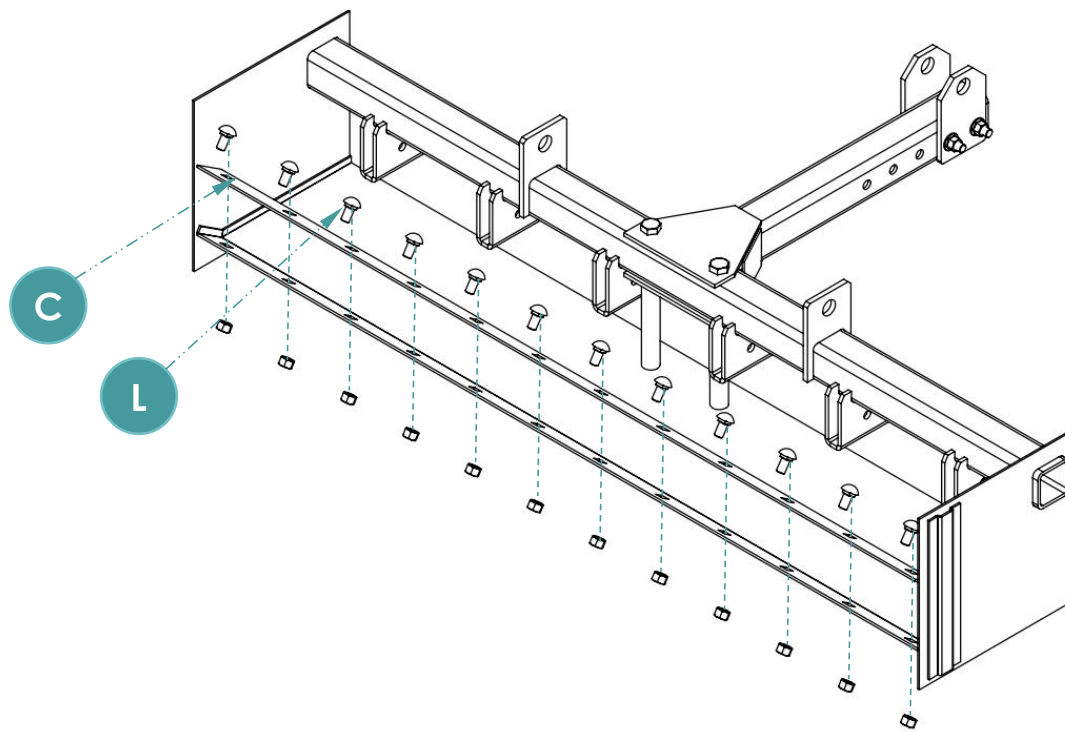
C

1pcs


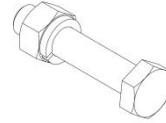
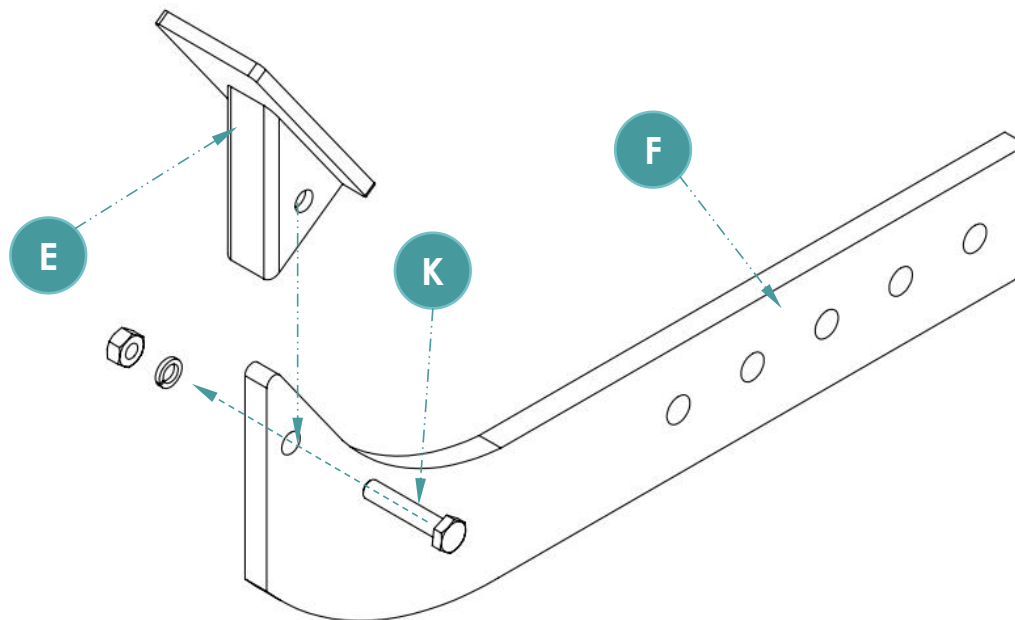


L


12pcs



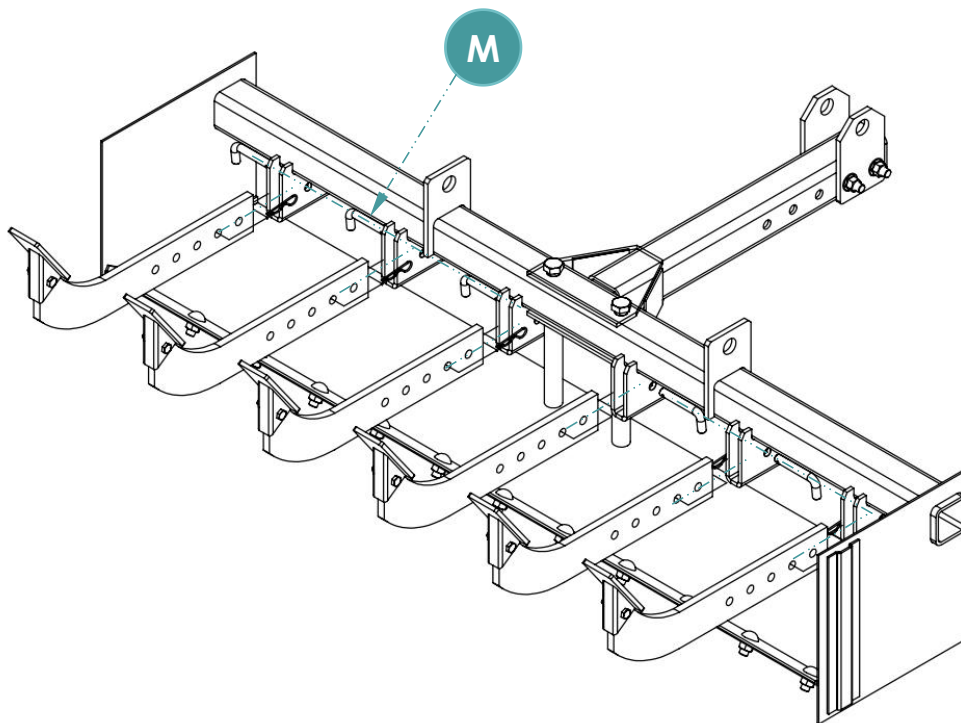
4

**E 6pcs****F 6pcs****K 6pcs**

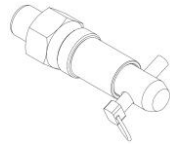
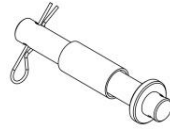
5



M 6pcs



6

**H 2pcs****N 1pcs**