

## BEFORE INSTALLATION

- Professional Installation would be highly recommended, please seek assistance at local automotive shop if you have any difficulties in installing.
- Safety comes first ! Do not start to work on any vehicle without protection.
- An assistant would be better assist you in the bumper disassembly work.
- Keep cautions to prevent being scratched when working on any parts from the body of the vehicle.
- Do not touch the bulbs or the wire assembly before they are cooled to avoid the burns.


## PRODUCT NUMBER

OEM Part Number: 33151-S84-A02, 33151-S84-A01, 33101-S84-A02, 33101-S84-A01






## STEP 1

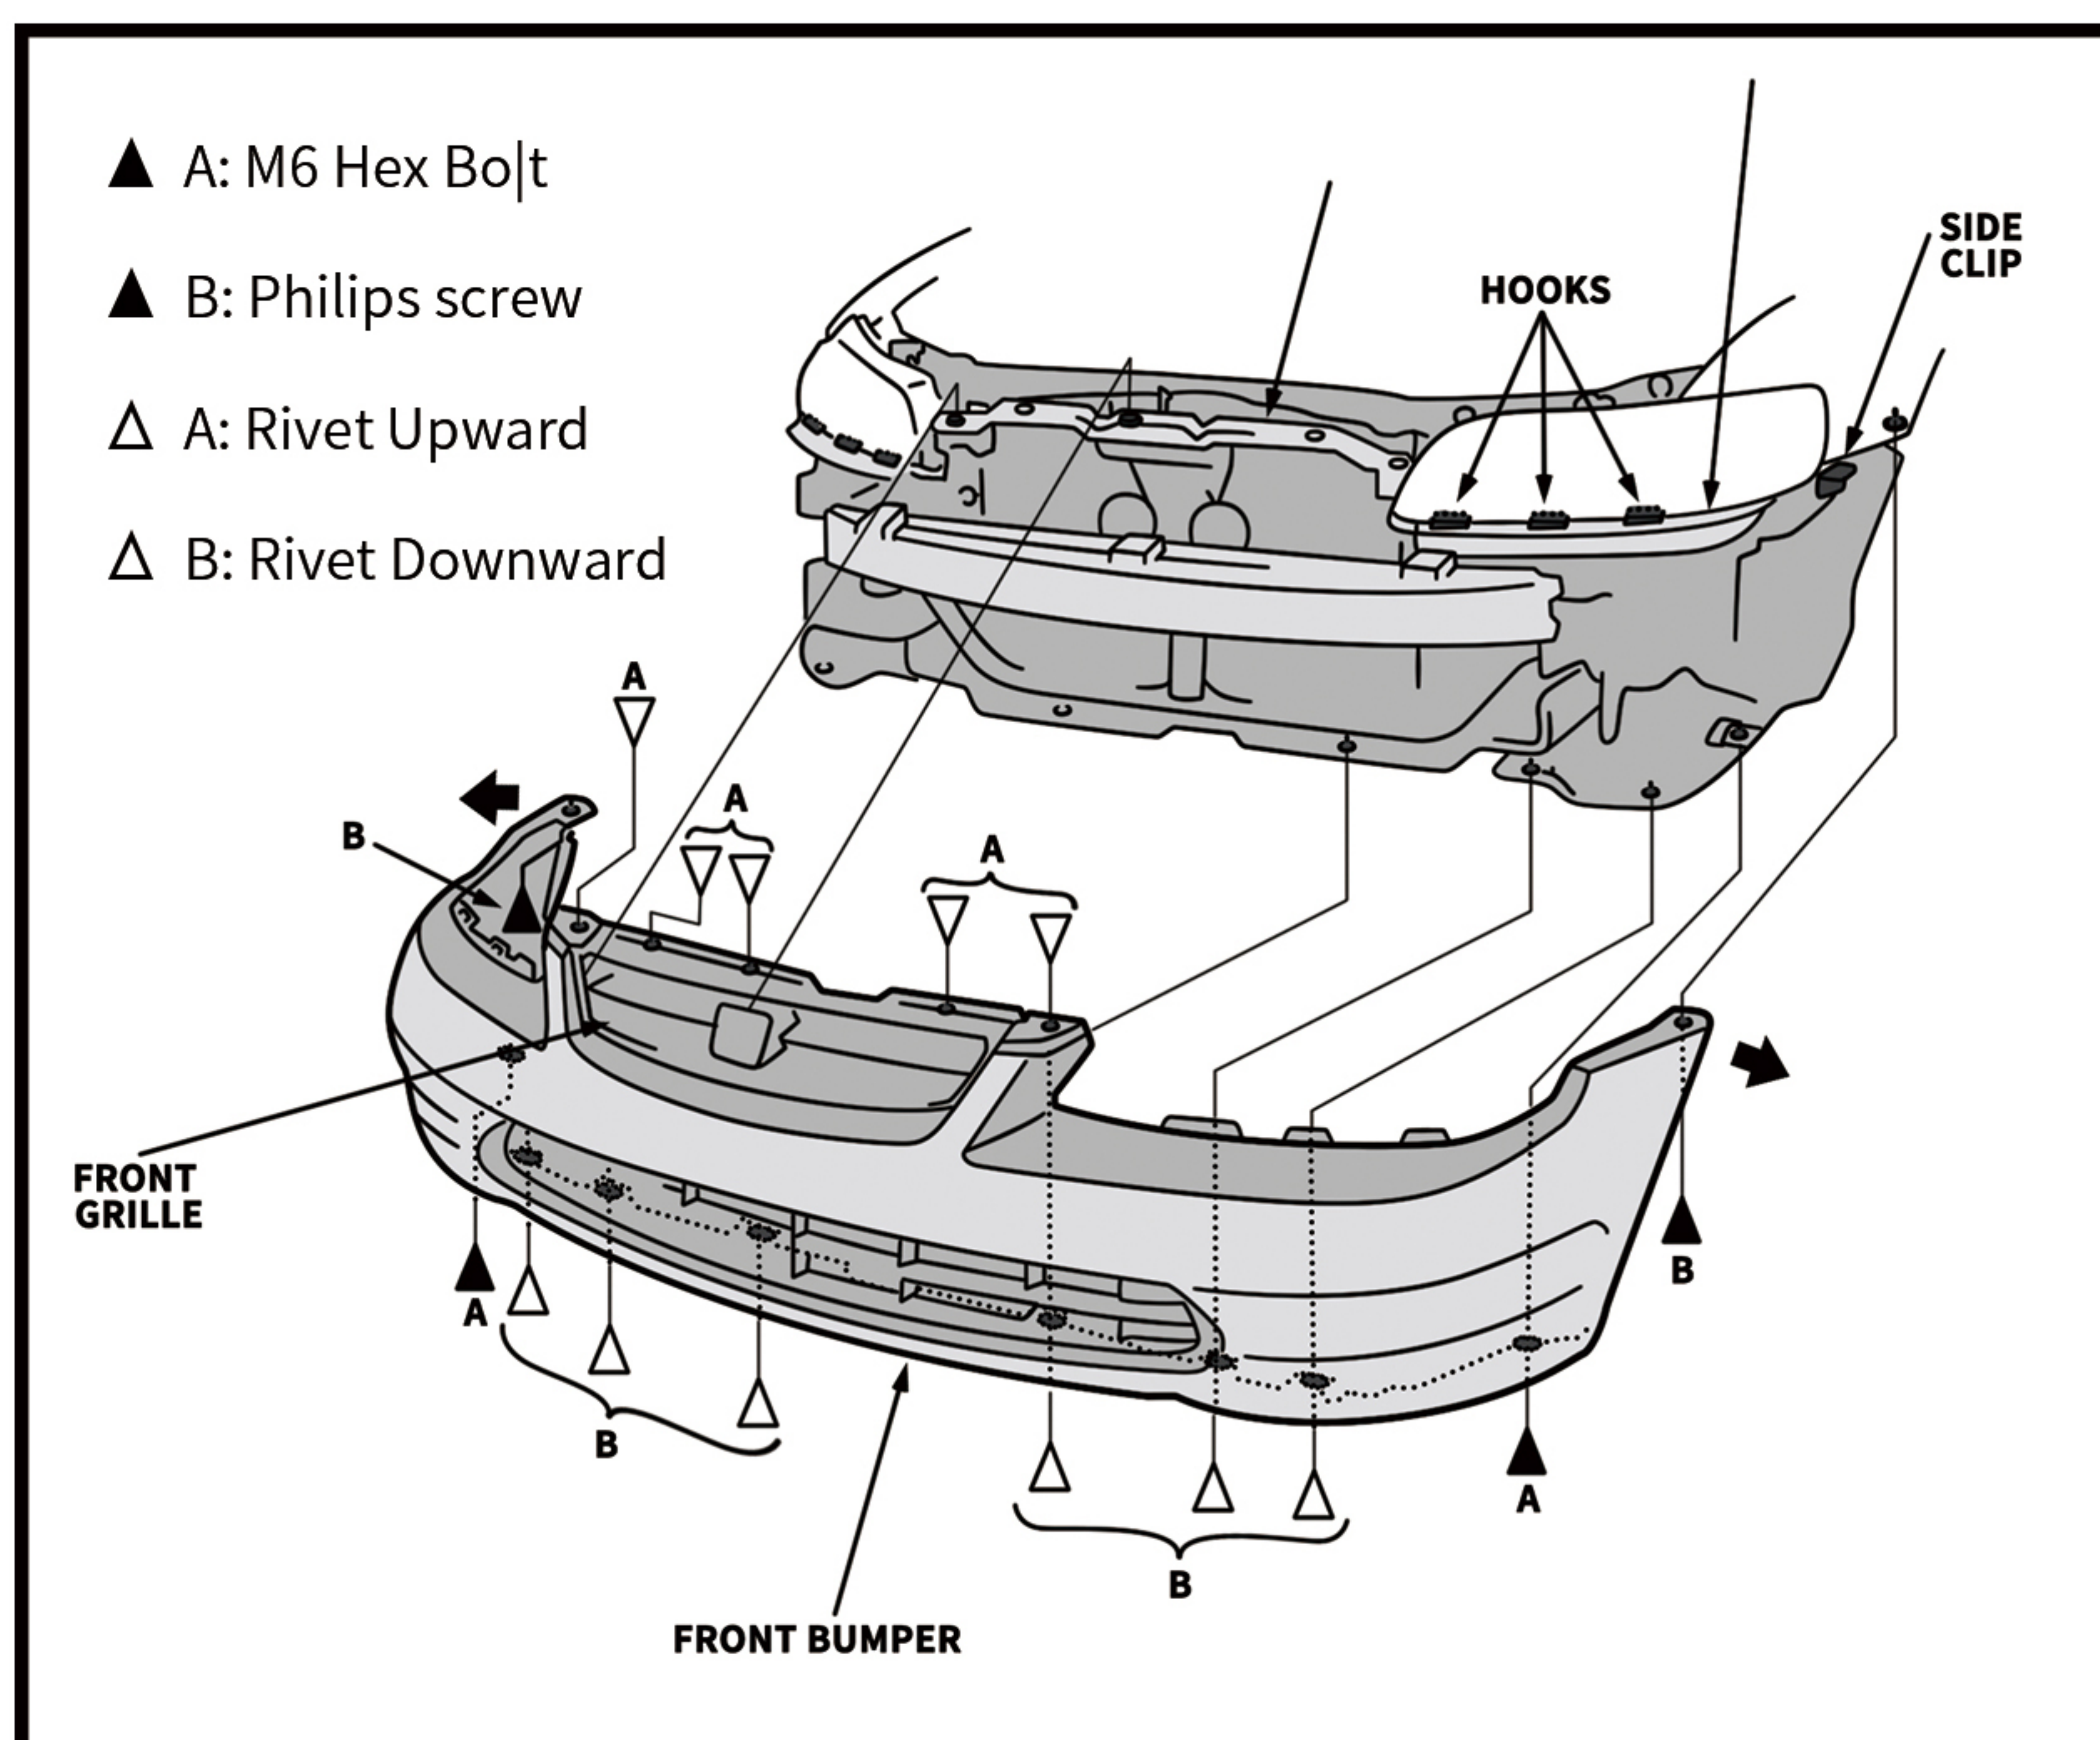

1. Open the hood.
2. Remove (5) rivets on the grille.
3. Remove Philips screws connect bumper cover to the fender panel.
4. Remove (2) M6 hex bolts under the bumper.
5. Remove (6) rivets under the bumper cover.
- Note: (4) rivets on 01-02 coupe.**
6. Disengage hooks and clips by pulling the bumper cover outside.
7. Remove the bumper cover.

## STEP 2

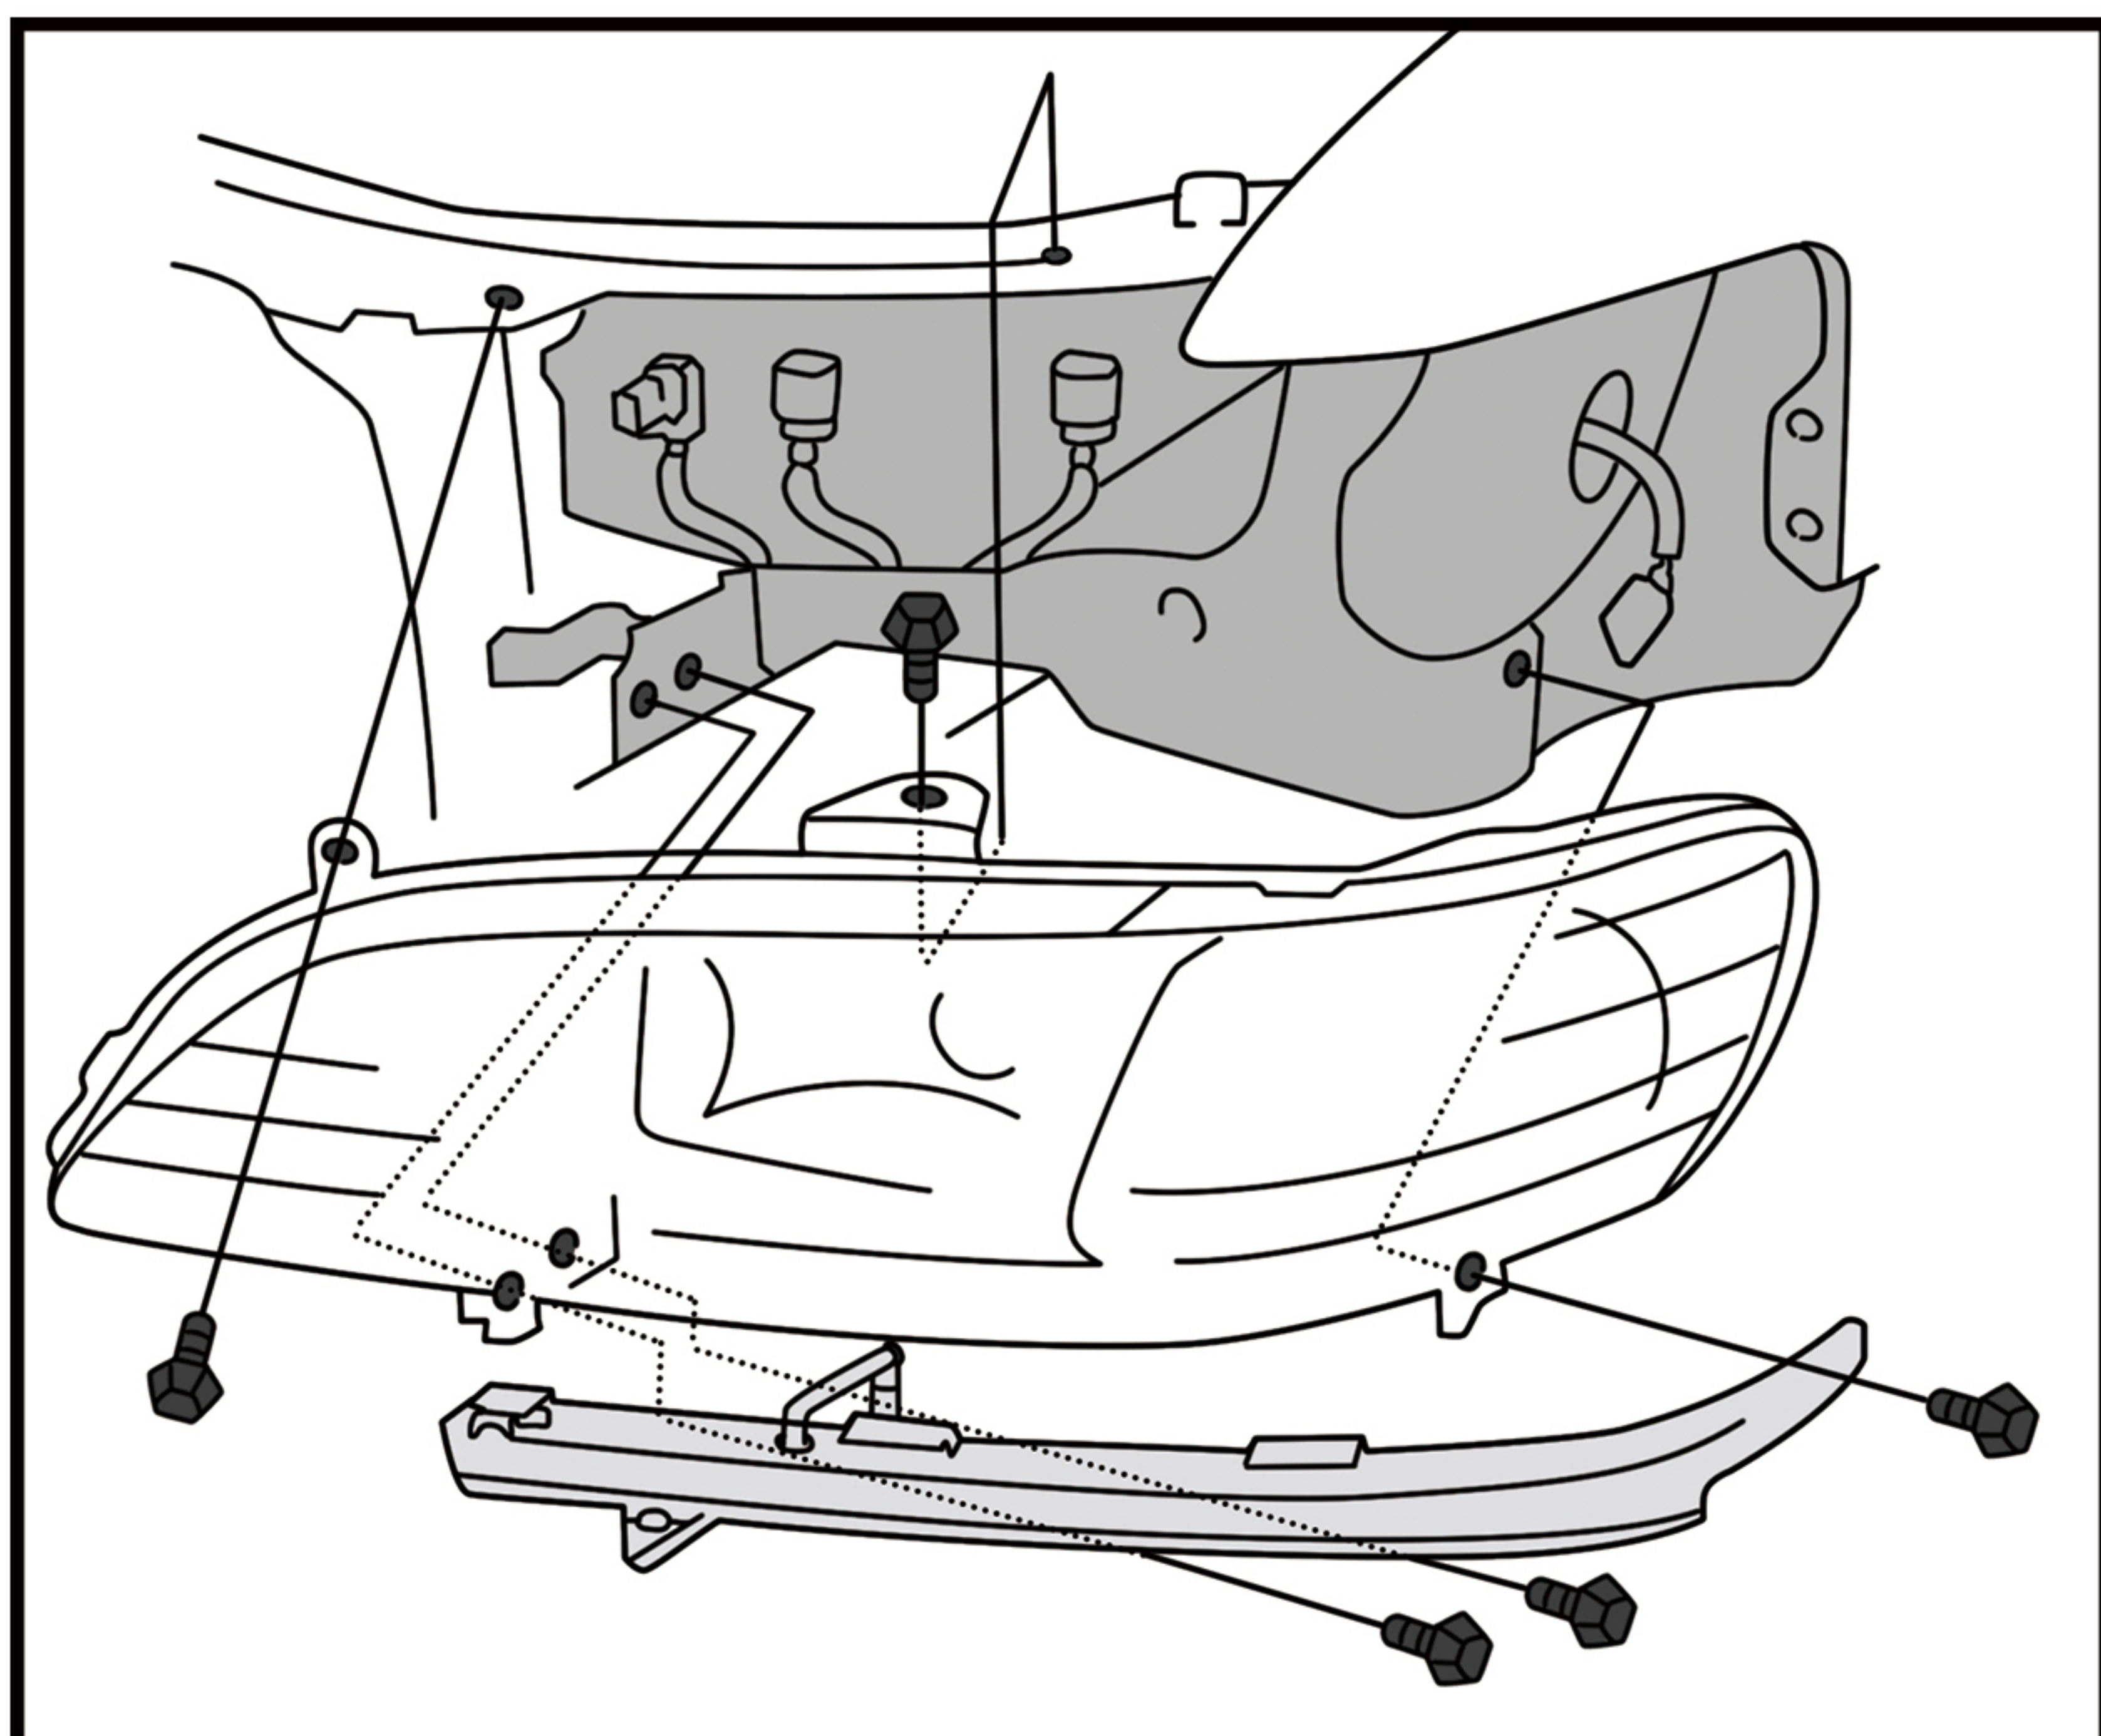


1. Remove (5) M6 hex bolts securing the headlamp in place.
2. Pull the headlamp forward and disconnect wire harness.
3. Detach the headlamp bracket from old the headlamp.
4. Twist light sockets counterclockwise and remove from the old headlamp.

## STEP 3

1. Insert light sockets into the new headlamp.
2. Twist sockets clockwise to secure them on the new headlamp.
3. Secure the headlamp bracket to the new headlamp, using (2) factory M6 hex bolts.




## STEP 4

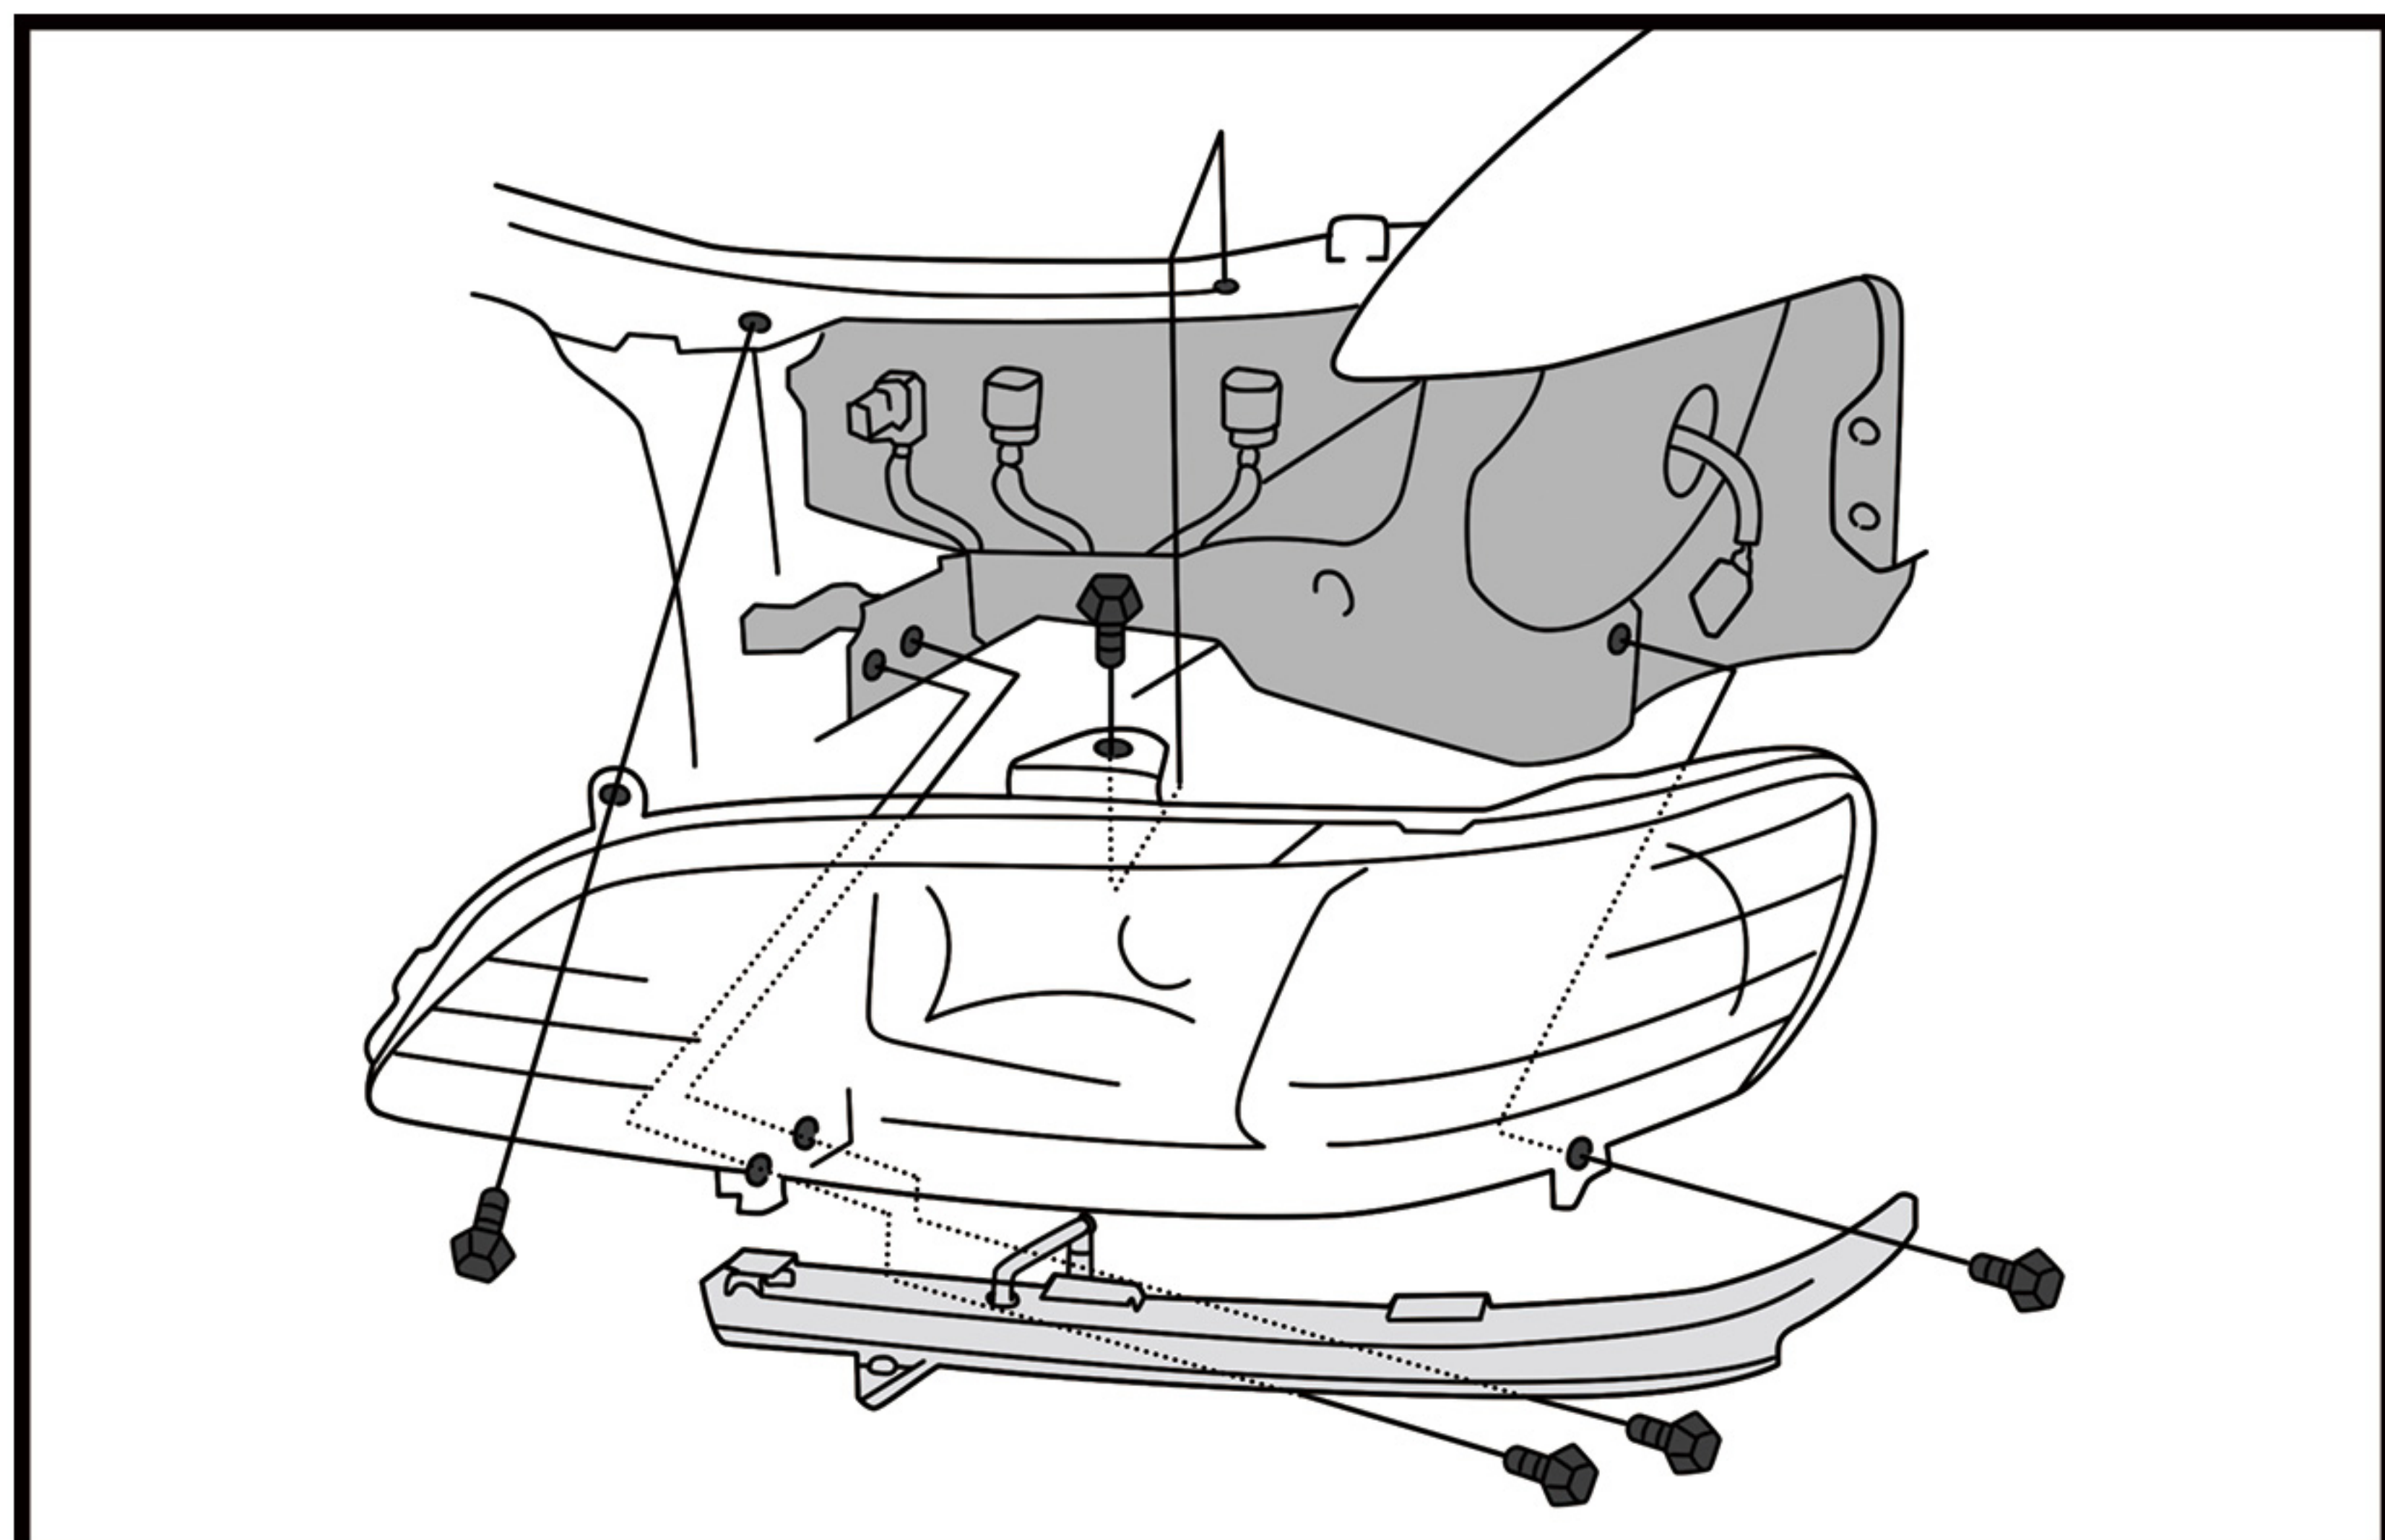

1. Place the headlamp on vehicle, connect wire harness.
2. Guiding the headlamp into mounting position.
3. Secure the headlamp to vehicle, using (3) M6 hex bolts.
4. Repeat step 2 to step 4 on the other side.

## STEP 5

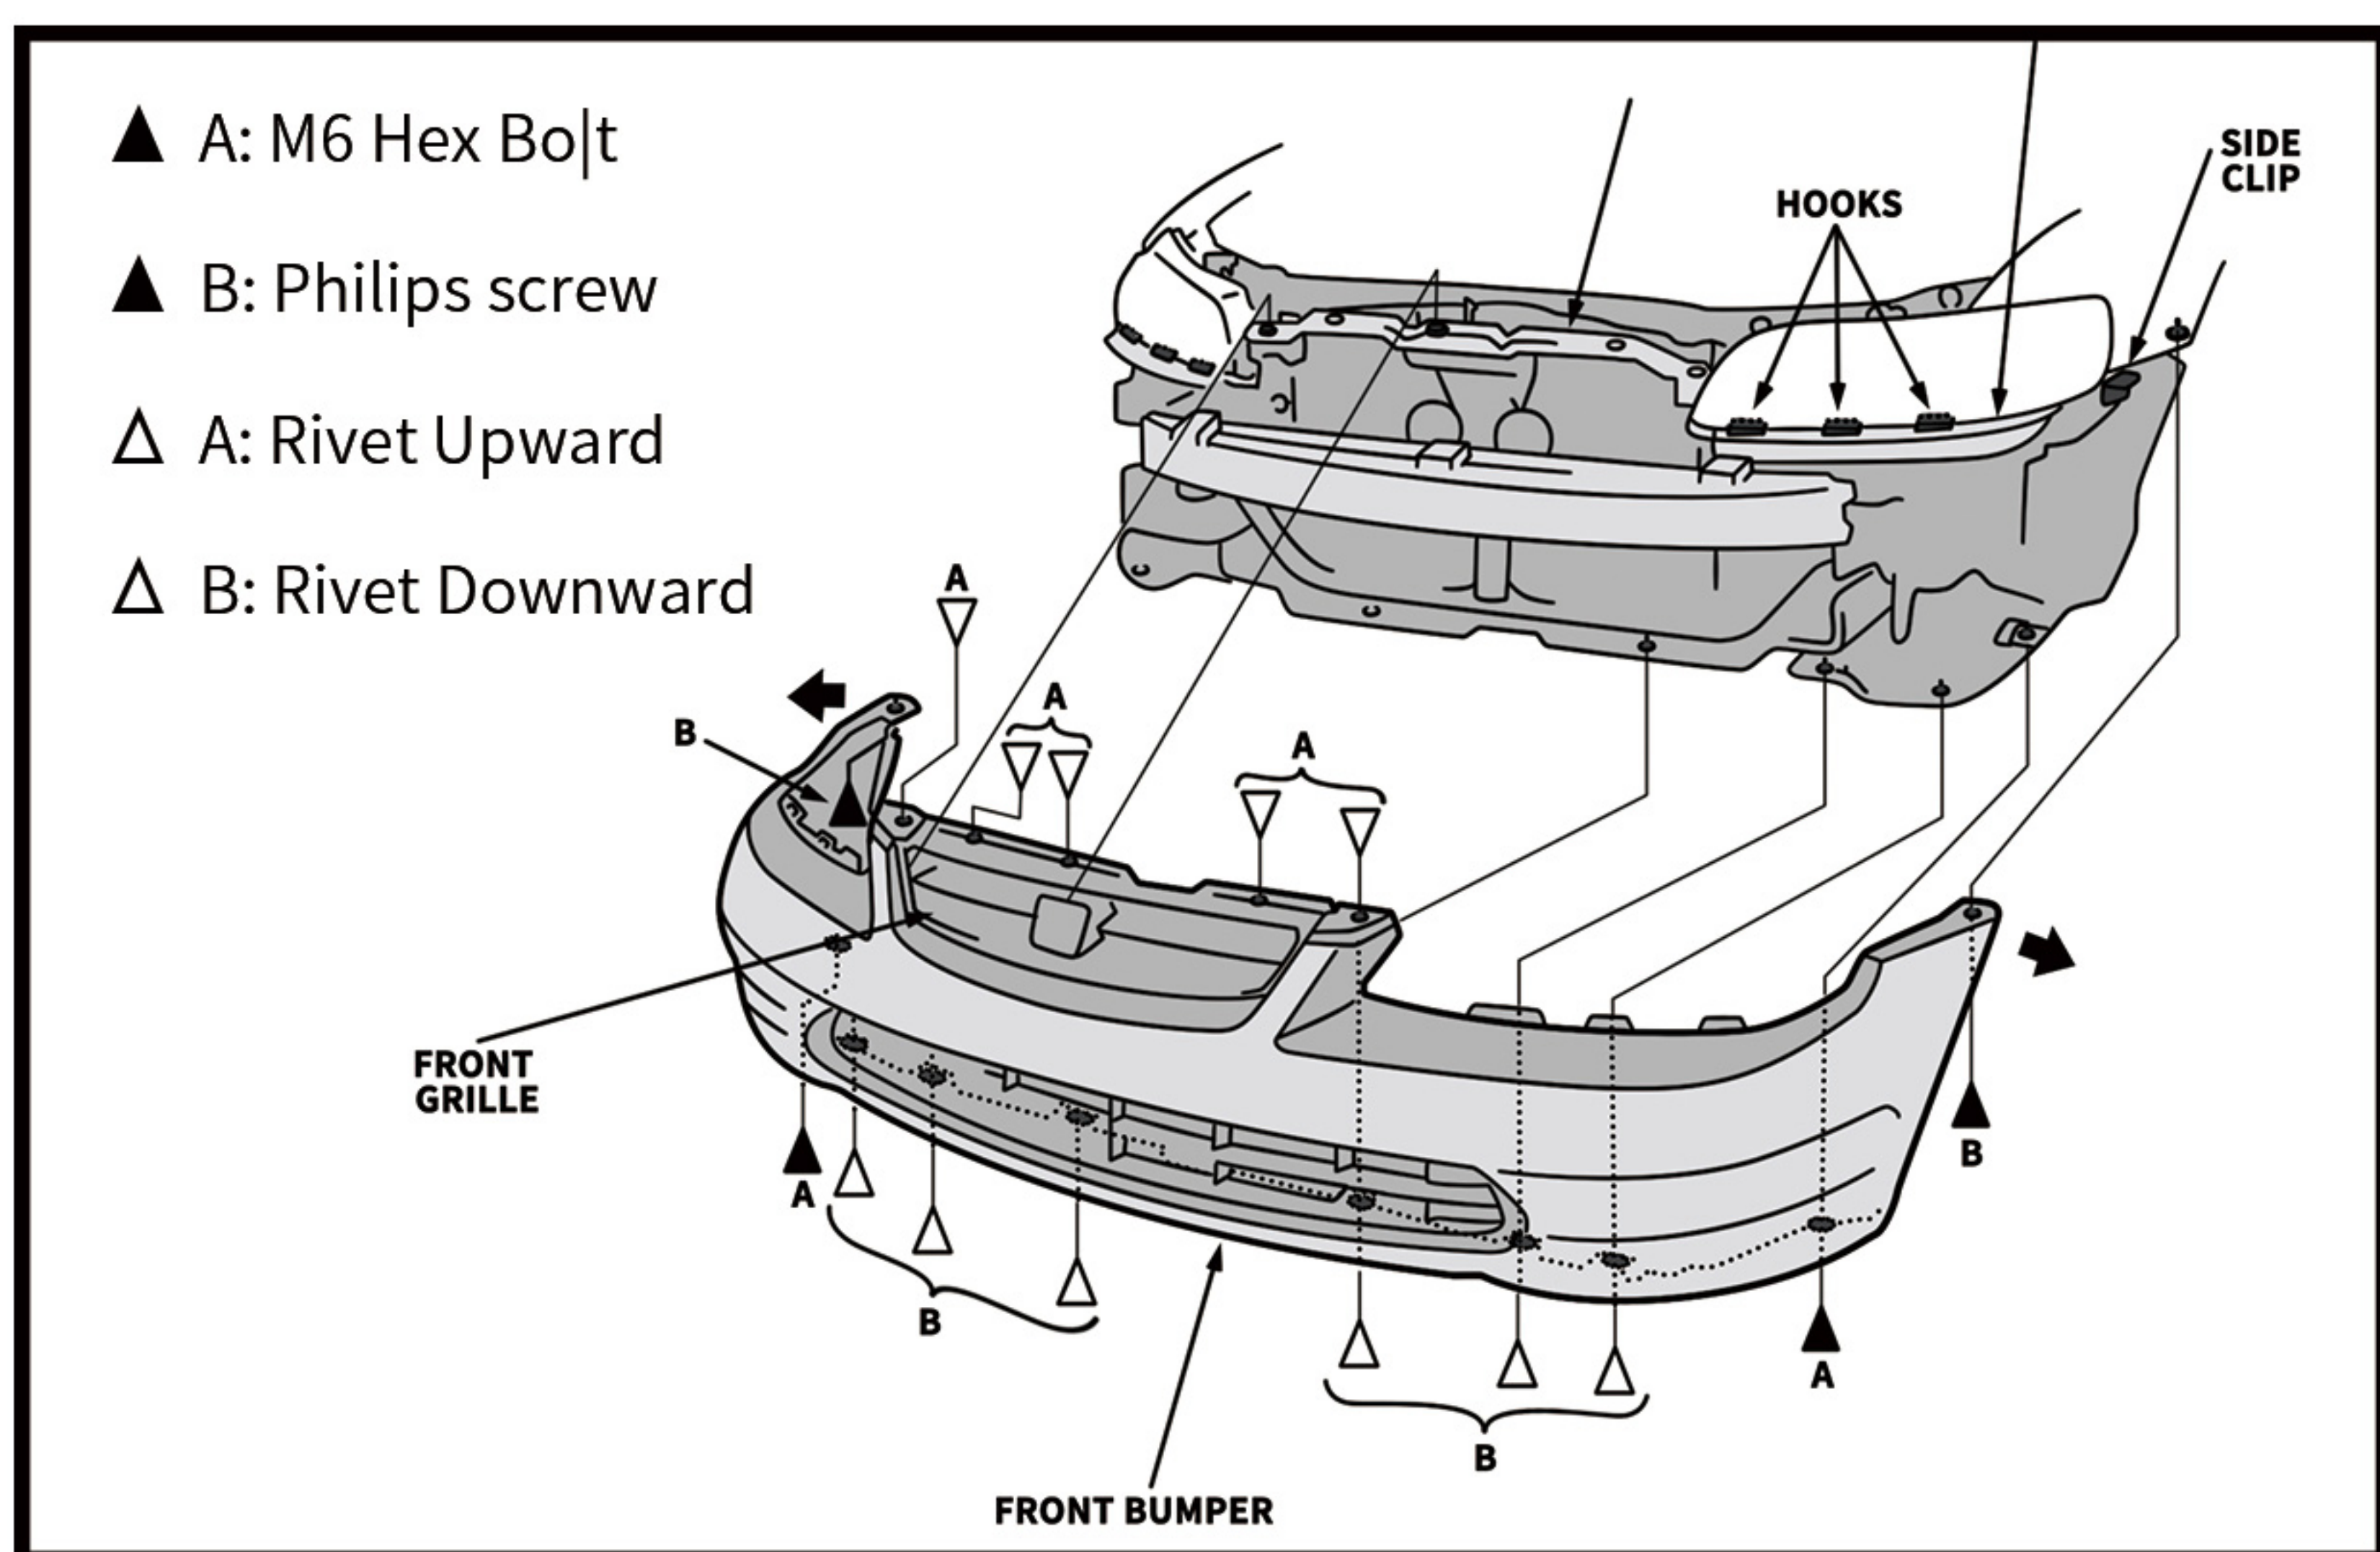

1. With assistance, lift and attach bumper cover on bumper reinforcement.
2. Pop on the hooks and clips behind bumper cover.
3. Install (6) rivets, (2) M6 hex bolts, (2) Philips screws under the bumper cover.
4. Install (5) rivets on the grille.

## WARM TIPS



Before you begin to adjust the light, make sure check the alignment of your lights first. Park the vehicle about 10 to 25 feet from the wall with the lights aimed at the wall. The centerlines of the headlights should not be any higher than 3.5 feet above the ground.

1. Find the adjustment screws.
2. Adjust the headlights individually.
3. Adjust the vertical field.
4. Test your results.