
Step 1:

- 1. Open the front door to remove the upper extension triangular trim panel.
- 2. Remove (3) rubber plug beside triangular trim panel.

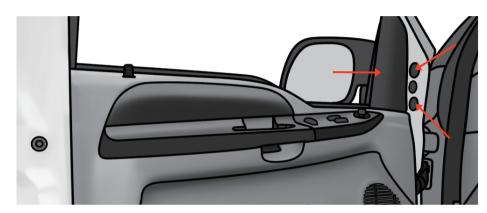

1999-2007 Models

2008-2016 Models



Notes

Read this instruction carefully before starting installation.

Proper tools will improve the quality of installation and reduce the time required.

All mirrors are asymmetrical design for better view range.

If missing parts or any damage found, please take a picture and contact us. Reference the vehicle owner's manual to adjust the new mirrors.

-1-

Step 2:

- 1. Remove (4) 11mm hex nuts.
- 2. Carefully remove factory mirror.

Step 3:

- 1. Take the new mirror, feed studs through the holes on door panel.
- 2. Install (4) provided hex nuts to secure the new mirror. Torque to 80 lb in.

Step 4:

- 1. Reinstall the triangular trim panel.
- 2. Reinstall (3) rubber plugs.

Step 5:

- 1. Repeat above steps on the passenger side.
- 2. Carefully check all mirrors functions before first drive.