Before You Begin

Read instructions thoroughly before installation.

Installation Order: Mount brackets, position step bars, then tighten all hardware.

Use proper tools to ensure a correct fit and save time.


Damaged or missing parts? Please take a photo and contact us for support.

Professional installation would be highly recommended.


Maintenance: Periodically check all hardware to ensure it remains secure and tight.

Step 1:

1. Locate (**3**) mounting positions each side.
2. Remove factory bolts or plugs from inner rocker panel.
3. Clean the sealant and dirt around mounting positions.



Driver Left Side → Front

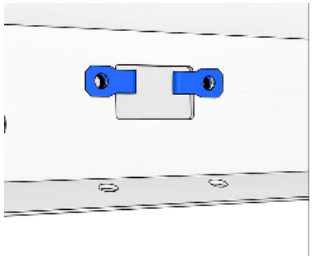



Insert M8 clip nut onto the large hole and over the smaller hole next to it, with threads inside of the inner rocker panel.


Step 2:

1.After installing the clip nuts, align the provided mounting bracket with theholes, then secure it using the M8 bolts, as shown in the diagram.

2. Repeat to install all brackets. Do not fully tighten.

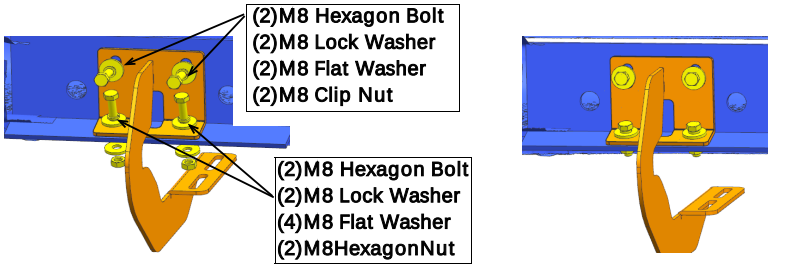

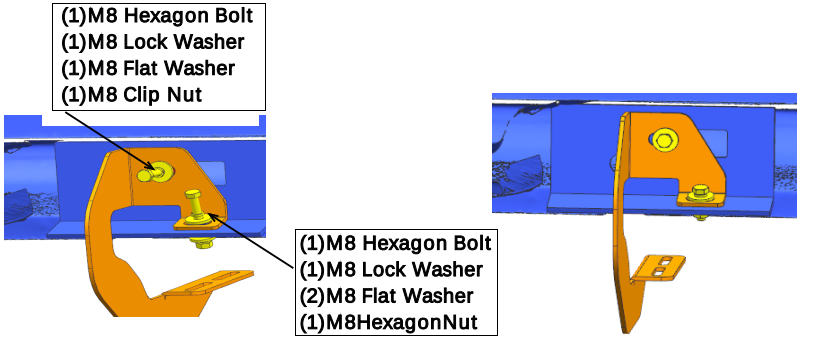


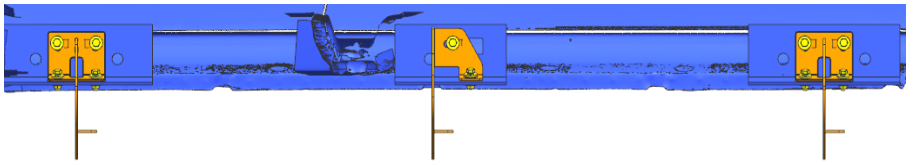


Driver Left Side → Front

Step 3:

1. Remove (**6**) M8 hex bolts, (**6**) M8 flat washers, (**6**) M8 lock washers.
2. Slide mounting tracks to proper positions.
3. With assistance, lift and attach the step bar to brackets.
   Secure the step bar on brackets with , (**6**) M8 hex bolts,
   (**6**) M8 flat washers, (**6**) M8 lock washers.
4. Repeat to install the other side step bar, do not fully tighten.

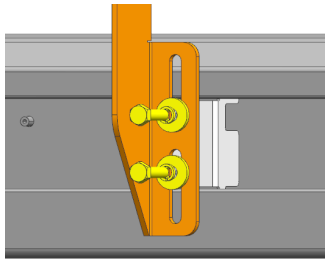

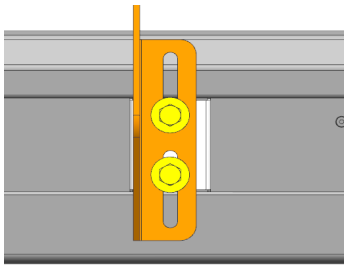



Step 4:

1. Tighten M8 hex nuts on vehicle with 15 ft-lbs. torque.
2. Adjust the step bar to level and tighten M8 hex bolts with 15 ft-lbs. torque.
3. After the step bar installed, periodic check to ensure all mounting hardware remains secure and tight.

Part List:

	Qty.	Description
①	X 2	Front/Rear Driver Left /side bracket
②	X 1	Center Driver Left side bracket
③	X 2	Front/Rear Passenger/Right sidebracket
④	X 1	Center PassengerRightside Bracket
⑤	X20	M8×25 Hexagon Bolt
⑥	X30	M8×24 Flat Washer
⑦	X20	M8 Lock Washer
⑧	X10	M8 Hexagon Nut
⑨	X10	M8 Clip Nut

