

BEFORE INSTALLATION


- Professional Installation would be highly recommended, please seek assistance at local automotive shop if you have any difficulties in installing.
- Safety comes first ! Do not start to work on any vehicle without protection.
- An assistant would be better assist you in the bumper disassembly work.
- Keep cautions to prevent being scratched when working on any parts from the body of the vehicle.
- Do not touch the bulbs or the wire assembly before they are cooled to avoid the burns.

PRODUCT NUMBER

OEM: 25970915, 25970910




STEP 1

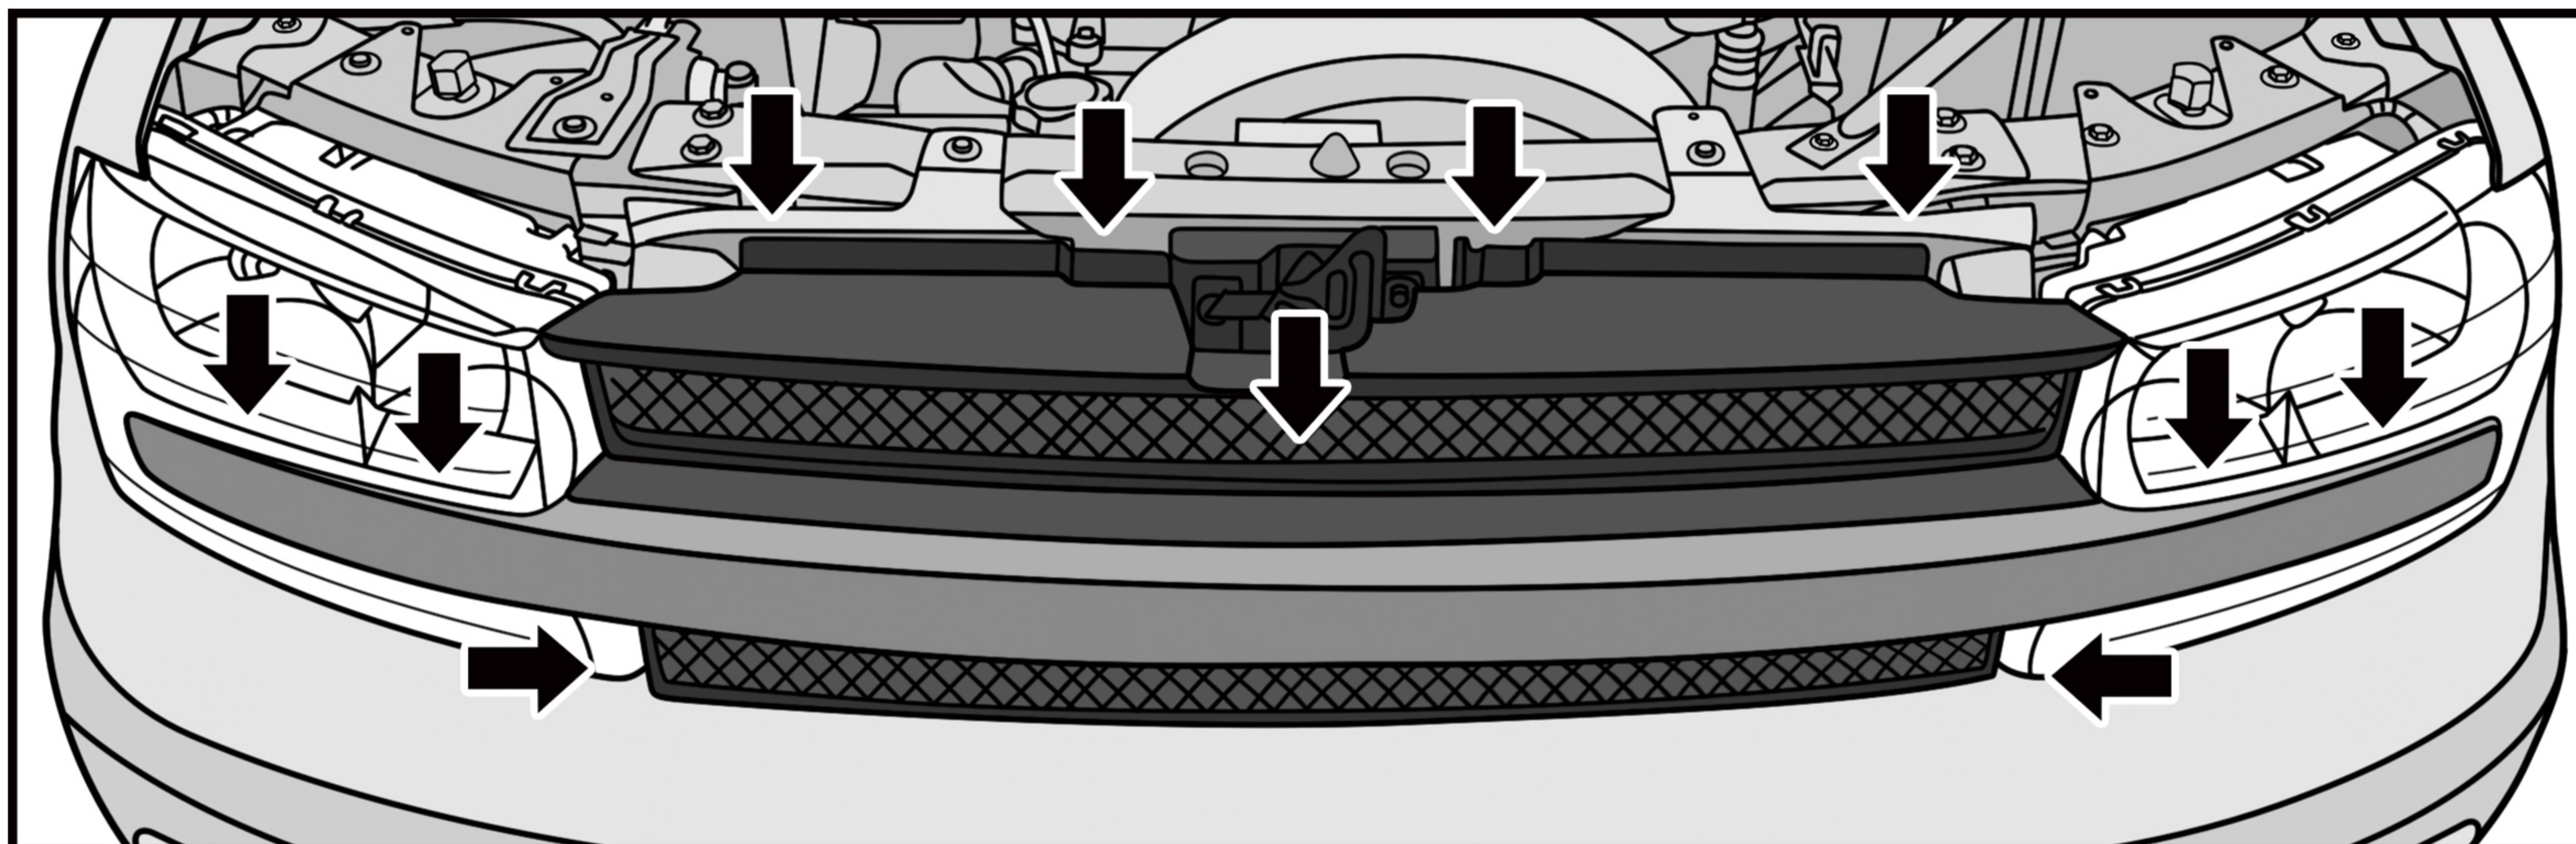

1. Open the hood.
2. Disengage (11) clips securing the radiator grille. Clip positions as shown.
3. Remove the radiator grille.

STEP 2

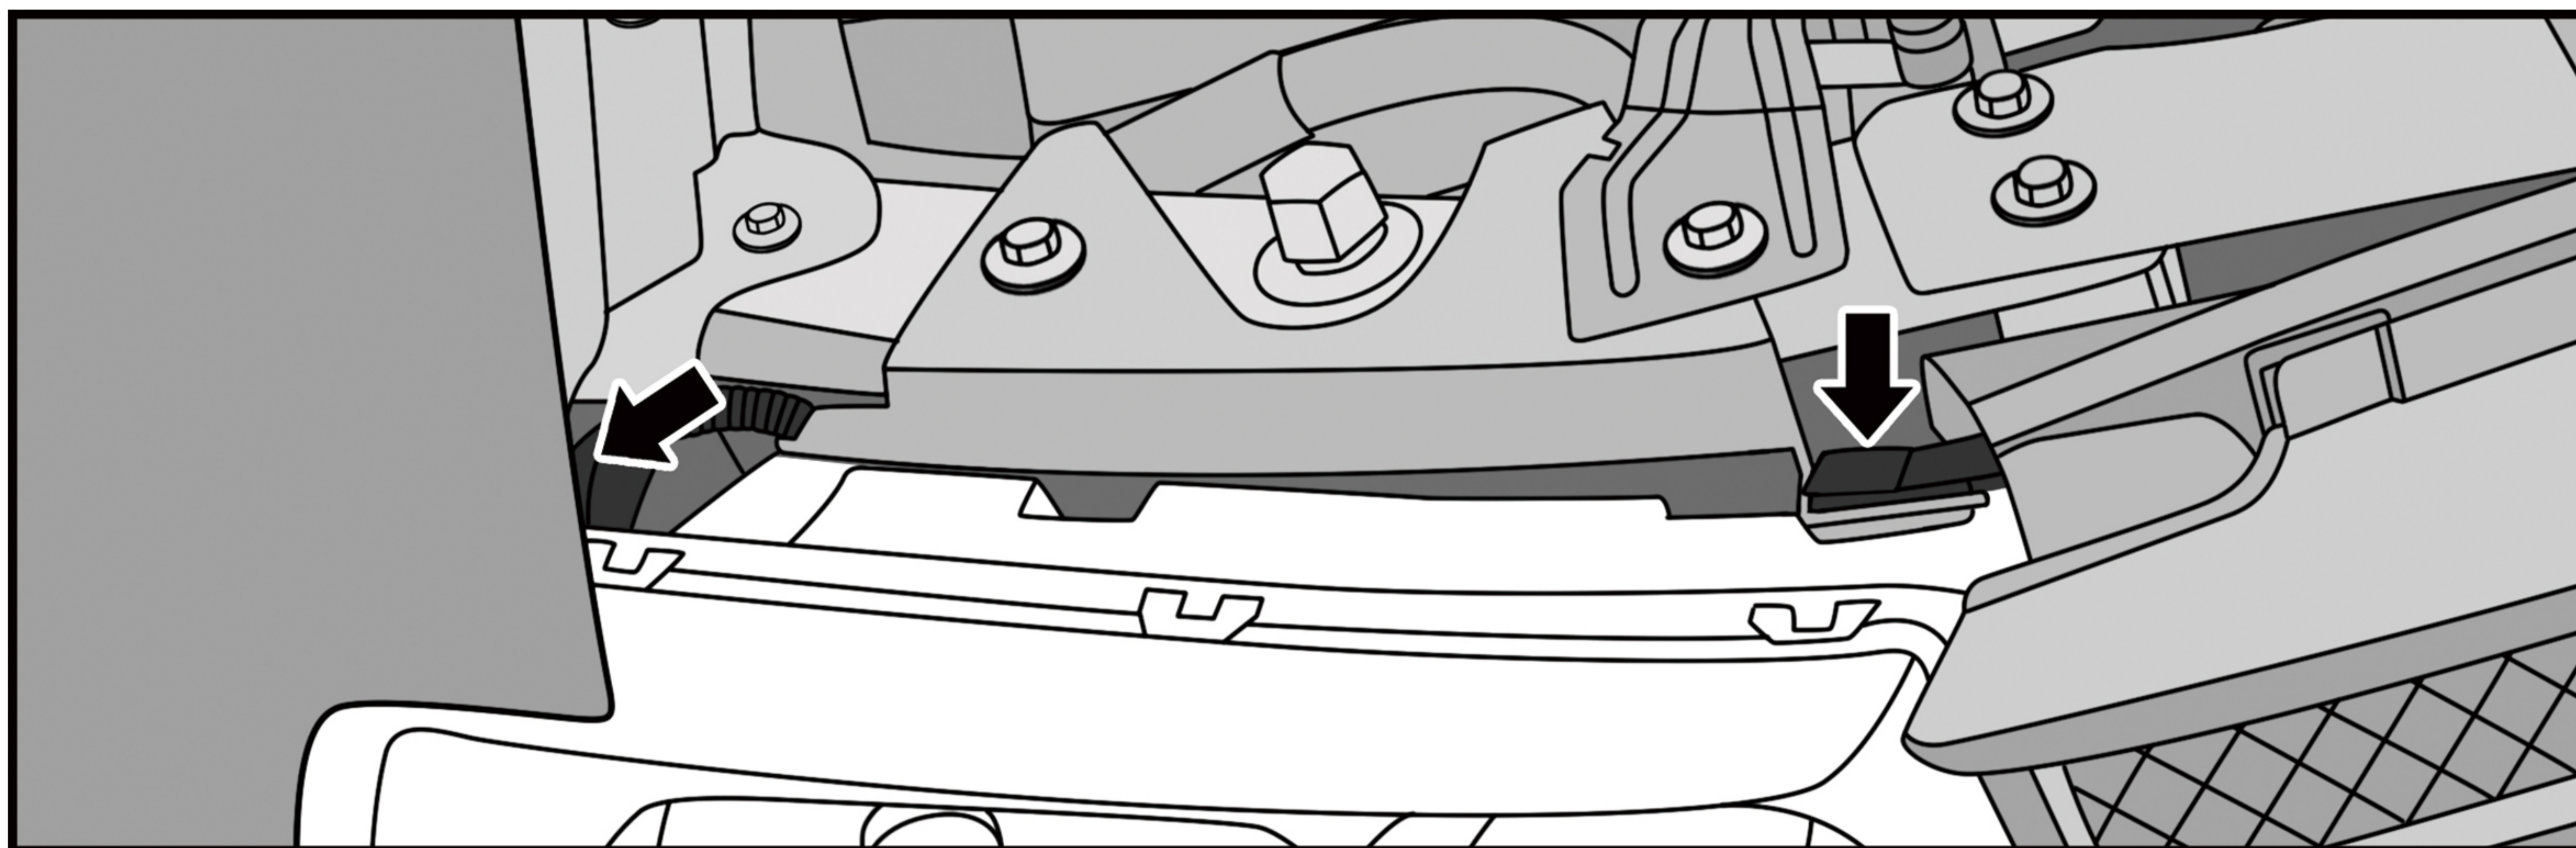

1. Locate (2) lock pins on the top of headlamp housing.
2. Pull up lock pins to release the headlamp.
3. Pull the headlamp forward and disconnect wire harness.
4. Remove the old headlamp.

STEP 3

1. Twist signal and side mark light sockets counterclockwise and remove from the old headlamp.
2. Open the dust caps and twist high beam and low beam bulbs counterclockwise and remove from the old headlamp.
3. Install headlight bulbs and sockets into the new headlamp.

STEP 4

1. Place the new headlamp on vehicle and connect wire harness.
2. Guiding the headlamp into mounting position.
3. Push down lock pins to secure the headlamp.
4. Attach the radiator grille to the radiator bracket and engage all clips.

WARM TIPS

Product Rear Structure



Before you begin to adjust the light, make sure check the alignment of your lights first. Park the vehicle about 10 to 25 feet from the wall with the lights aimed at the wall. The centerlines of the headlights should not be any higher than 3.5 feet above the ground.

1. Find the adjustment screws.
2. Adjust the headlights individually.
3. Adjust the vertical field.
4. Test your results.