

Tools Required

13mm Socket

Ratchet

Torque Wrench



Notes

Read this instruction carefully before starting installation.
Verify all parts especially the direction of mounting brackets before installation.
If missing parts or any damage found, please take a picture and contact us.

Step 1:

1. Locate three mounting positions each side.
2. Remove plastic plugs or hex bolts from the factory mounting positions.
3. Clean the sealant and dirt around factory threaded holes on mounting positions.




Driver Left Side

→ Front

Step 2:

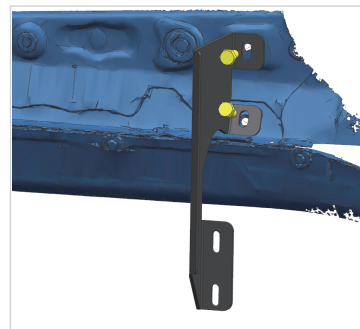1. Attach bracket to the rocker panel and secure with (2) M8 hex bolts.
2. Repeat to install all brackets. Do not fully tighten.




Front Bracket



Center/Rear Bracket


Step 3:

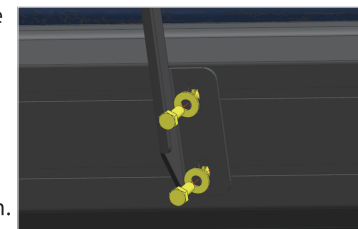1. Remove (6) M8 hex bolts and (6) M8 flat washers behind the step bar.
2. Slide mounting tracks to proper positions.
3. With assistance, lift and attach the step bar to brackets.
Secure the step bar on brackets with (6) M8 hex bolts and (6) M8 flat washers.
4. Repeat to install the other side step bar. Do not fully tighten.



Step 4:





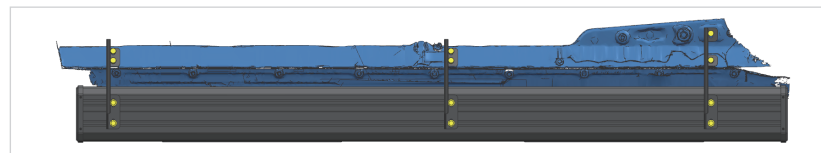
1. Tighten M8 hex bolts on vehicle with 15 ft. lbs. torque.
2. Adjust step bar to level and tighten M8 hex bolts on step bar with 15 ft. lbs. torque.
3. After the step bar installed, periodic check to ensure all mounting hardware remains secure and tight.



Driver Left Side

→ Front

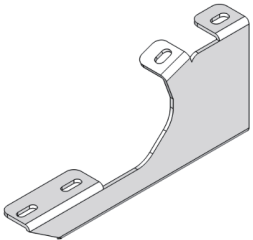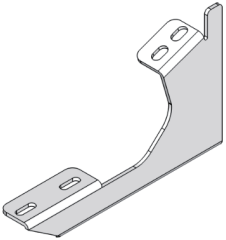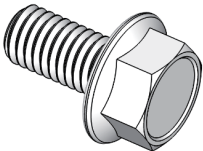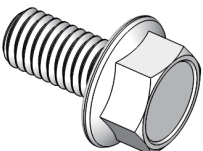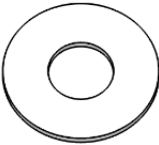Part List:

			
Front Bracket	× 2	Center/Rear Bracket	× 4
			
M8 Hexagon Bolt	× 12	M8 Hexagon Bolt (on step bar)	× 12
			
M8 Flat Washer (on step bar)	× 12		

