## Before You Begin

**Read instructions thoroughly before installation.**

**Installation Order:** Mount brackets, position step bars, then tighten all hardware.

**Use proper** tools to ensure a correct fit and save time.


Damaged or missing parts? Please take a photo and contact us for support.

**Professional installation** would be highly recommended.


**Maintenance:** Periodically check all hardware to ensure it remains secure and tight.

## Step 1:

1. Locate (**3**) mounting positions each side.
2. Remove factory bolts or plugs from inner rocker panel.
3. Clean the sealant and dirt around mounting positions.



Driver Left Side → Front

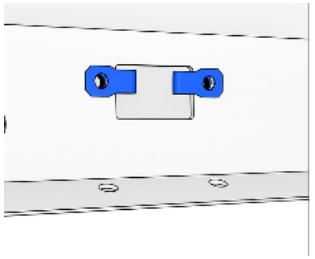


Insert M8 clip nut onto the large hole and over the smaller hole next to it, with threads inside of the inner rocker panel.





## Step 2:

**1.After installing the clip nuts, align the provided mounting bracket with theholes, then secure it using the M8 bolts, as shown in the diagram.**

**2. Repeat to install all brackets. Do not fully tighten.**

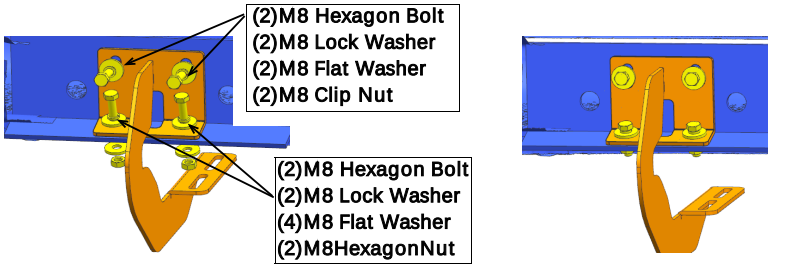

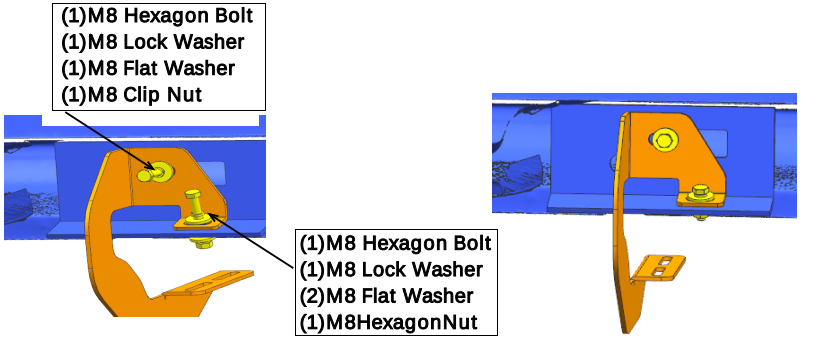


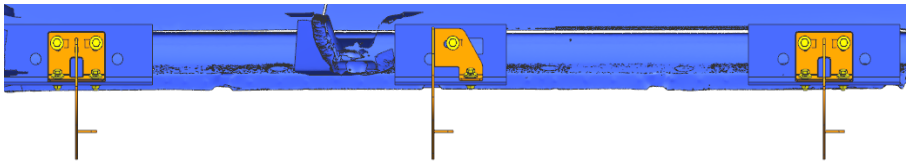
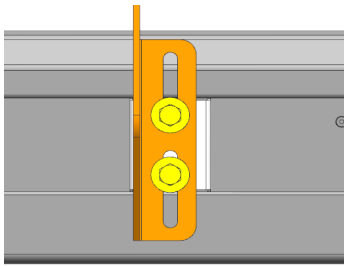



Driver Left Side → Front

## Step 3:

1. Remove (**6**) M8 hex bolts, (**6**) M8 flat washers, (**6**) M8 lock washers.
2. Slide mounting tracks to proper positions.
3. With assistance, lift and attach the step bar to brackets.
   Secure the step bar on brackets with , (**6**) M8 hex bolts,
   (**6**) M8 flat washers, (**6**) M8 lock washers.
4. Repeat to install the other side step bar, do not fully tighten.

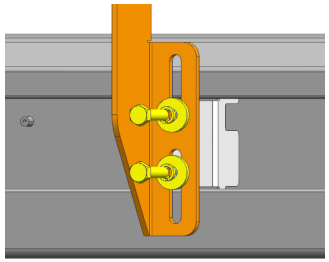








## Step 4:

1. Tighten M8 hex nuts on vehicle with 15 ft-lbs. torque.
2. Adjust the step bar to level and tighten M8 hex bolts with 15 ft-lbs. torque.
3. After the step bar installed, periodic check to ensure all mounting hardware remains secure and tight.

## Part List:

| | Qty. | Description |
|---|---|---|
| ① | X 2 | Front/Rear Driver Left /side bracket |
| ② | X 1 | Center Driver Left side bracket |
| ③ | X 2 | Front/Rear Passenger/Right sidebracket |
| ④ | X 1 | Center PassengerRightside Bracket |
| ⑤ | X20 | M8×25 Hexagon Bolt |
| ⑥ | X30 | M8×24 Flat Washer |
| ⑦ | X20 | M8 Lock Washer |
| ⑧ | X10 | M8 Hexagon Nut |
| ⑨ | X10 | M8 Clip Nut |

