


INSTRUCTION




RF

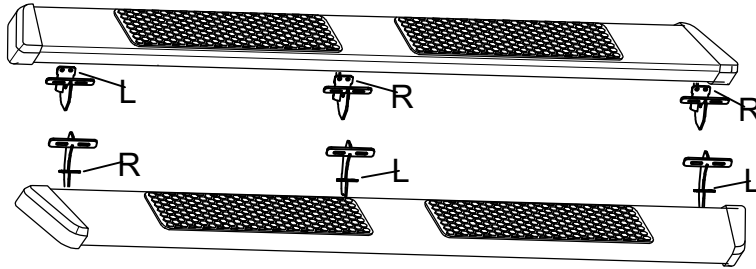

LF

screws install on
the car

B	8*30	C	6*30
12pcs		12pcs	
D	M8*22	F	M6*25
12pcs		12pcs	

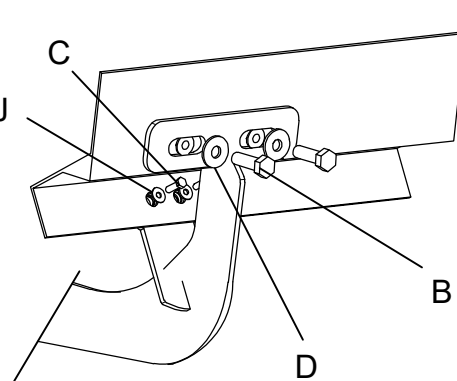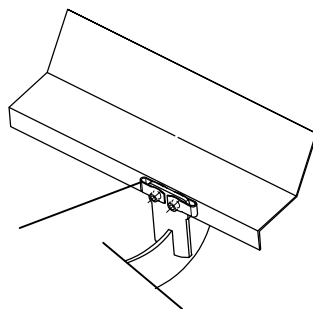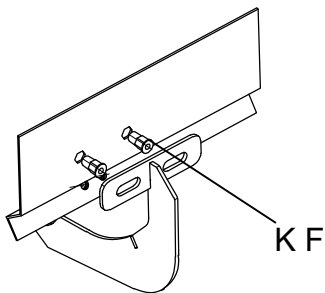


J	6*20
12pcs	
K	M8*13
12pcs	

1




Crimp nut is set in
fixing tool

2

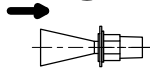


Crimp nut is
inserted in hole of
work

3

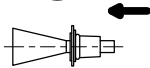

The bulge is formed
by turning tool

4

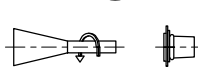

After the bulge is
completely expanded the
tool is removed

L




3pcs

R



3pcs

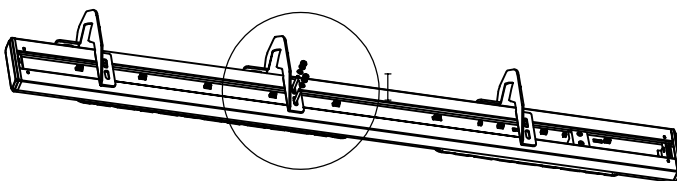

E D B

screws install on the
nerf bar

B	8*30	D	M8*22	E	8*2
12pcs		12pcs		12pcs	