



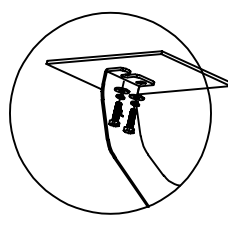
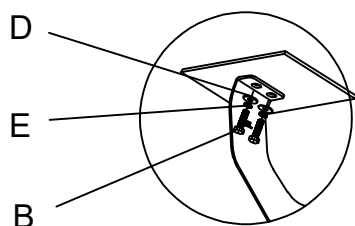
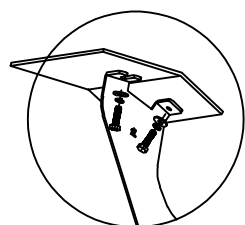


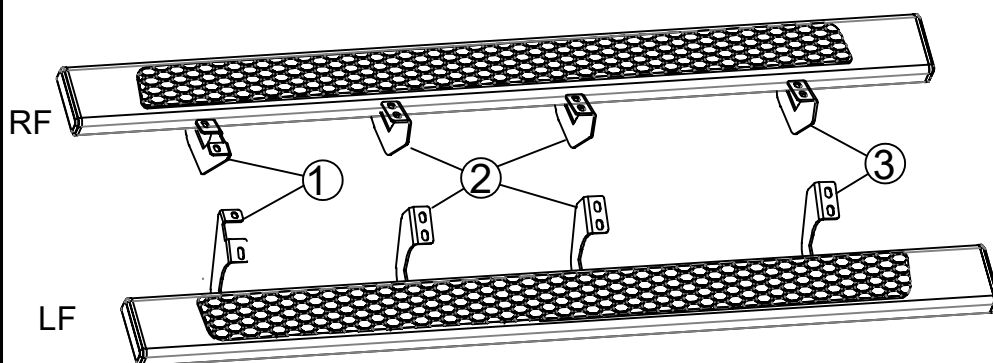





INSTRUCTION




screws install
on the car



B	8*30	D	8*22
16pcs		16pcs	
		E	8*2
		16pcs	

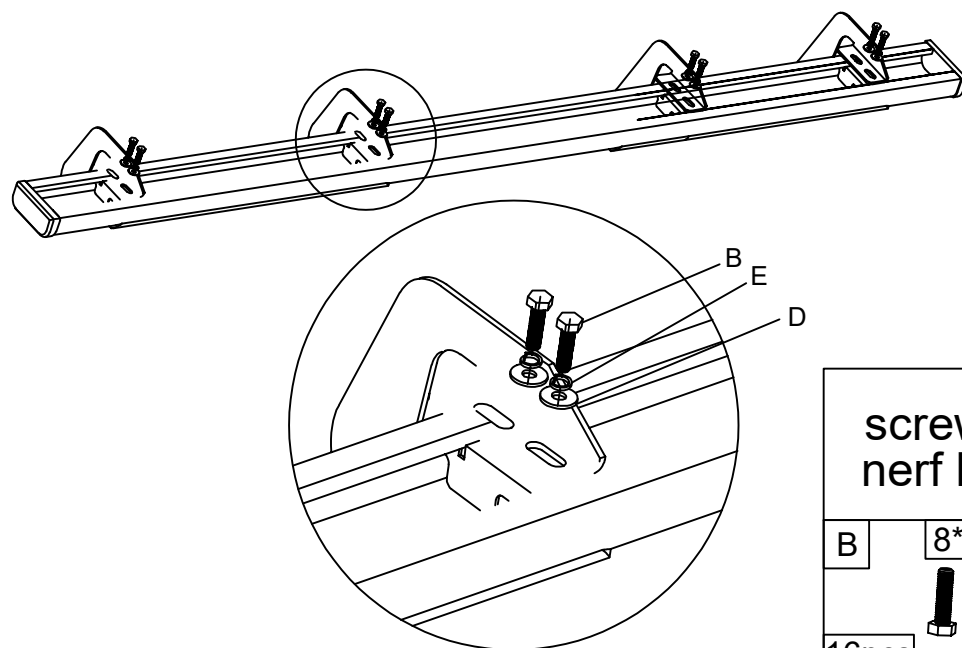

L1=1		R1=1	
L2=2		R2=2	
L3=1		R3=1	



screws install on the
nerf bar

B	8*30	D	8*22	E	8*2
16pcs		16pcs		16pcs	