

## BEFORE INSTALLATION

- Professional Installation would be highly recommended, please seek assistance at local automotive shop if you have any difficulties in installing.
- Safety comes first ! Do not start to work on any vehicle without protection.
- An assistant would be better assist you in the bumper disassembly work.
- Keep cautions to prevent being scratched when working on any parts from the body of the vehicle.
- Do not touch the bulbs or the wire assembly before they are cooled to avoid the burns.


## PRODUCT NUMBER

OEM: 81150-04173, 81110-04173






## STEP 1

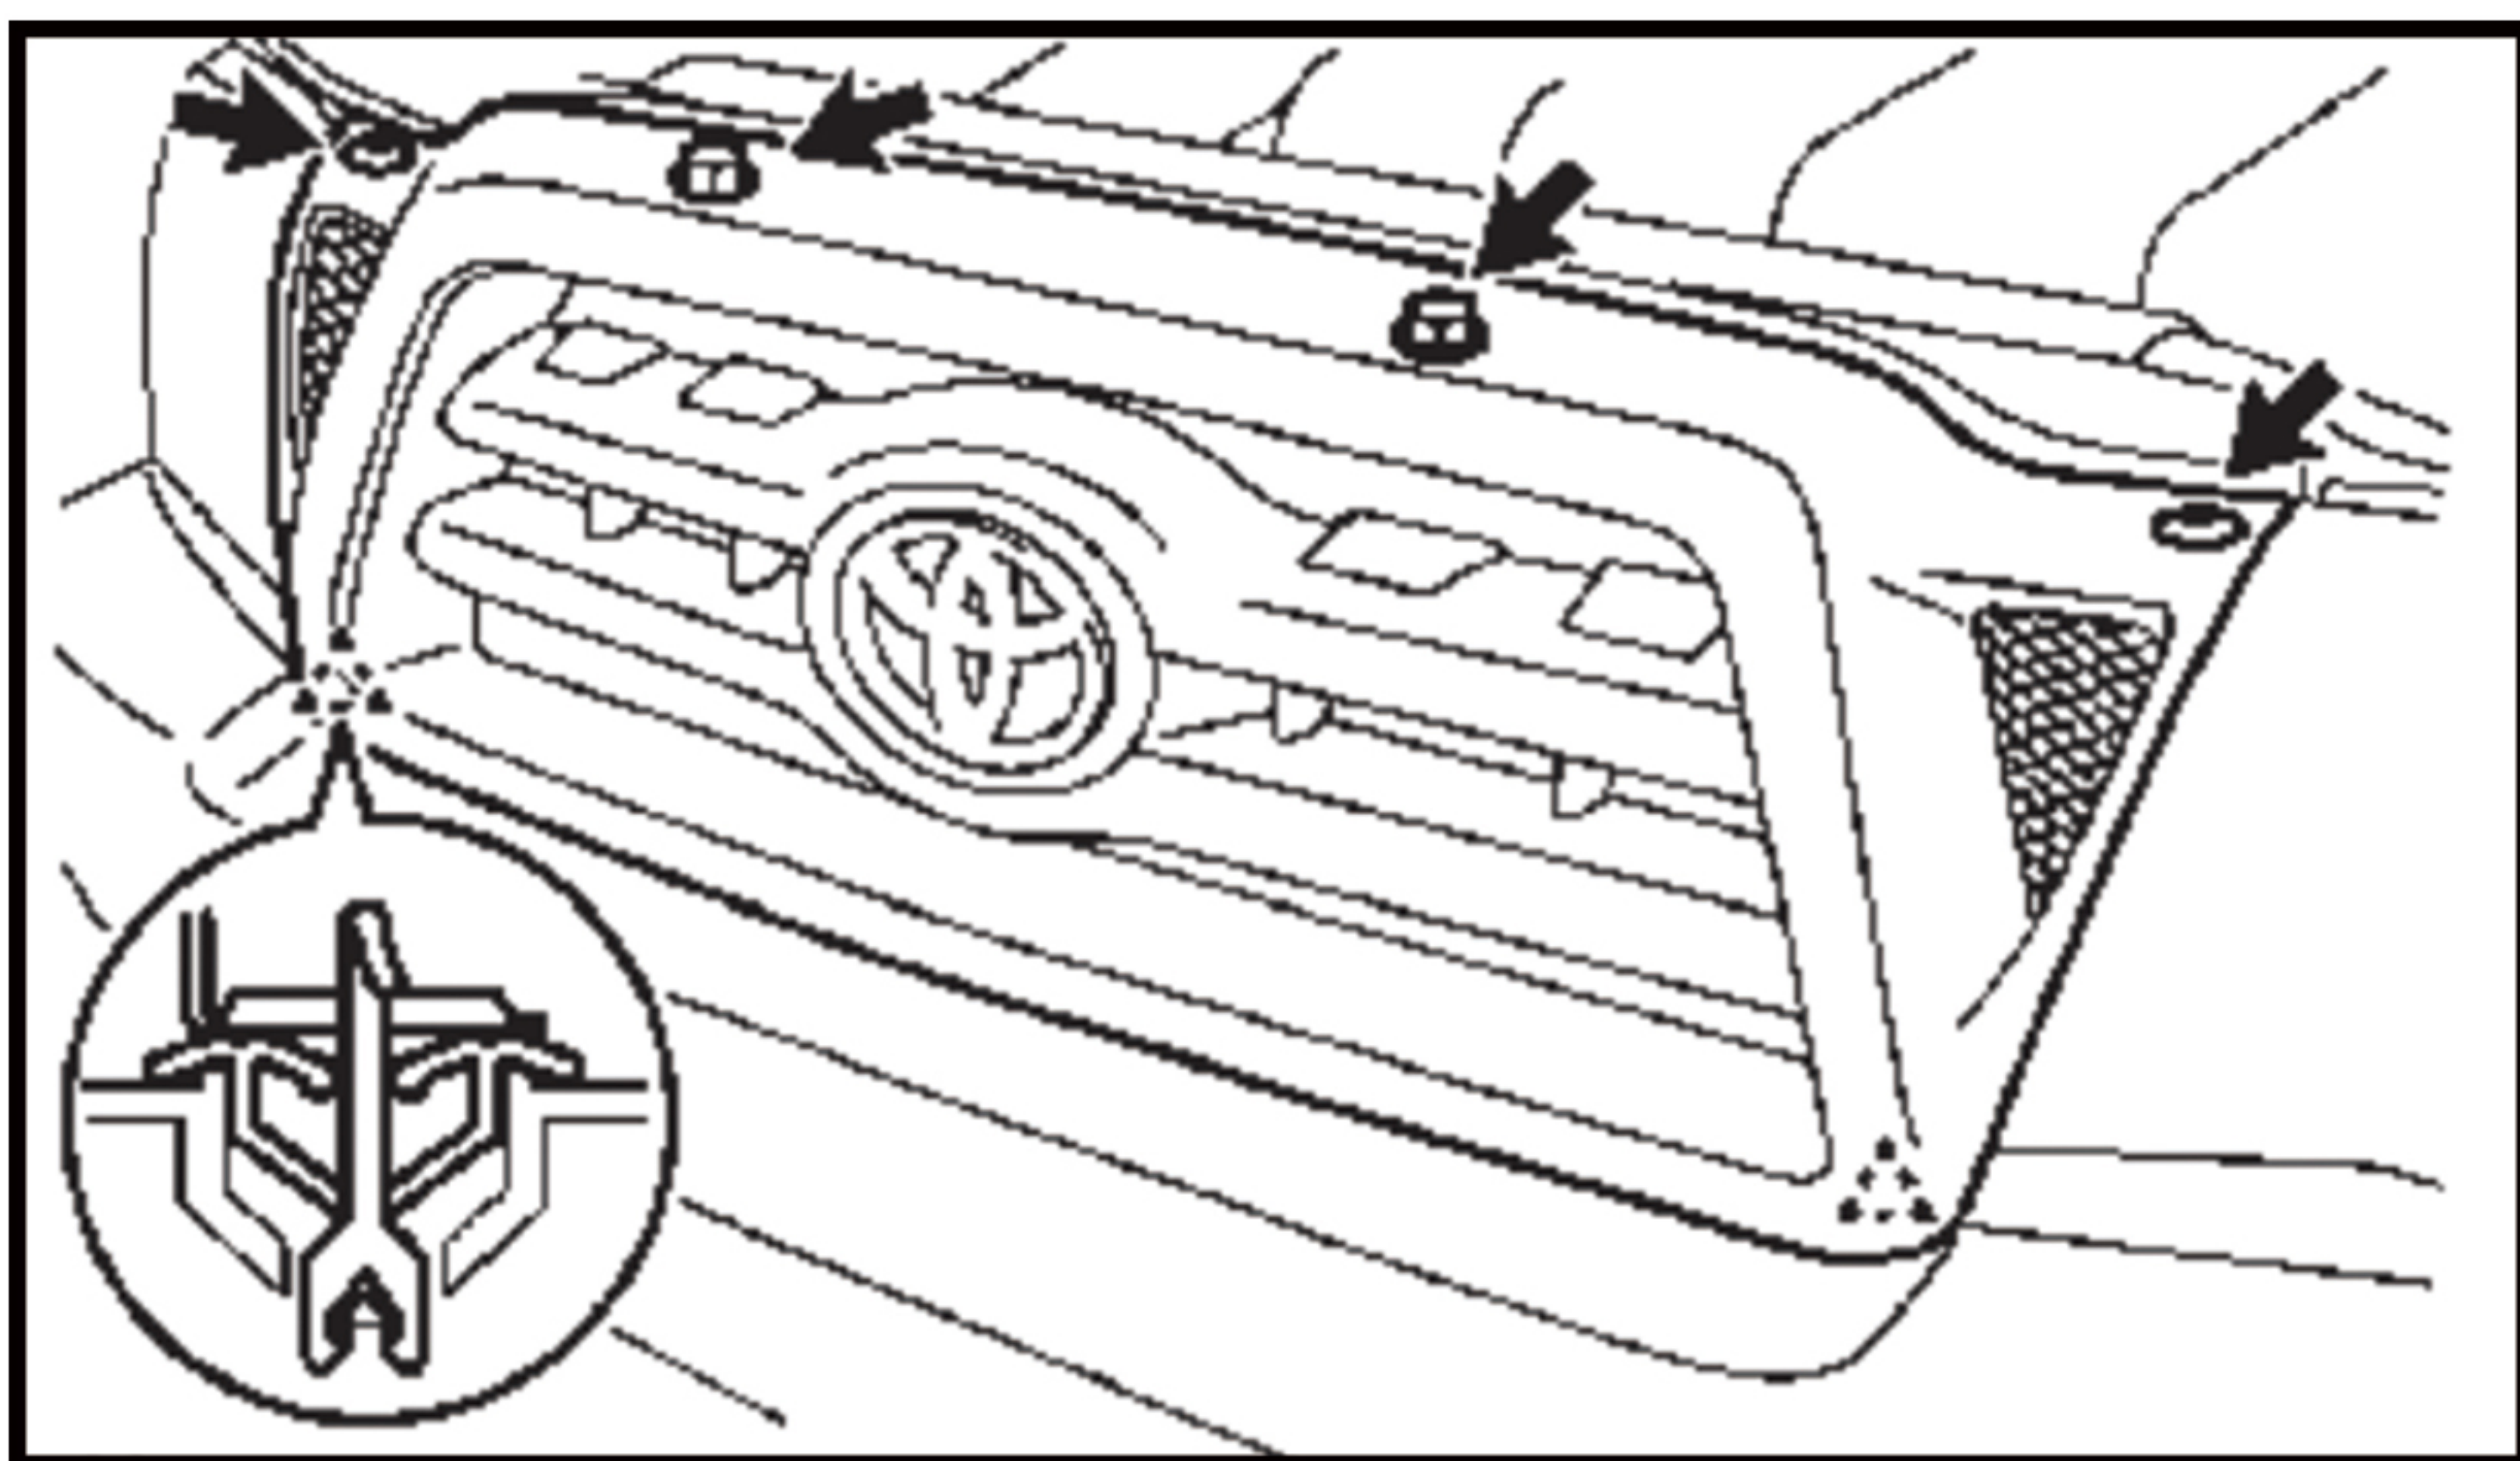


1. Open the hood.
2. Remove (2) bolts and (2) rivets on top of the radiator grille.
3. Disengage (2) clips and remove the radiator grille.

## STEP 2

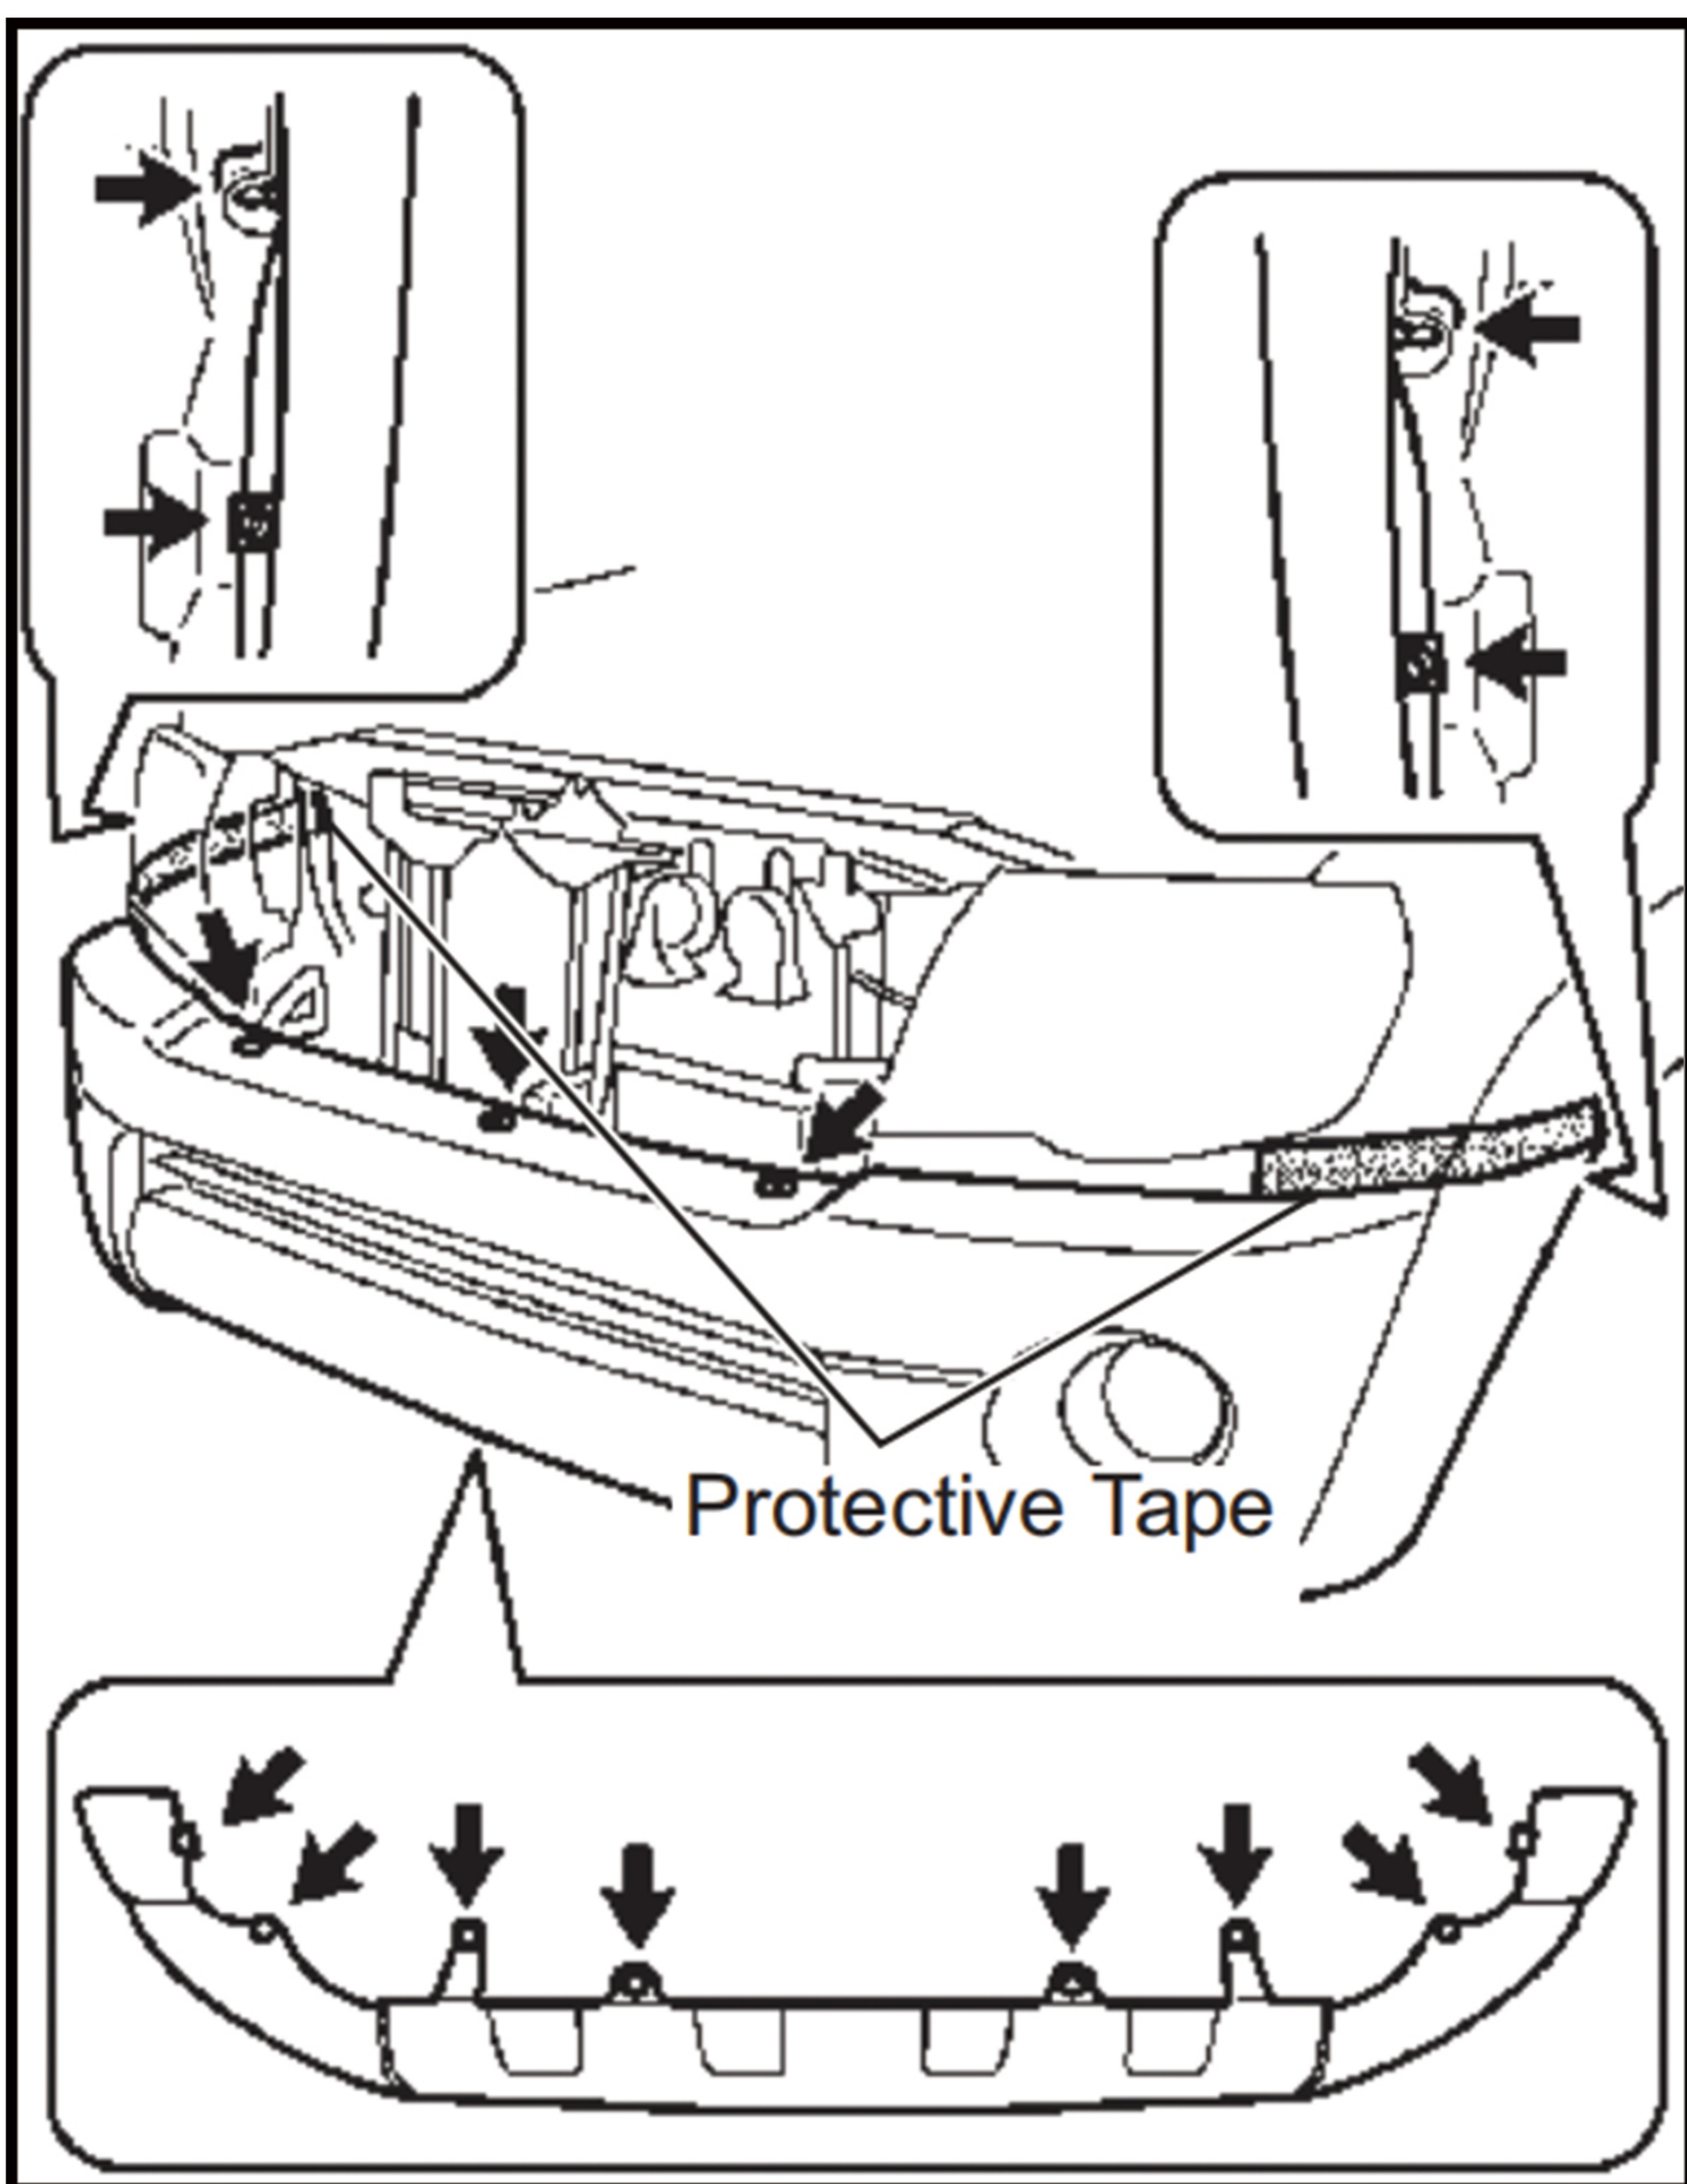


1. Remove (3) rivets on top of the front bumper.
2. Remove (2) bolts and (2) rivets in both side front wheel well.
3. Remove (4) bolts and (4) rivets under the front bumper cover.
4. Disengage the (6) claws by pulling the front bumper cover outside.
5. Disconnect fog lamp harness if equipped.
6. Remove the front bumper cover.

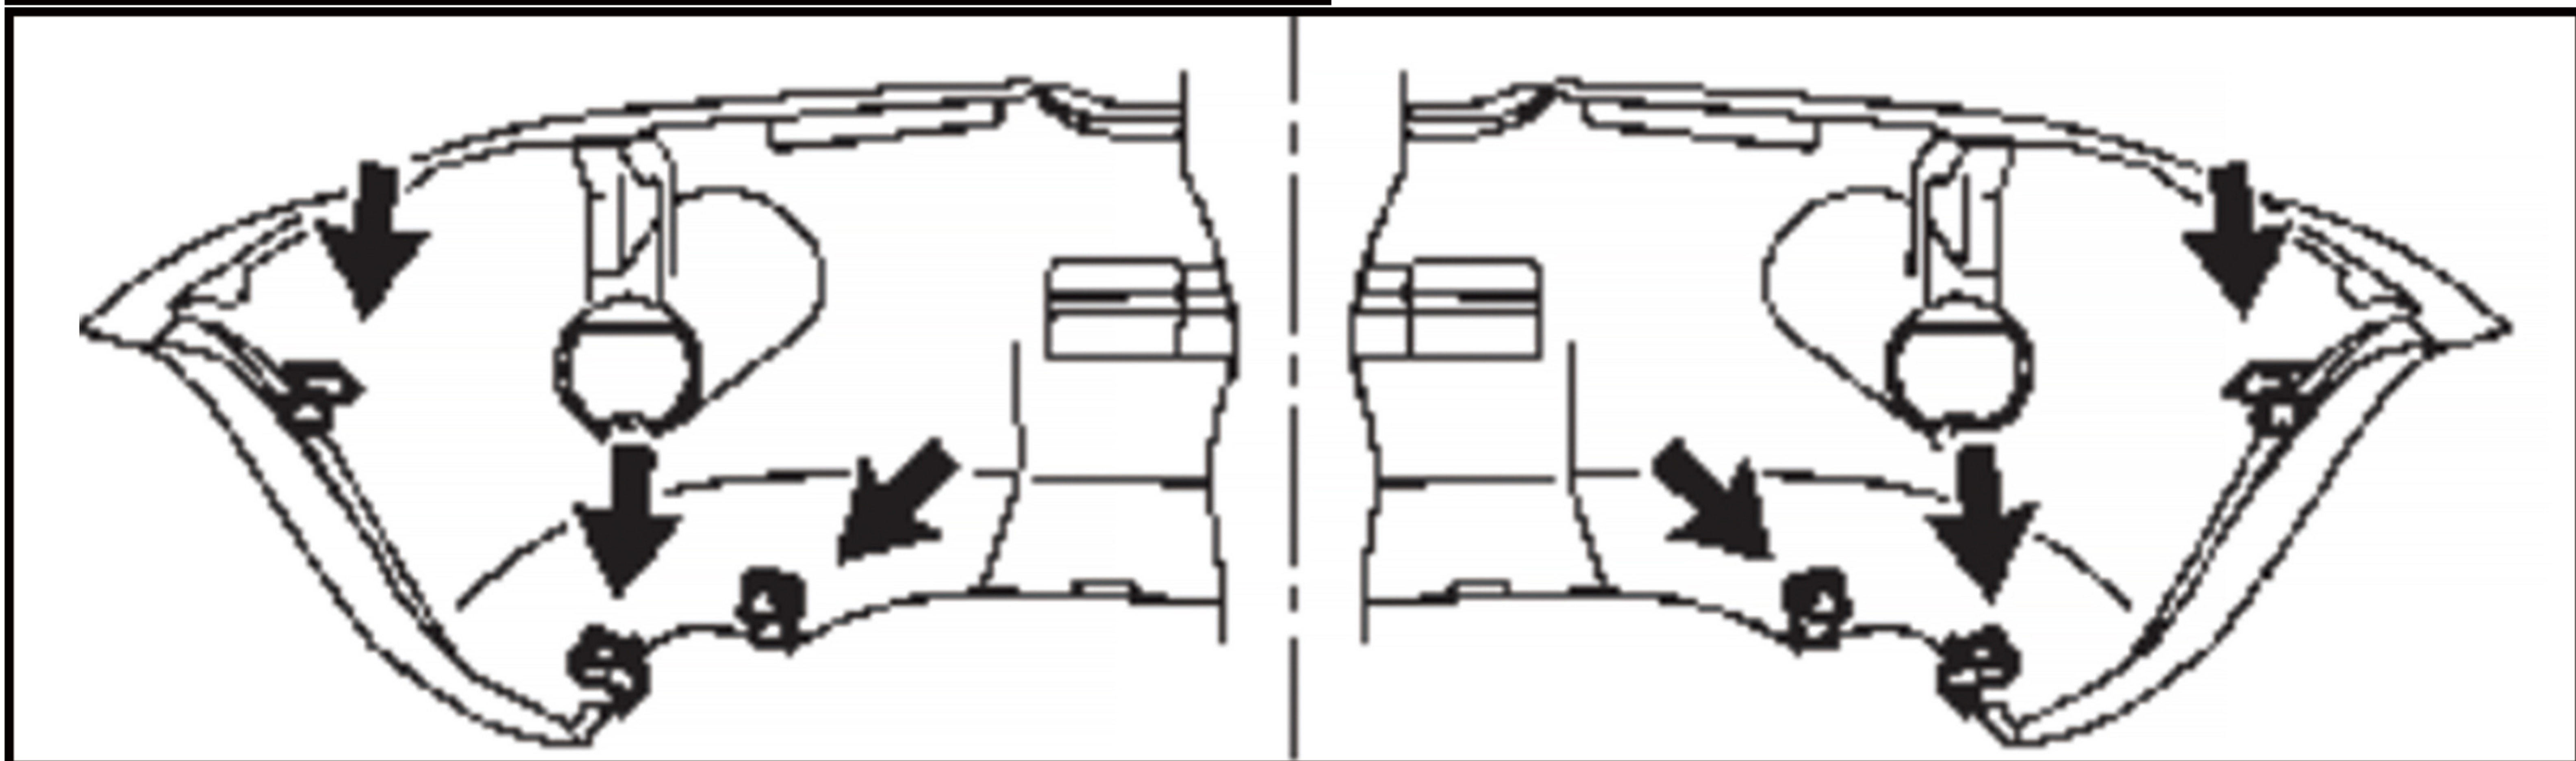



## STEP 3

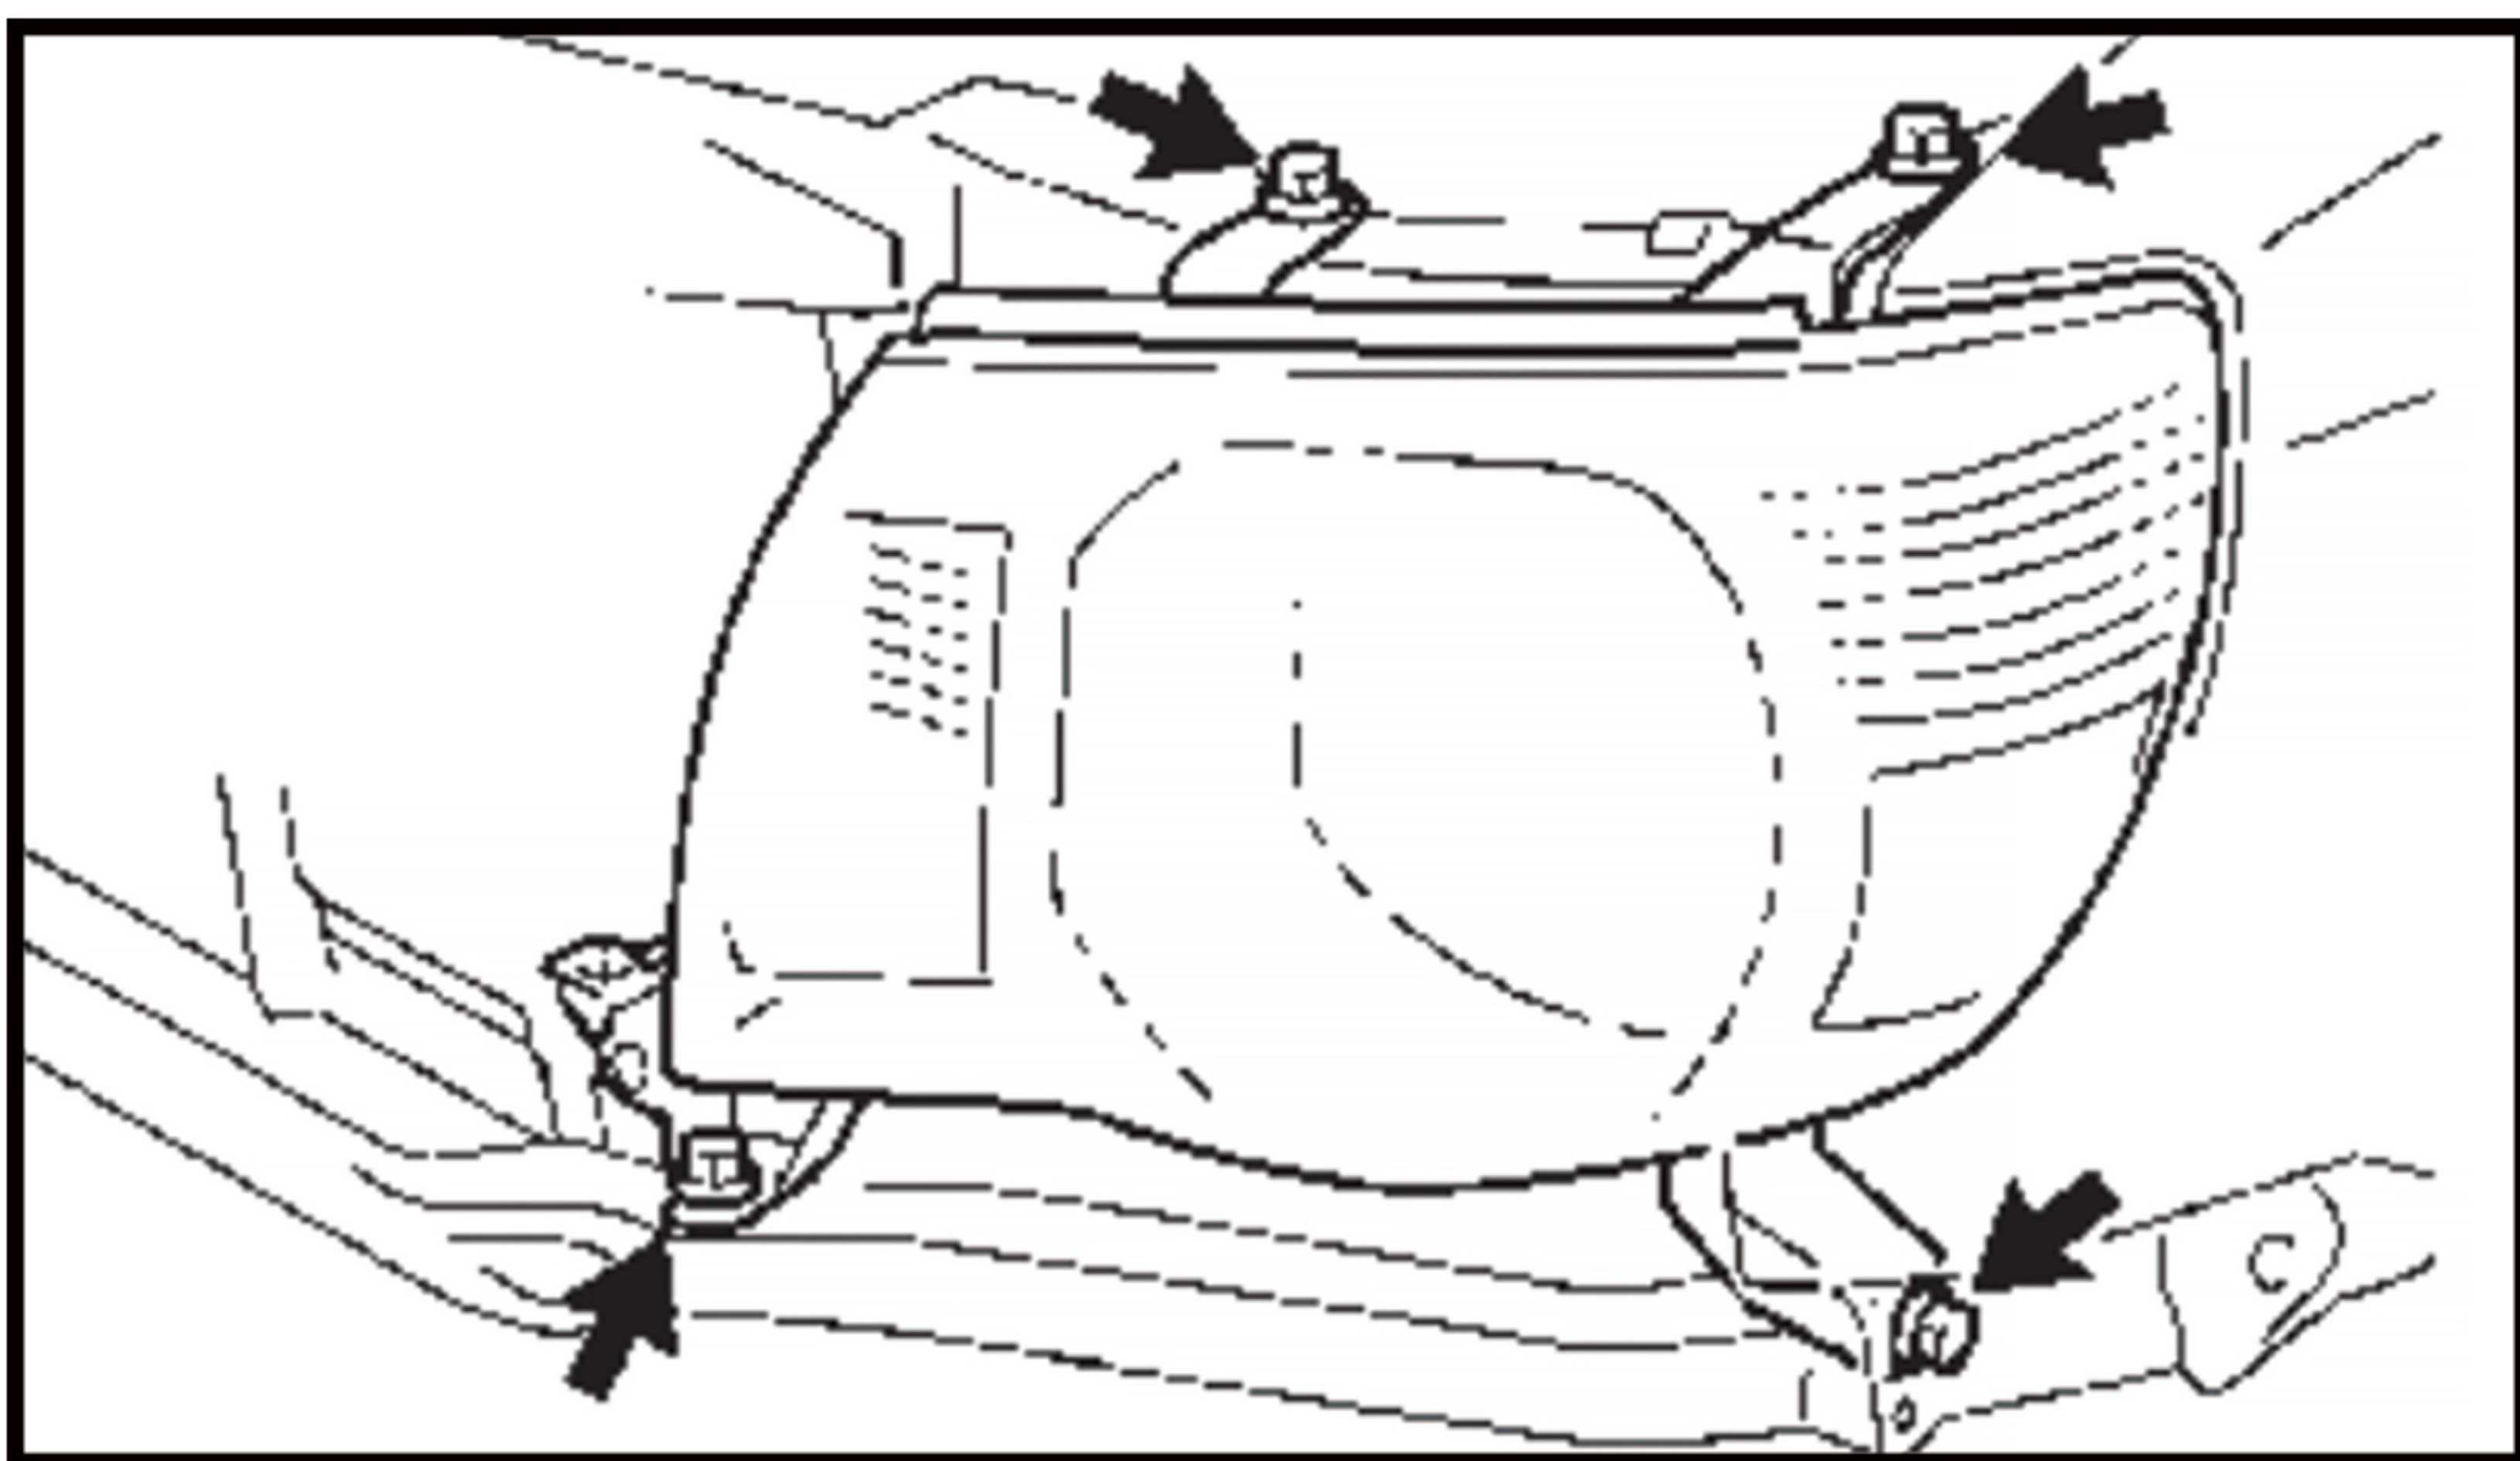

- 1.Remove (1) rivet and remove the front bumper filler under the headlamp.
- 2.Remove (4) bolts securing the headlamp.
- 3.Pull the headlamp forward, release headlamp from vehicle.

## STEP 4

- 1.Disconnect headlight and signal and side mark light connector.
- 2.Remove the headlight socket cover and press the spring to remove the headlight bulb.
- 3.Twist turn signal and side mark light sockets counterclockwise and remove from the old headlamp.
- 4.Remove the grille mounting clip on the old headlamp



## STEP 5

- 1.Insert and twist turn signal and side mark light sockets clockwise to the new headlamp.
- 2.Install the headlight bulb and socket cover to the new headlamp.
- 3.Place the new headlamp on vehicle, connect headlight and turn signal and side mark light connectors.
- Install (4) bolts to secure the new headlamp on vehicle.
- 4.Install the grille mounting clip to the new headlamp.
- 5.Secure the front bumper filler with (1) rivet.

## STEP 6

- 1.Repeat step 3 to step 5 on the other side.
- 2.Wish assistance, lift and attach front bumper cover on bumper reinforcement.
- 3.Connect fog light harness if equipped.
- 4.Pop on the claws behind bumper cover.
- 5.Install (4) bolts and (7) rivets to secure the front bumper cover.
- 6.Install (2) bolts and (2) rivets to secure inner fender liner in both side front wheel well.
- 7.Engage the (2) clips and install the radiator grille.
- 8.Install (2) bolts and (2) rivets to secure the radiator grille.

## WARM TIPS



Before you begin to adjust the light, make sure check the alignment of your lights first. Park the vehicle about 10 to 25 feet from the wall with the lights aimed at the wall. The centerlines of the headlights should not be any higher than 3.5 feet above the ground.

1. Find the adjustment screws.
2. Adjust the headlights individually.
3. Adjust the vertical field.
4. Test your results.