

BEFORE INSTALLATION



- Professional Installation would be highly recommended, please seek assistance at local automotive shop if you have any difficulties in installing.
- Safety comes first ! Do not start to work on any vehicle without protection.
- An assistant would be better assist you in the bumper disassembly work.
- Keep cautions to prevent being scratched when working on any parts from the body of the vehicle.
- Do not touch the bulbs or the wire assembly before they are cooled to avoid the burns.

PRODUCT NUMBER

OEM: 5103401AA, 55155129AJ, 5103400AA, 55155128AJ




STEP 1

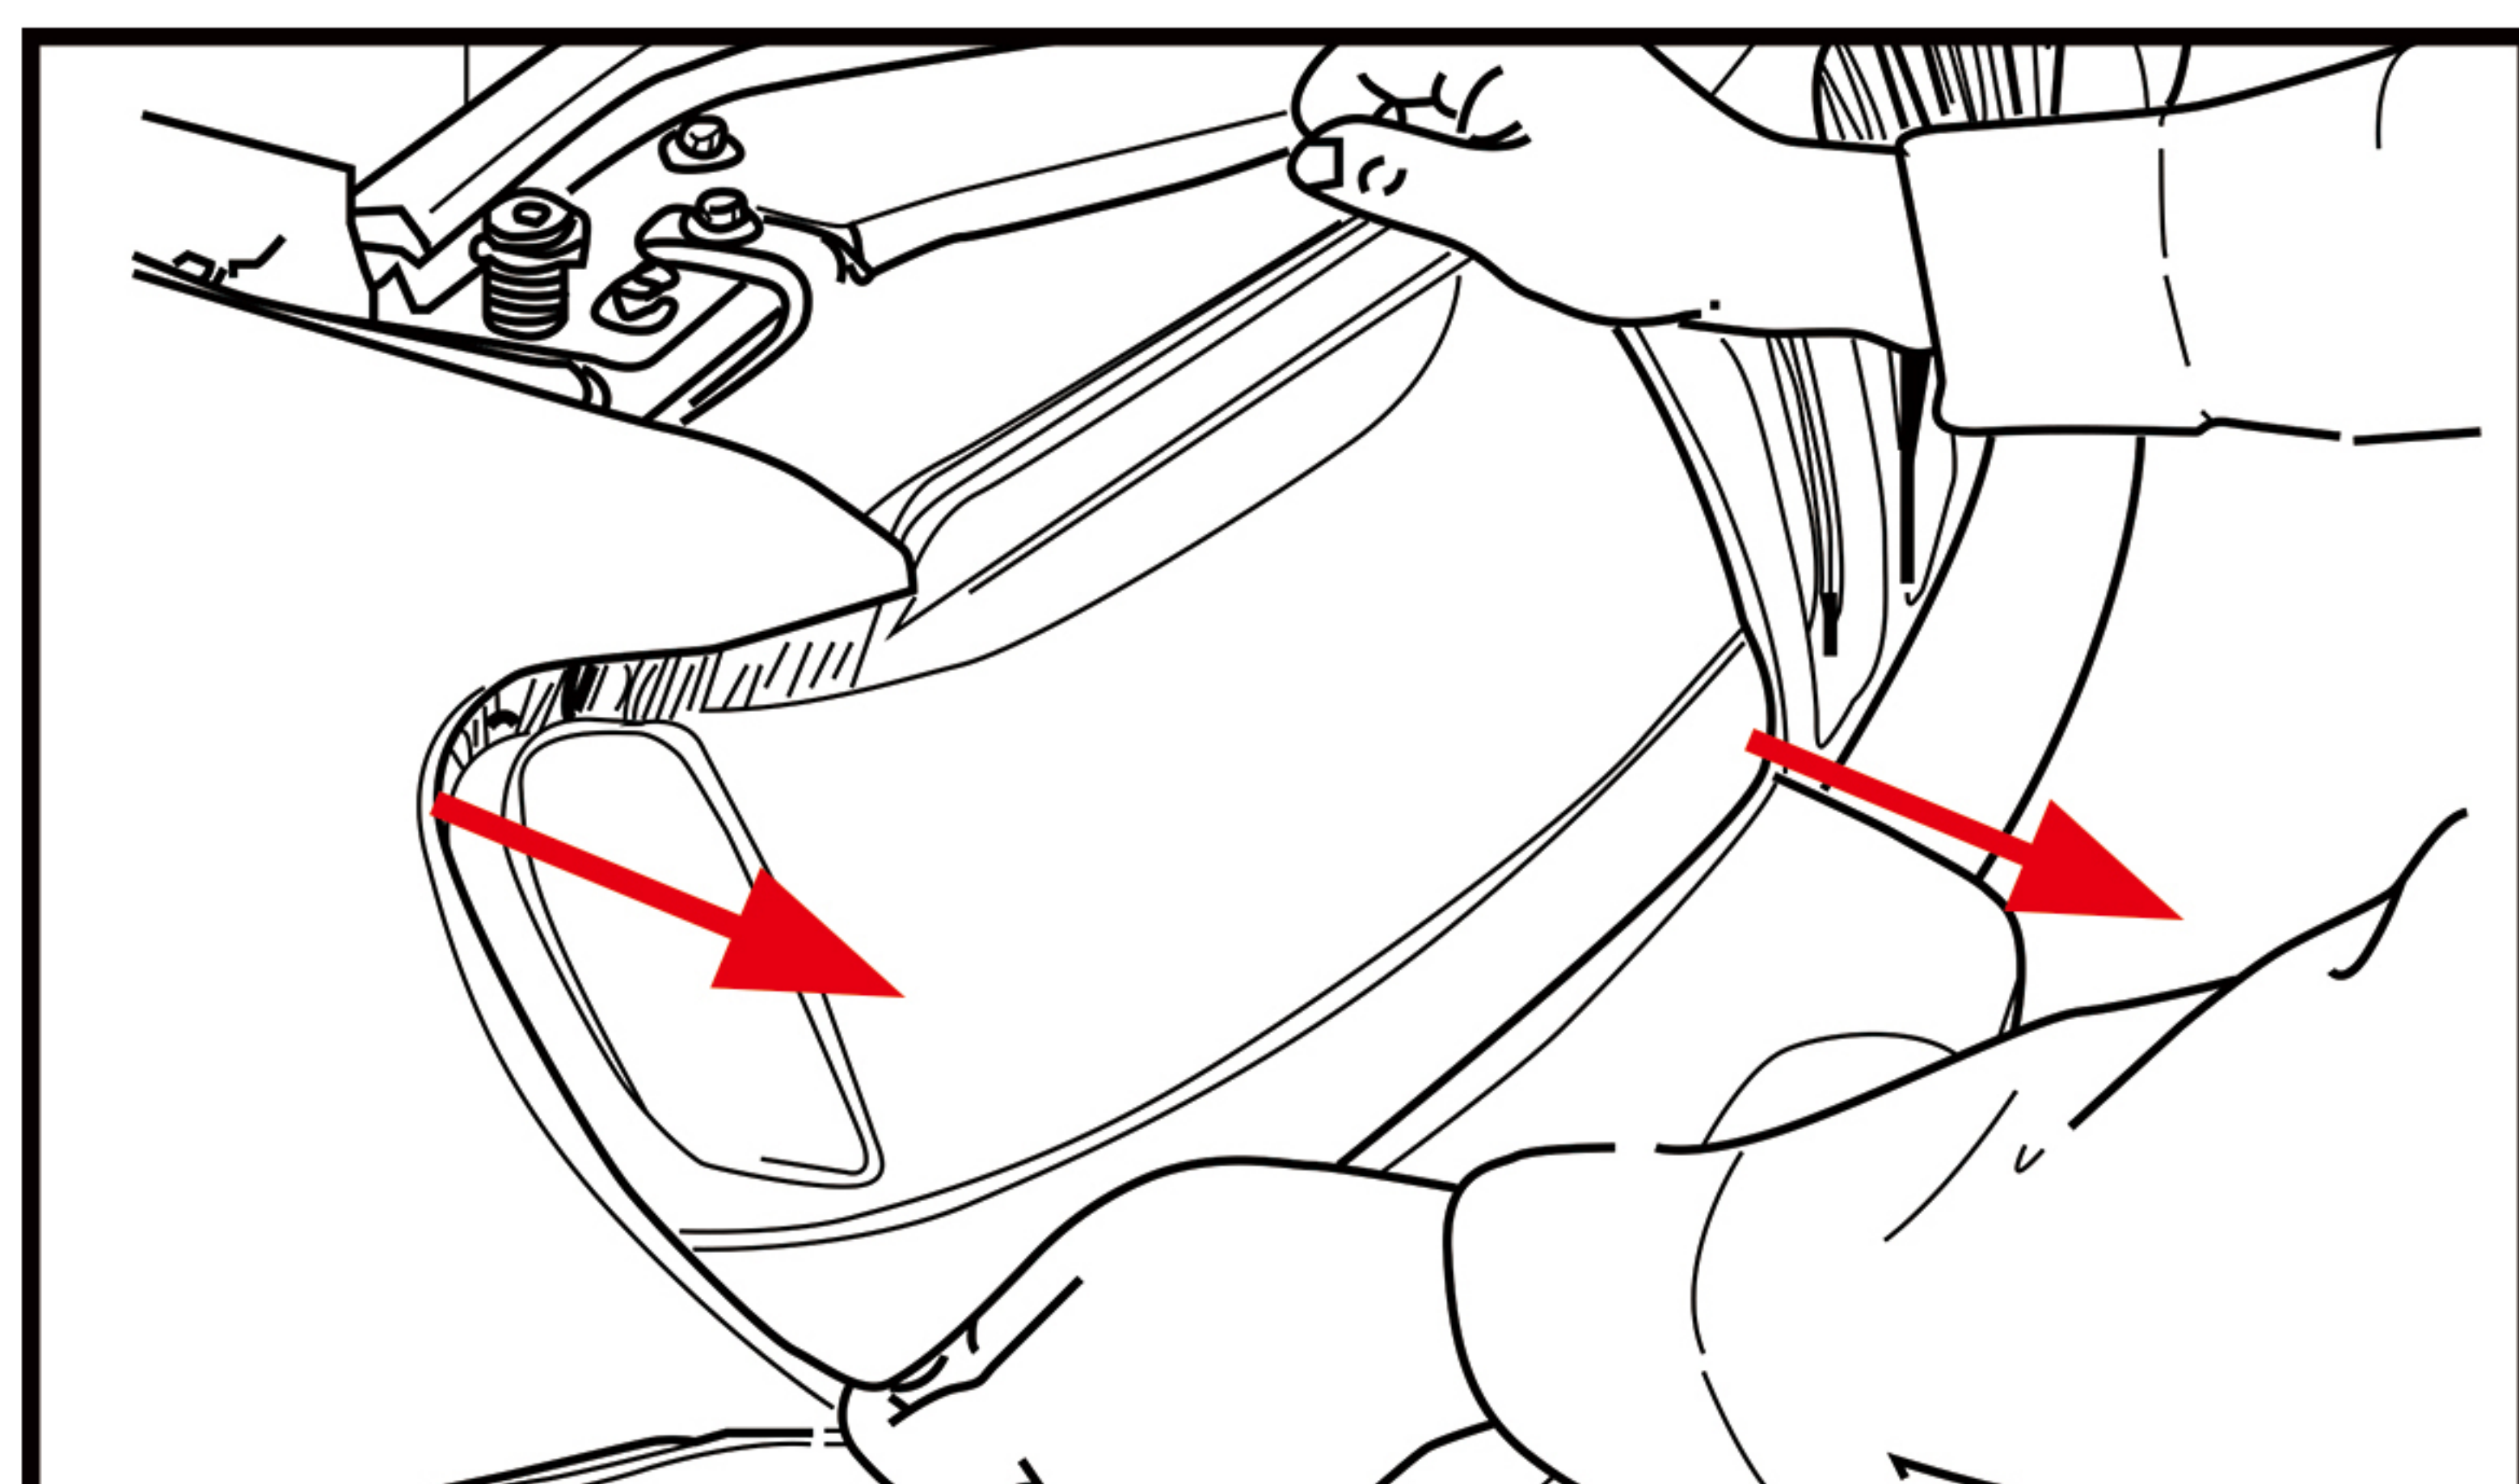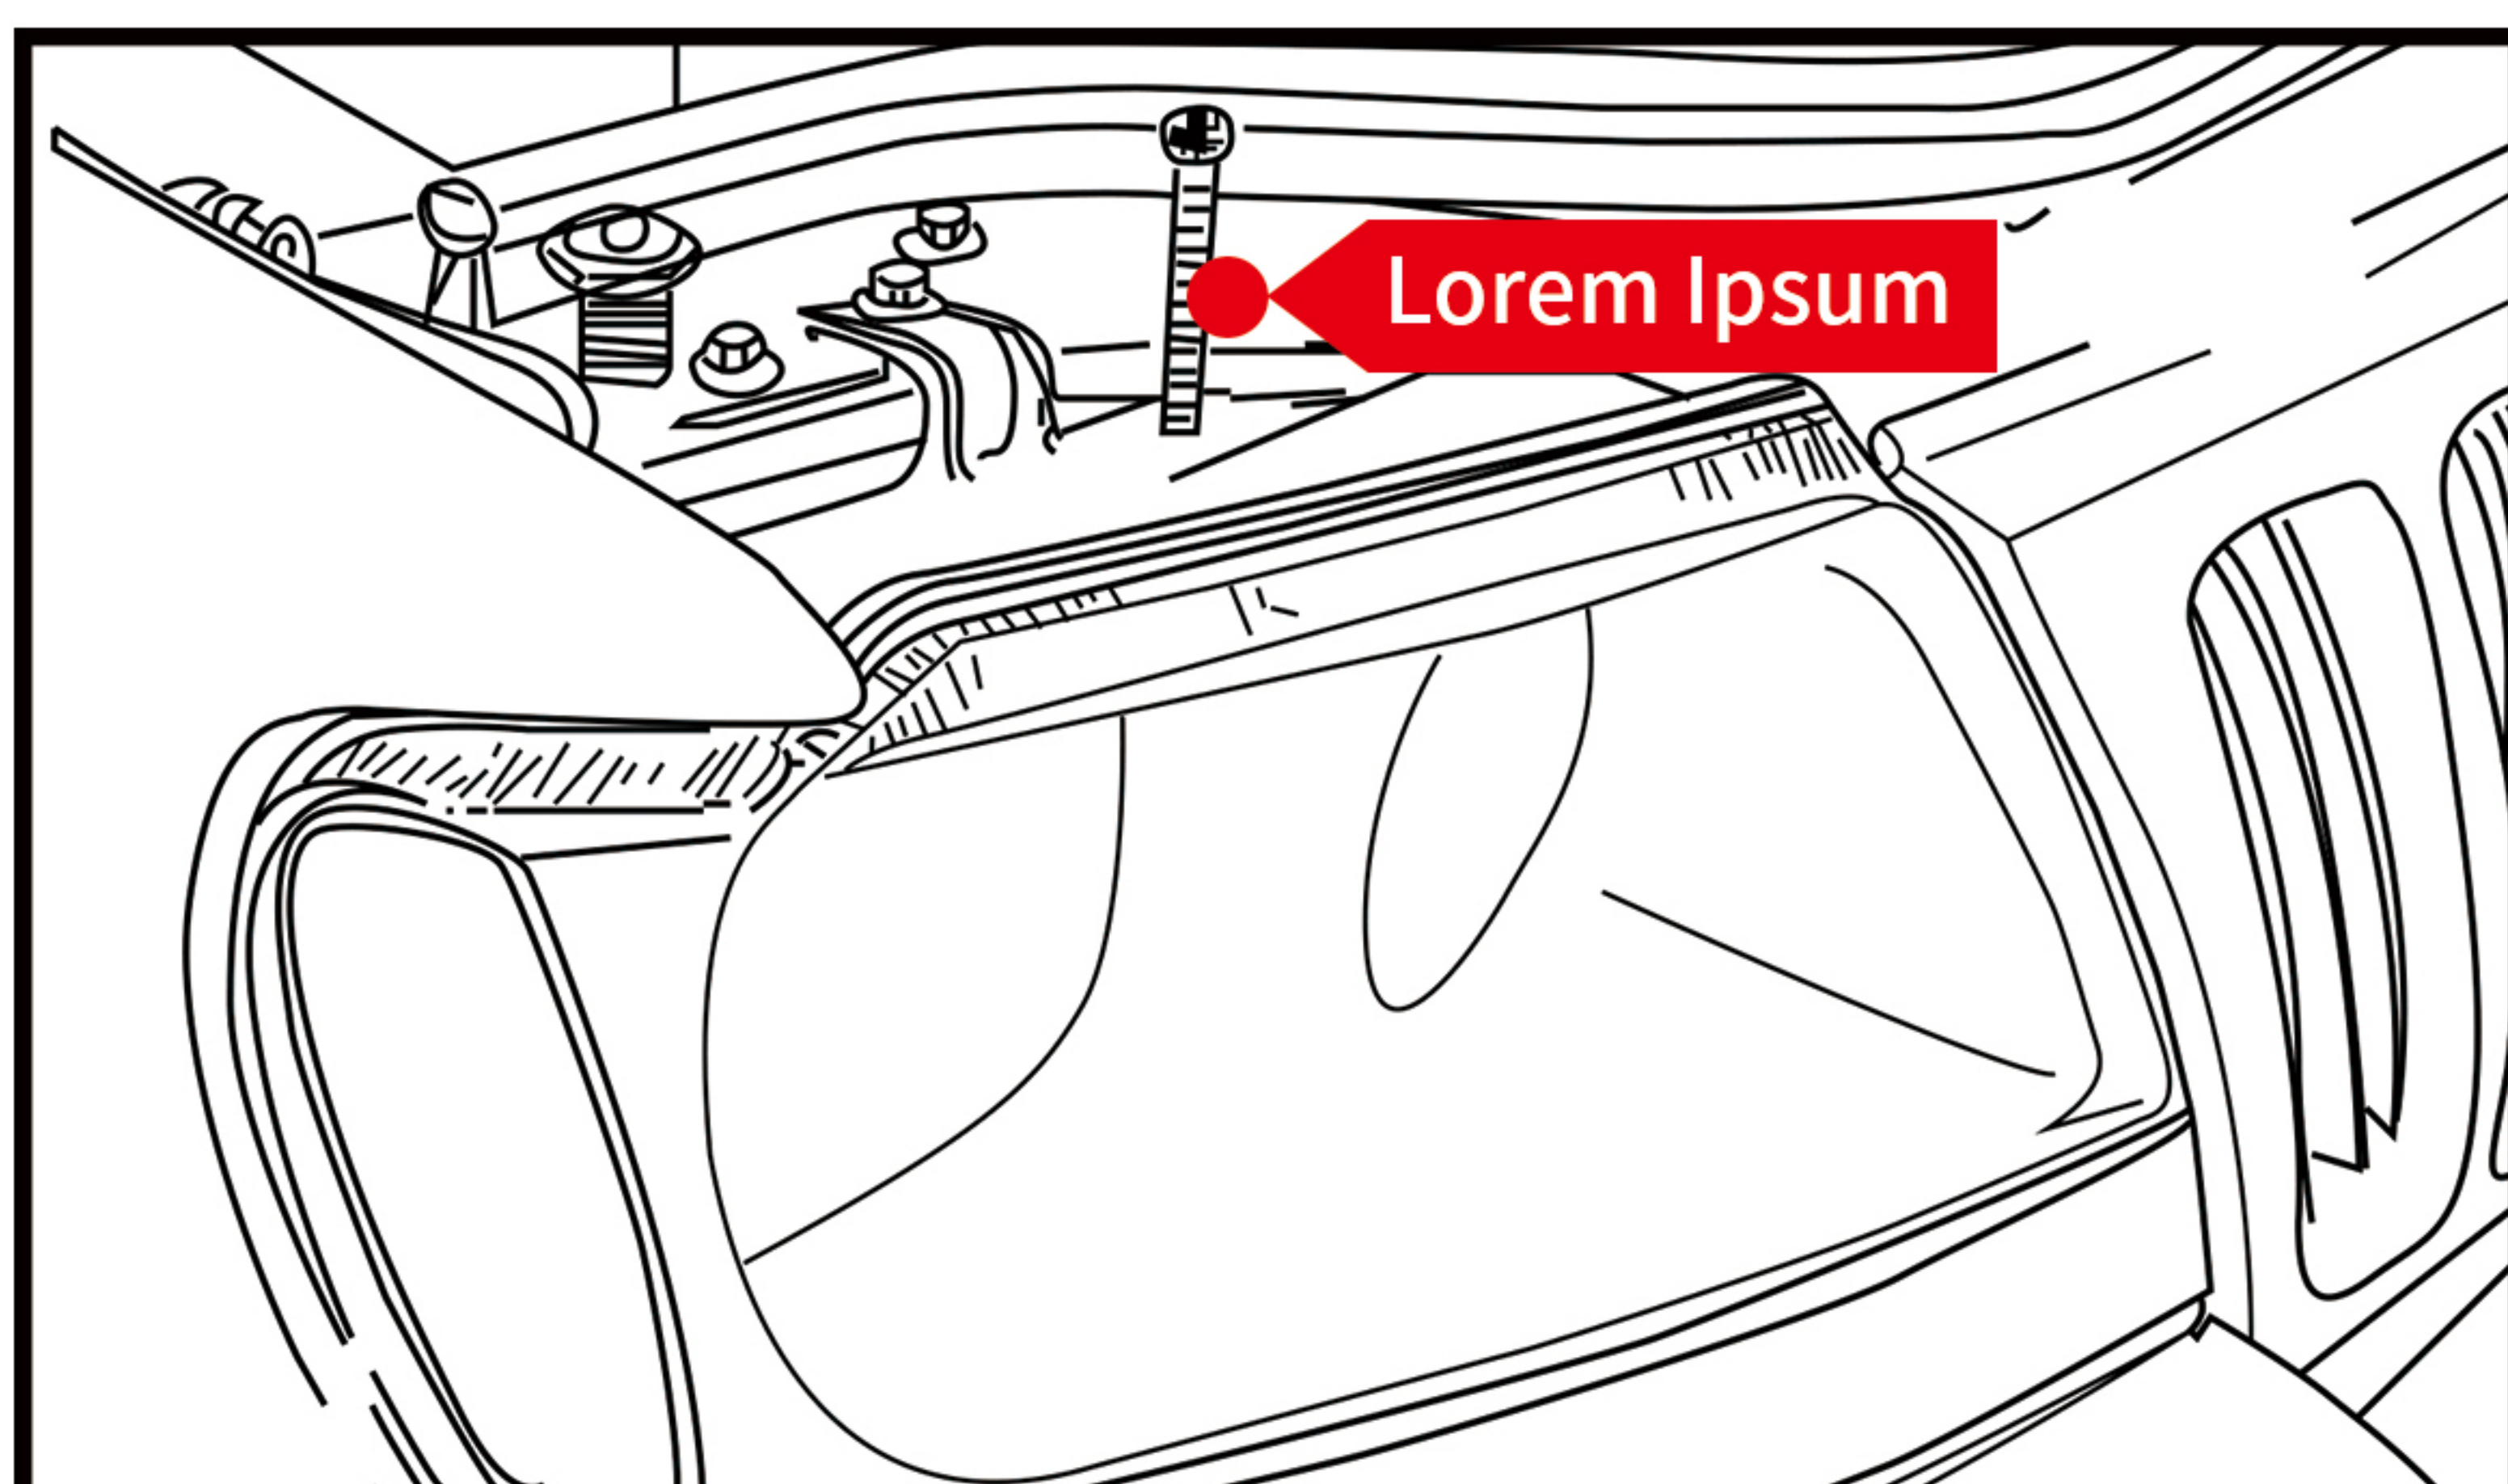

1. Remove the jack screw on the top of the headlamp.
2. Pull the headlamp forward.
3. Twist high beam and low beam bulbs counterclockwise.
4. Twist signal parking light and side mark light sockets counterclockwise.
5. Remove bulbs and sockets from the old headlamp.
6. Remove the old headlamp.

STEP 2

1. Insert high beam and low beam bulbs into the new headlamp.
2. Twist bulbs clockwise to secure.
3. Insert signal parking light and side mark light sockets into the new headlamp.
4. Twist sockets clockwise to secure.

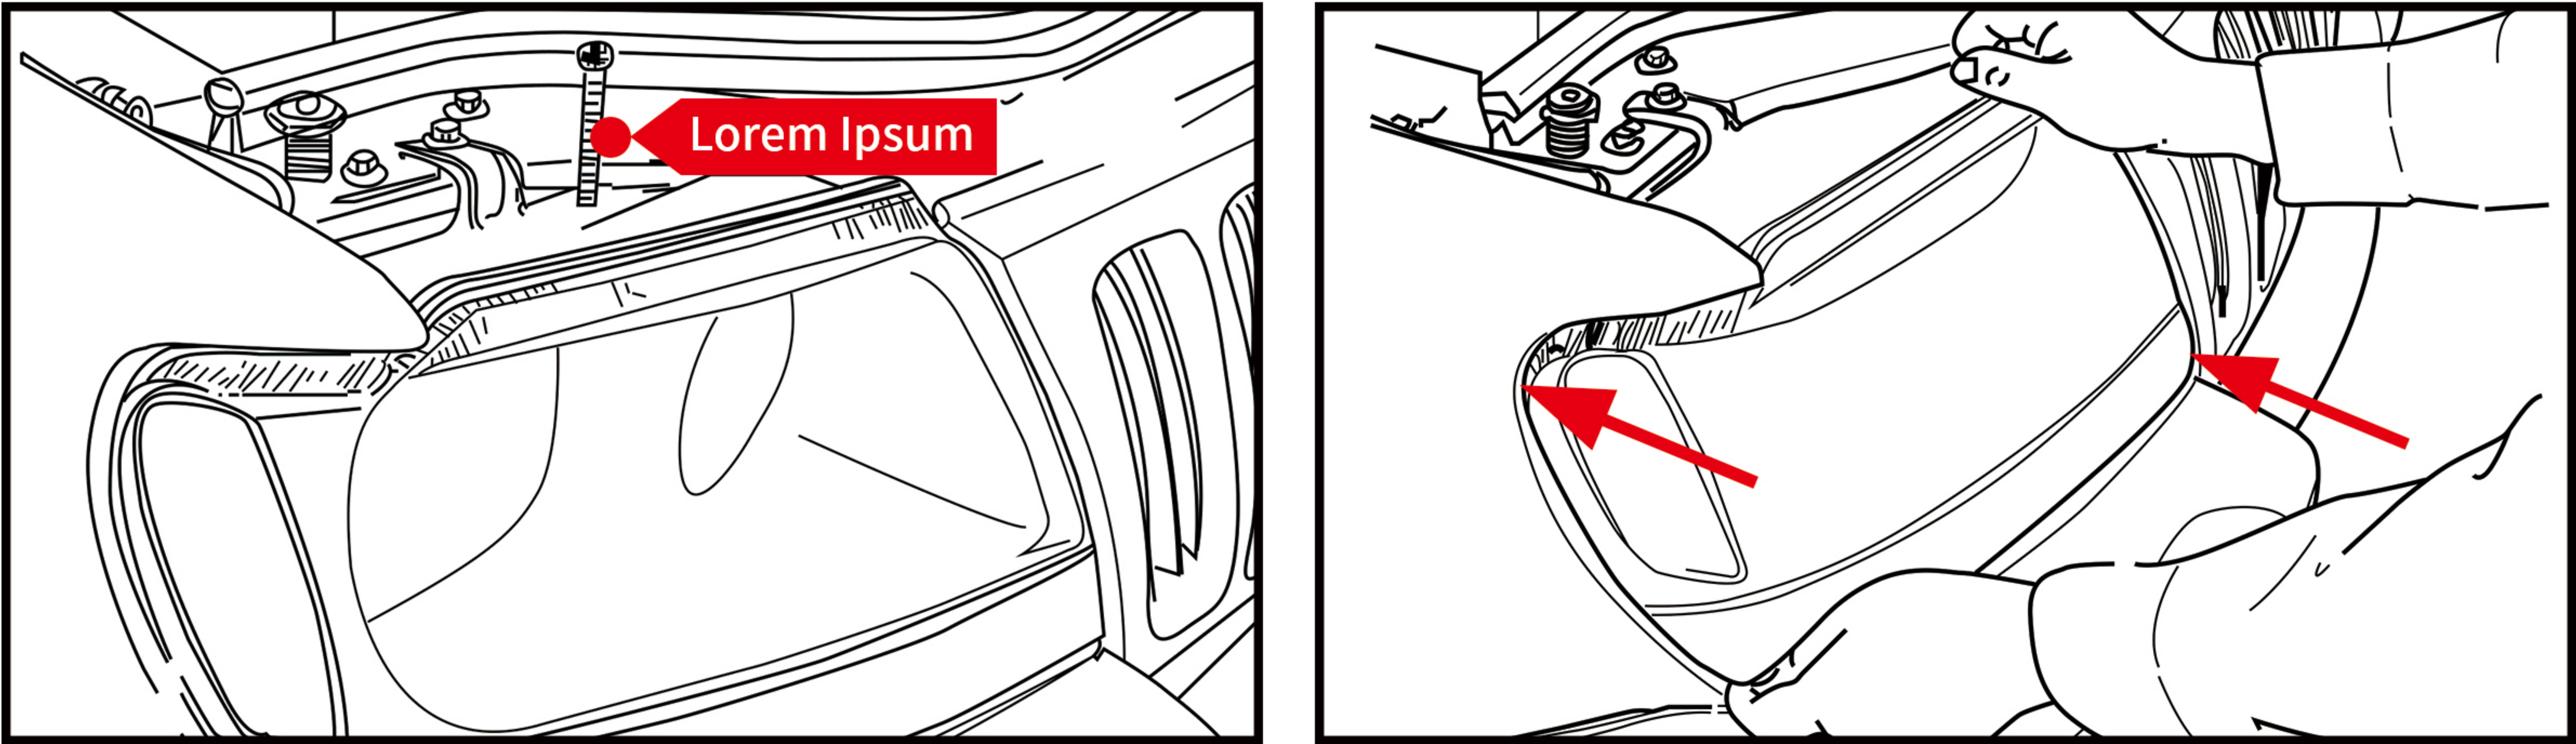

- 1.Place the headlamp on vehicle and align ball studs with sockets.
- 2.Push the headlamp inward to secure ball studs with sockets.
- 3.Install jack screw attaching top of the headlamp to secure.
- 4.Repeat above steps on the other side.

WARM TIPS



Before you begin to adjust the light, make sure check the alignment of your lights first. Park the vehicle about 10 to 25 feet from the wall with the lights aimed at the wall. The centerlines of the headlights should not be any higher than 3.5 feet above the ground.

1. Find the adjustment screws.
2. Adjust the headlights individually.
3. Adjust the vertical field.
4. Test your results.