

Tools Required

8mm Socket

Electric Drill

Ratchet

Notes

Read this instruction carefully before starting installation.

Proper tools will improve the quality of installation and reduce the time required.

If missing parts or any damage found, please take a picture, and contact us.


Step 1:

1. Disconnect side mark lights, twist bulb socket counter-clockwise.
2. Detach all hardware and remove front and rear fender flares.
3. Remove front fender extension.

Step 2:

Ensure body panels are clean before installation.

1. Attach front fender flare to the front fender panel.
2. Align front fender flare with the front fender panel margin-bottom.

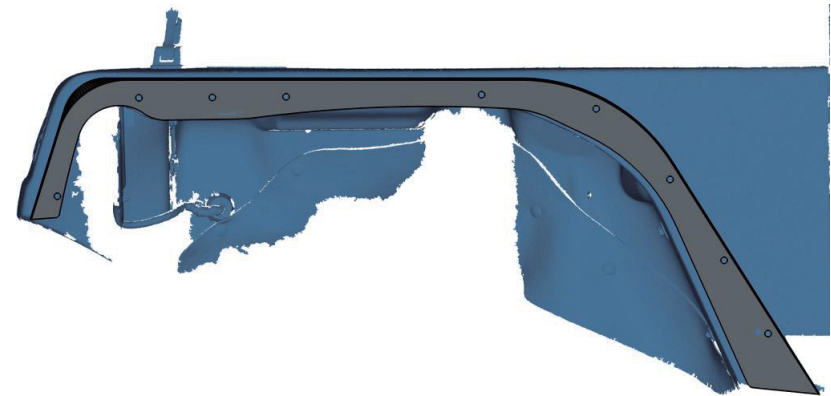


3. Secure the front fender flare on body panel with (9) M5×15 drilling screws.




Step 3:



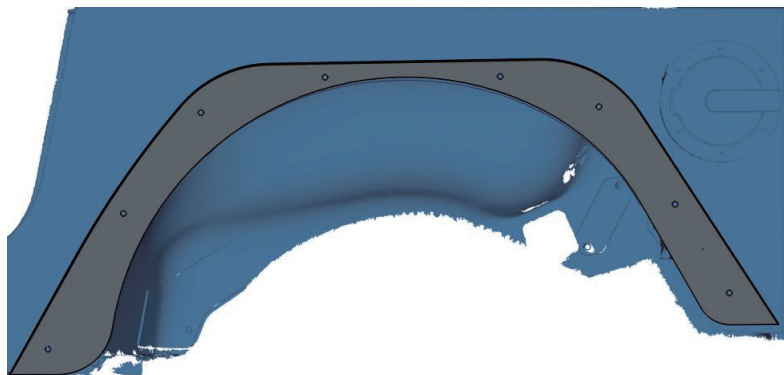


1. Attach rear fender flare to the rear body panel.
2. Align rear fender flare with the body panel margin-bottom.

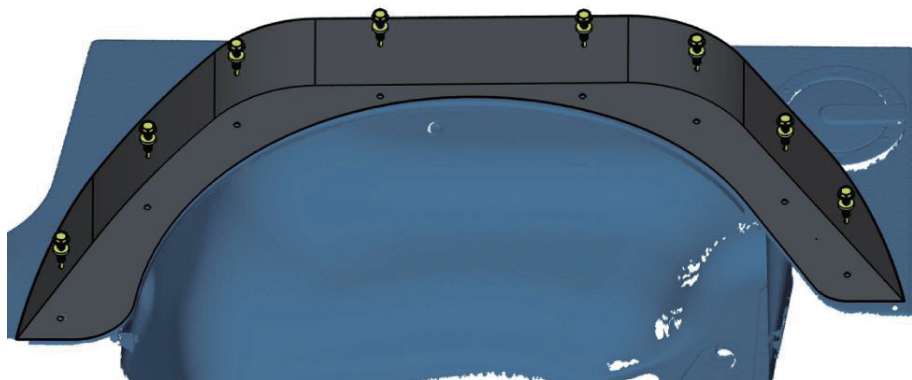

3. Secure the rear fender flare on body panel with (8) M5×15 drilling screws.



Part List:

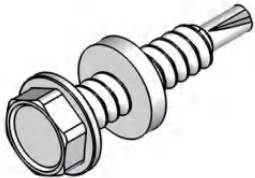			
Front Driver Side Fender Flare	×1	Front Passenger Side Fender Flare	×1
			
Rear Driver Side Fender Flare	×1	Rear Passenger Side Fender Flare	×1
			
M5×15 Drilling Screw	×36		