
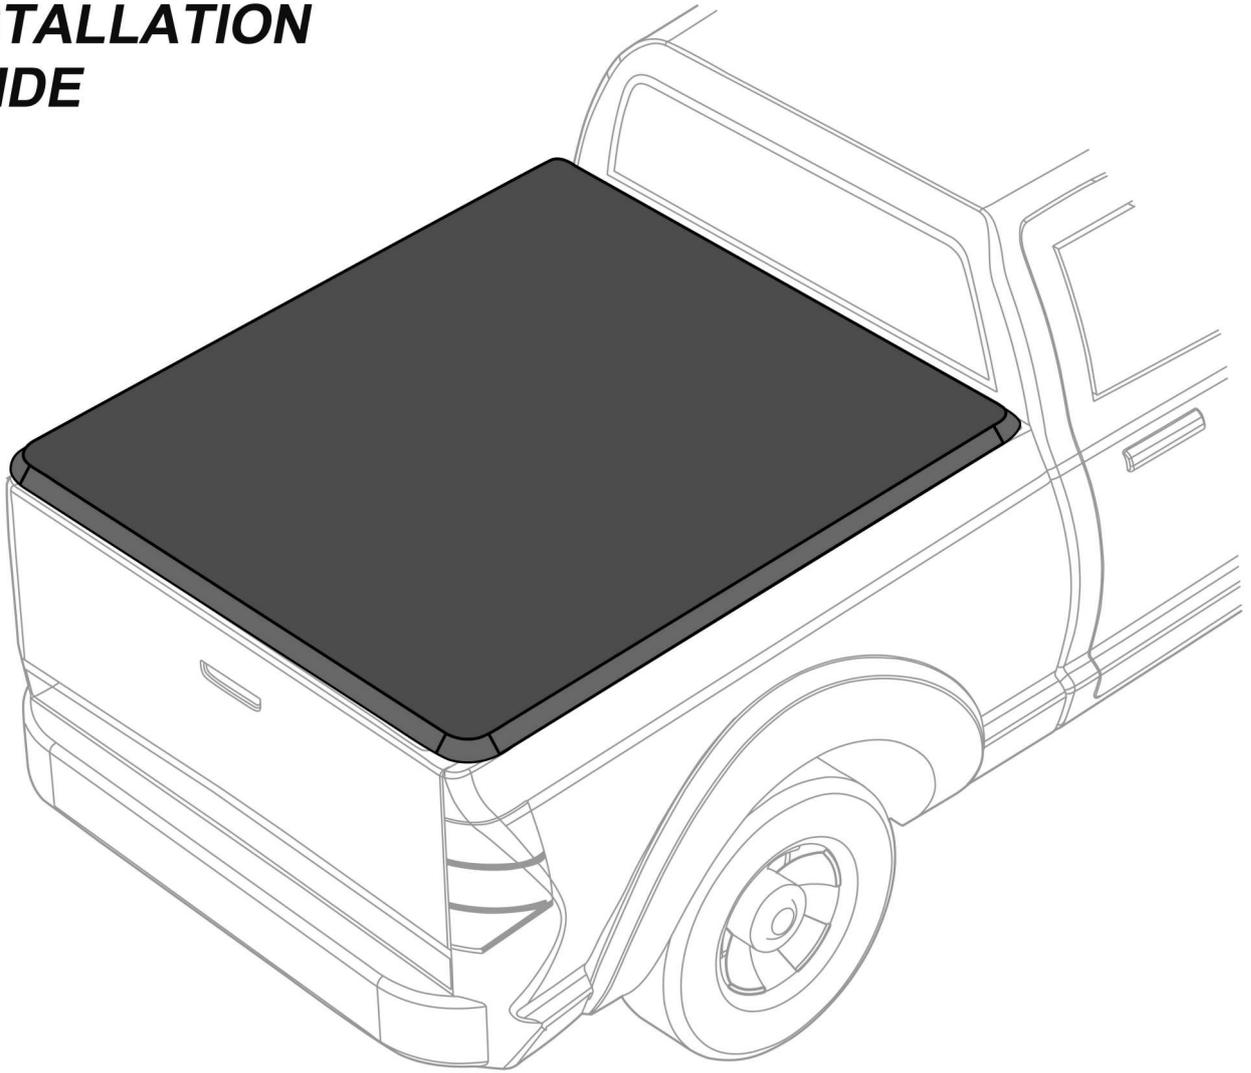


SOFT ROLL UP TONNEAU COVER

INSTALLATION GUIDE




Part List

①	X1		Bed cover
②	X2		Side Raile(L&R)
③	X6		Aluminum Bracket
④	X6		Upper Clamp
⑤	X6		Screw
⑥	X1		Hexagonal Wrench
⑦	X1		Seal Strip 118(in)
⑦	X1		Fixed Block

- 1.**
- Clean the truck bed thoroughly before installation.
 - Stick the supplied front seal strip on the front bed rail by aligning it with the outer edge.

You might need:



Seal Strip


(Only apply to some models)



ATTENTION!



- IF THE TRUCK'S FRONT BED RAIL IS LOWER THAN THE SIDES, USE THE PROVIDED WEATHER SEAL STRIPS. GAPS ON THE FRONT BED AND TAILGATE WILL CAUSE NOISE AND FLAPPING ISSUES WHILE THE VEHICLE IS IN MOTION!

- 2.**
- Place cover assembly on the front truck bed rail against the cab. Loosen the screw in bulkhead assembly on both sides, then slide in the side rails.
 - Reinstall and tighten screws to attach side rails to cover assembly.

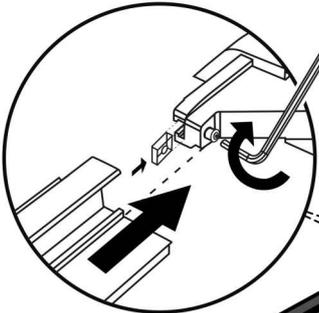


ATTENTION!

- MAKE SURE THE SIDE RAIL LINES UP WITH THE INNER EDGE OF THE TRUCK BED RAIL. PLACE THE SIDE RAILS EVENLY SO THAT THE DISTANCE BETWEEN THE REAR END OF THE SIDE RAIL TO THE TAILGATE IS THE SAME ON BOTH SIDES.

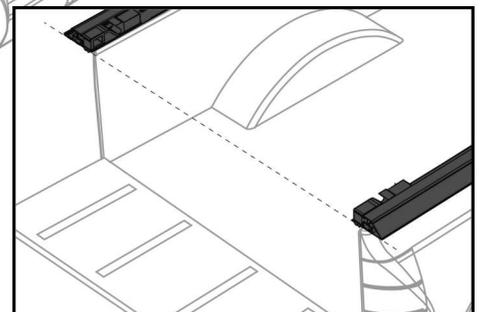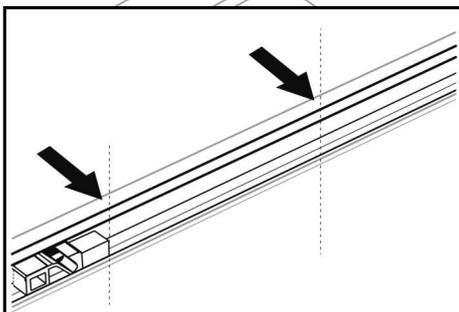


3. Special Installation for Honda Ridgeline


- Remove 6 OEM screws from 6 indicated locations.

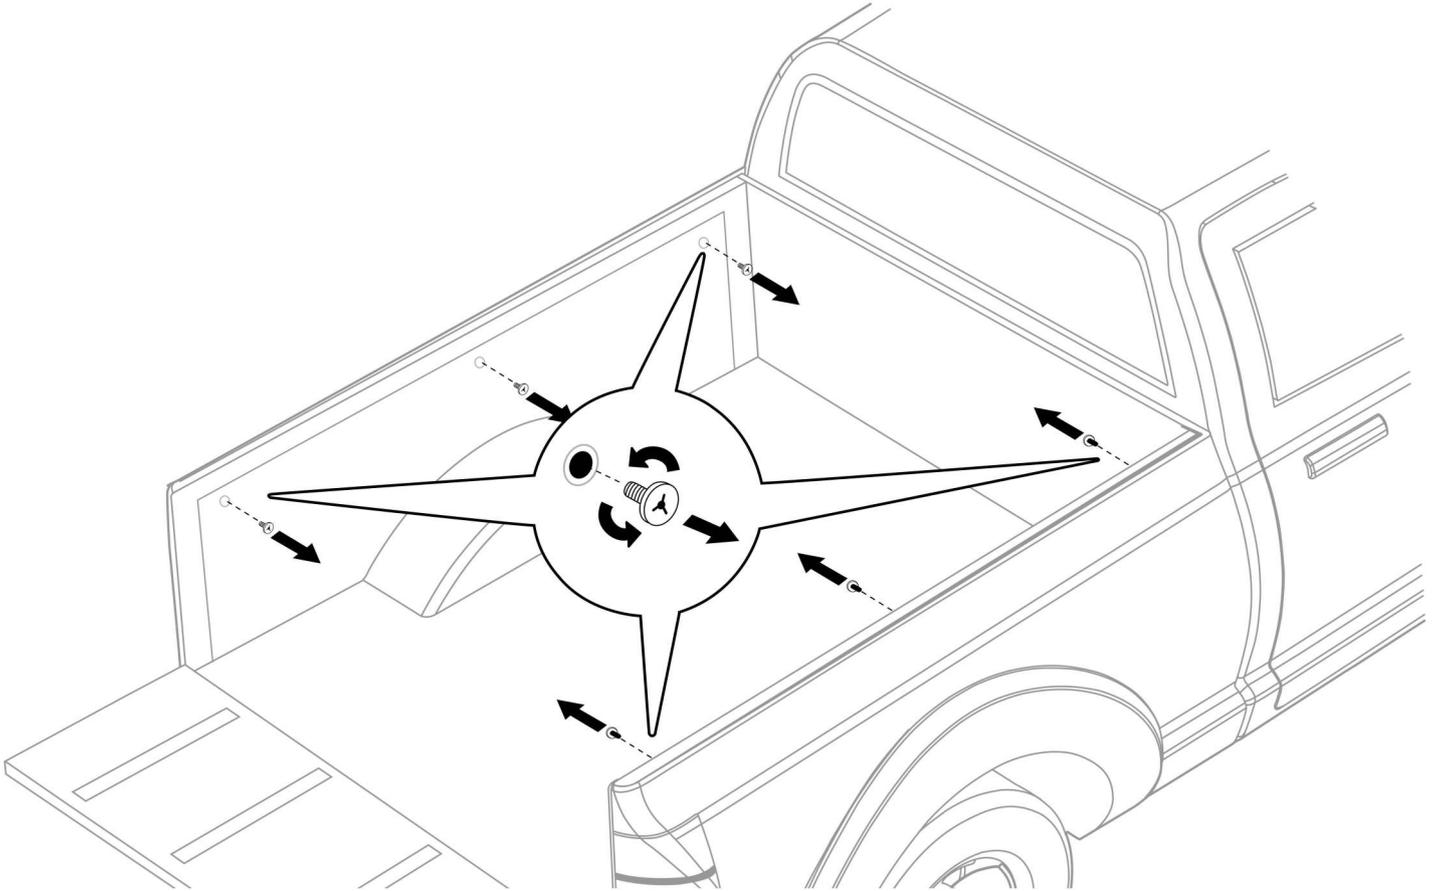


- Use the OEM screws to secure the 6 brackets on each side to the factory holes.

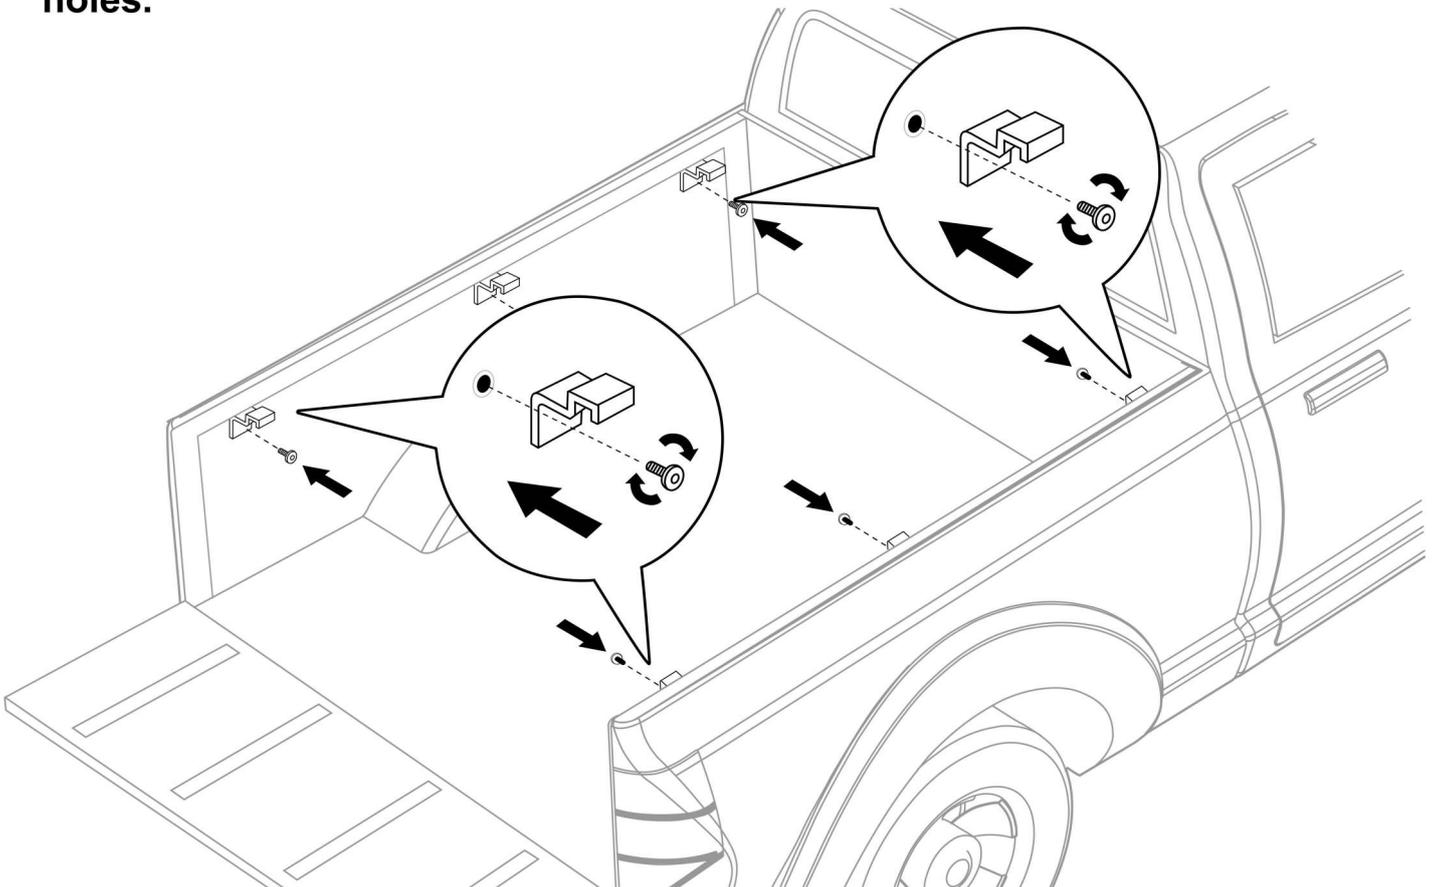


- 4** • Hook the upper clamp into the inner channel of the side rails. Then adjust the position of the upper clamp to align it with the aluminum bracket and tighten it with screws.

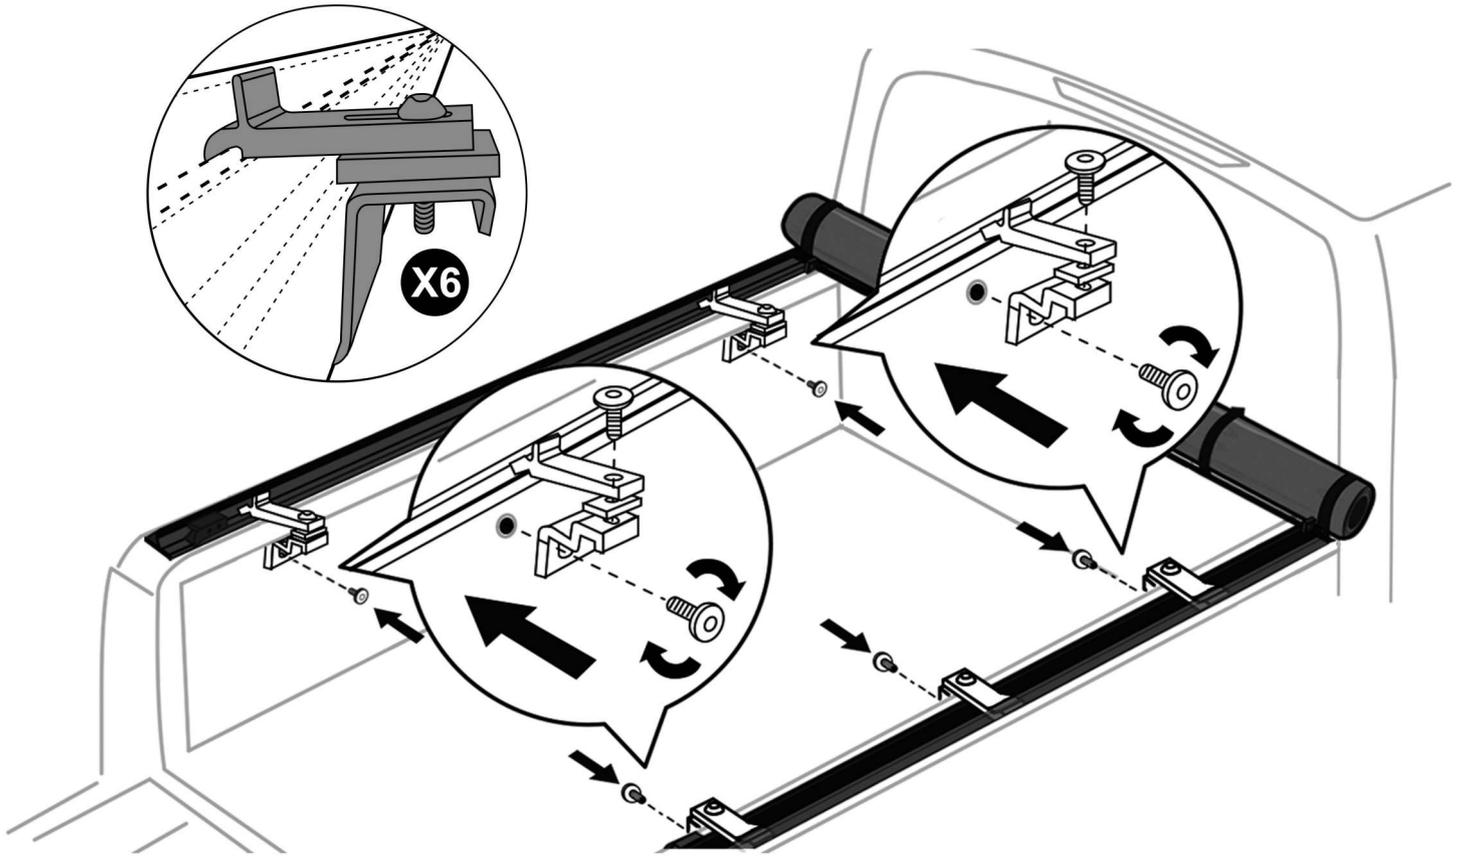


- 5** • Untie the spring cords on both sides of the bed cover and unfold the bed cover to ensure correct and neat coverage of the entire lathe

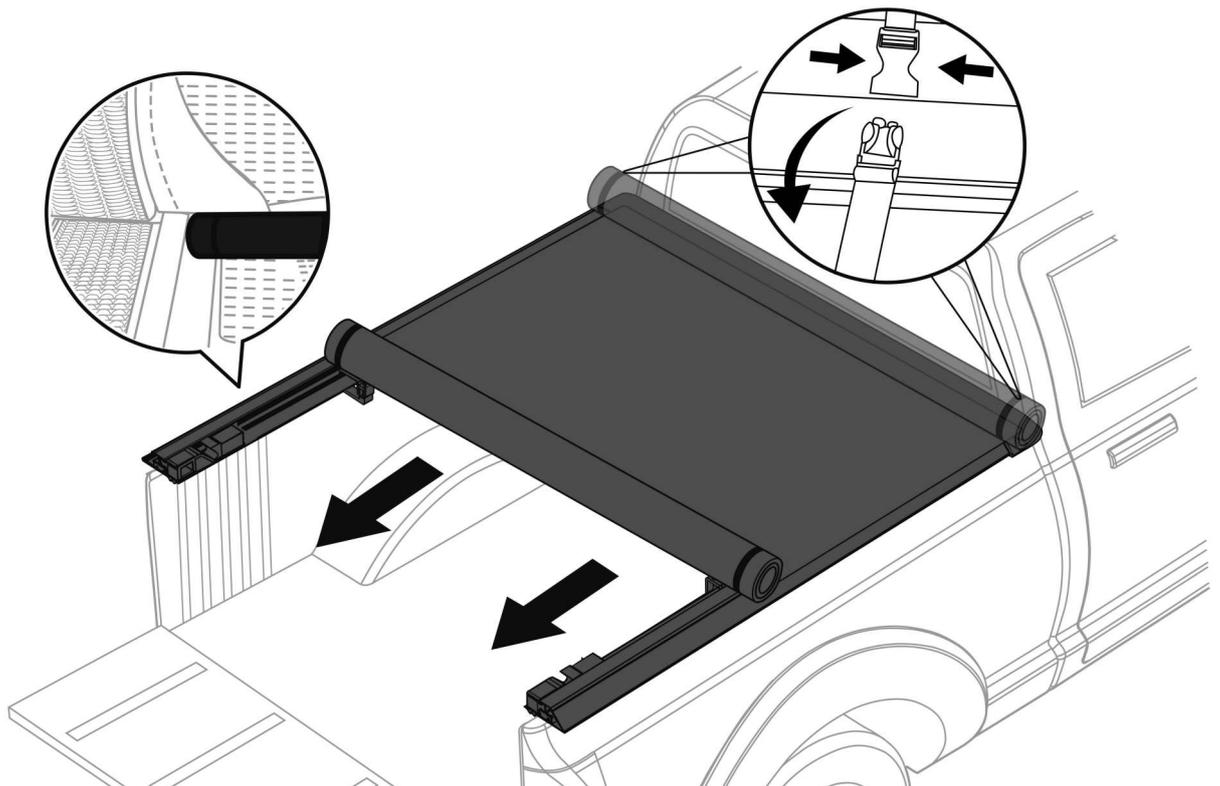

6. • Snap the tail lock into the lock groove of the side rails as shown

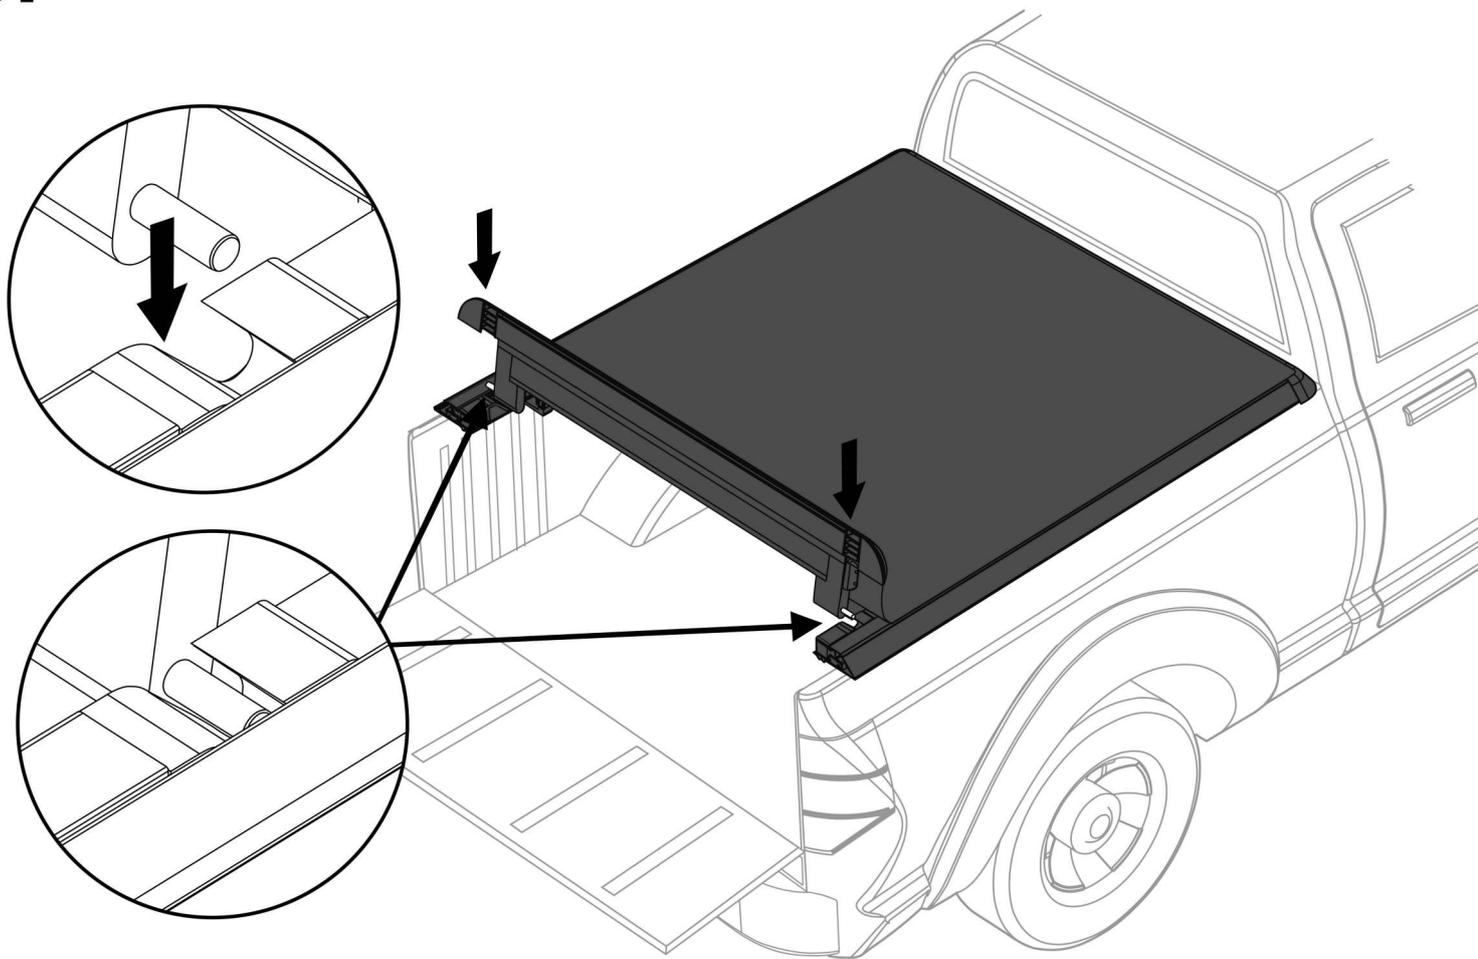


7. • Press down to close the cover and the lock will automatically clamp.

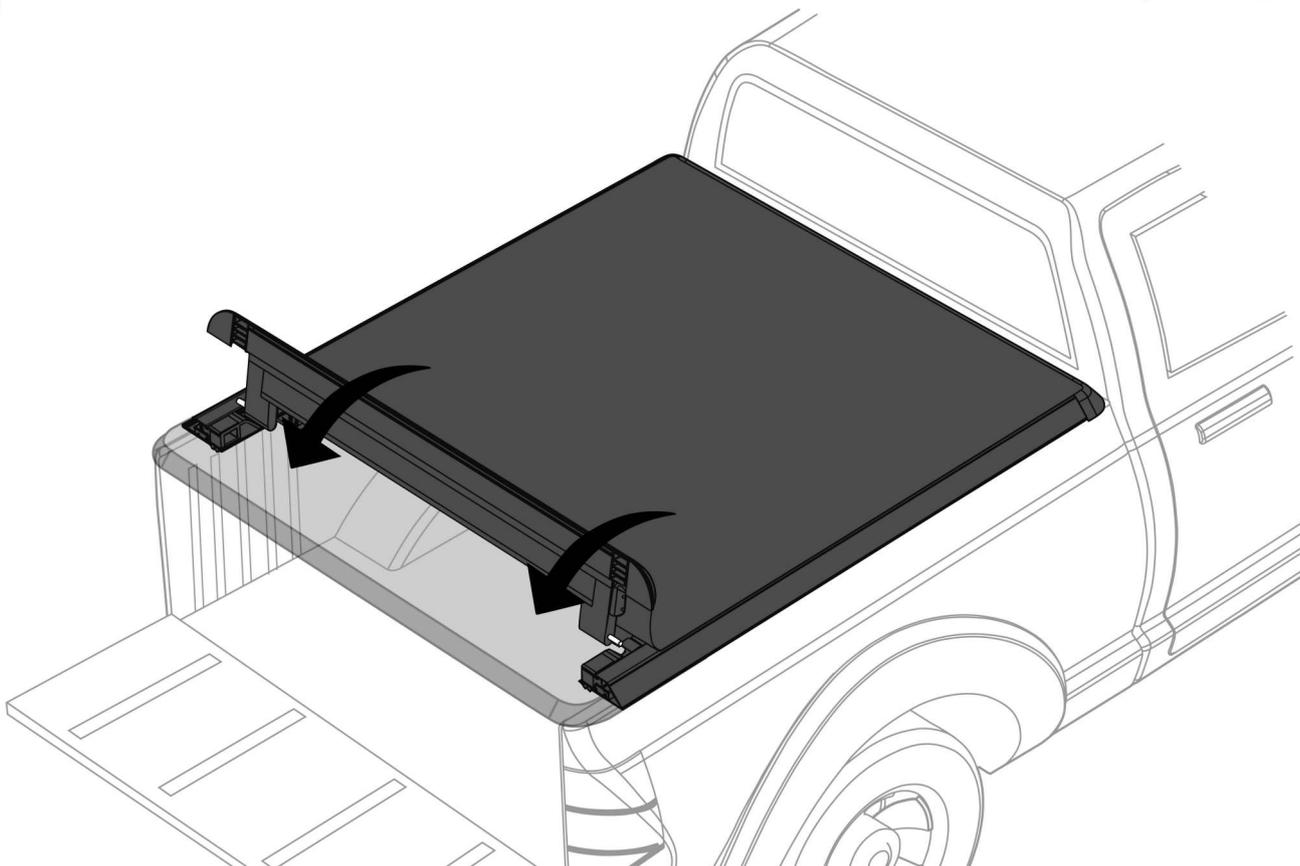

8. FINISH THE INSTALLATION


- Tighten the nylon buckle on both sides of the bed cover. Make the cover more docile and overall, and finally complete the installation.

COMPLETED!!!

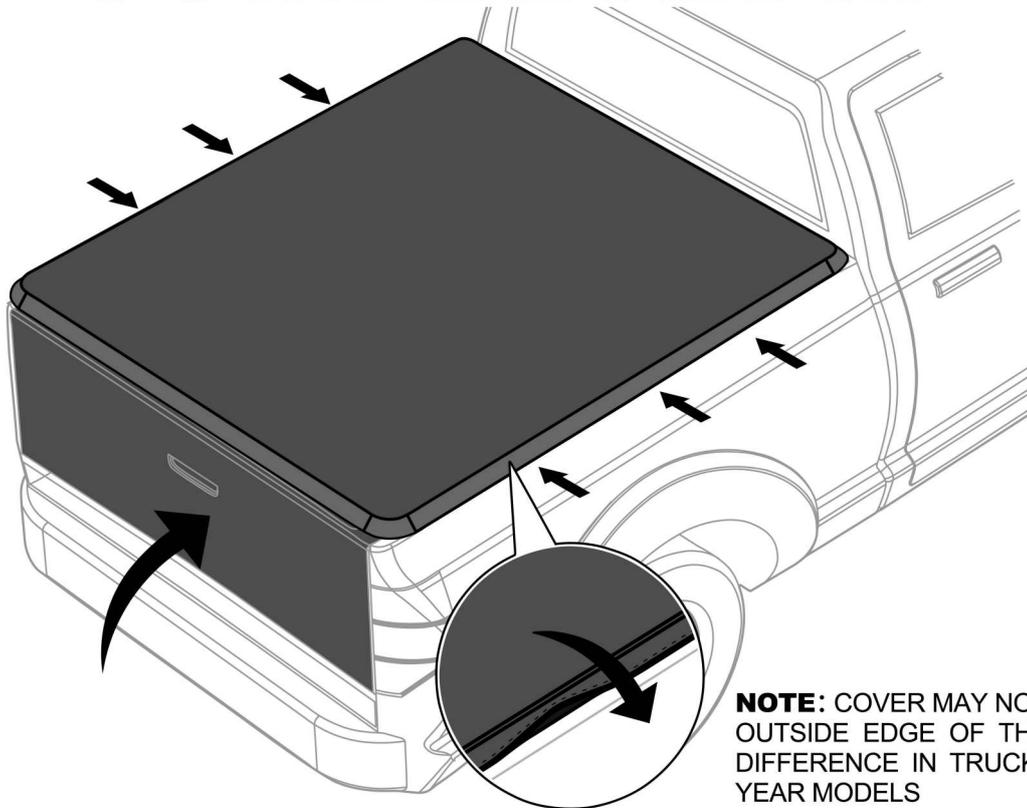


NOTE: COVER MAY NOT COMPLETELY COVER TO THE OUTSIDE EDGE OF THE BED RAILS DUE TO SLIGHT DIFFERENCE IN TRUCK BED SHAPE FOR DIFFERENT YEAR MODELS

- ## 9.
- Open the tailgate, pull down the rope, and the lock will automatically open.

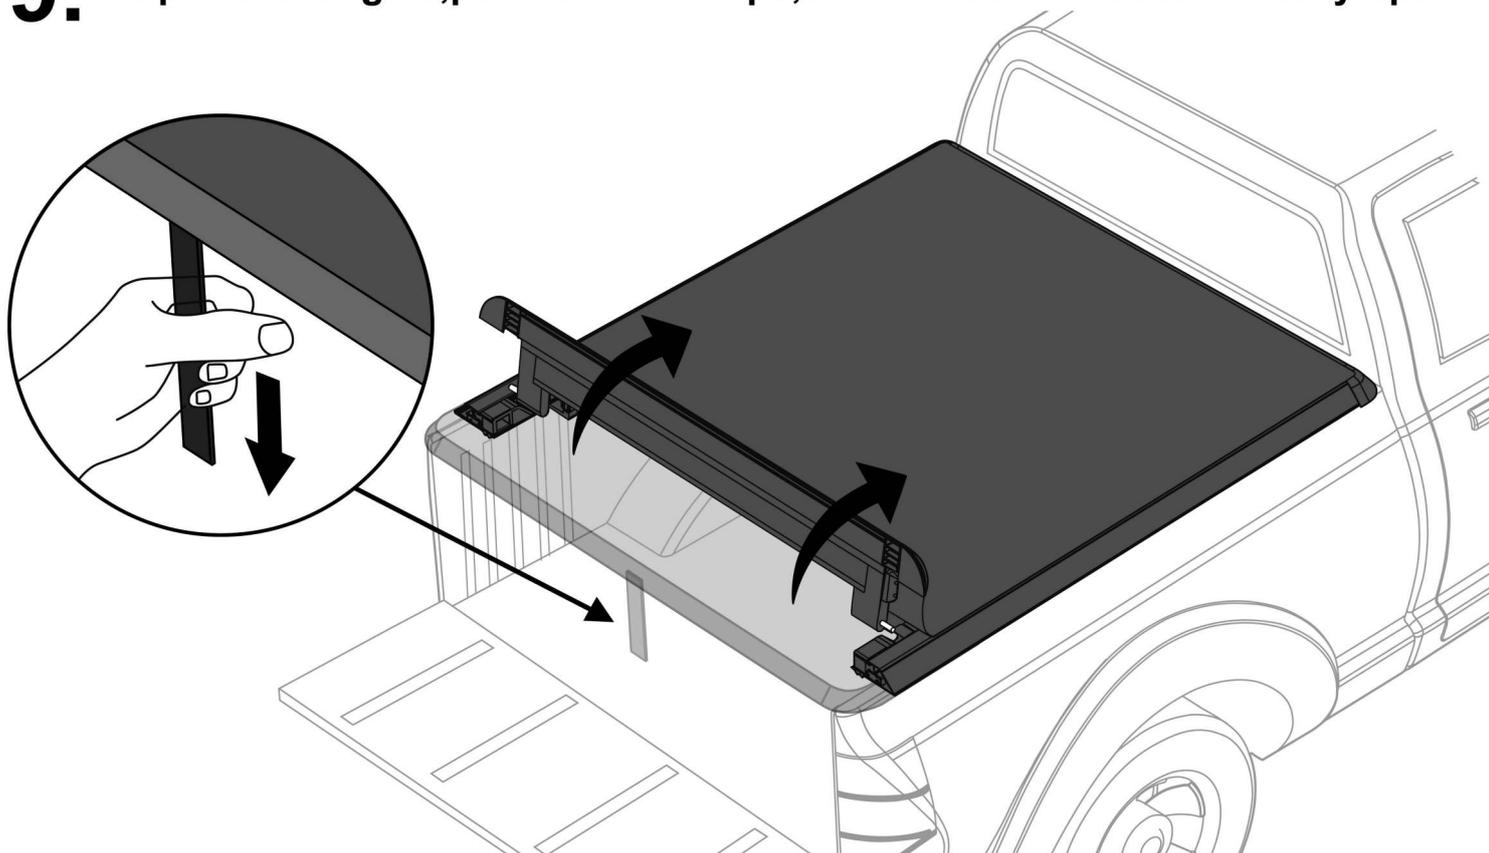

- 10** • Roll up the tarp and secure it with safety clasps to enjoy plenty of bed space.

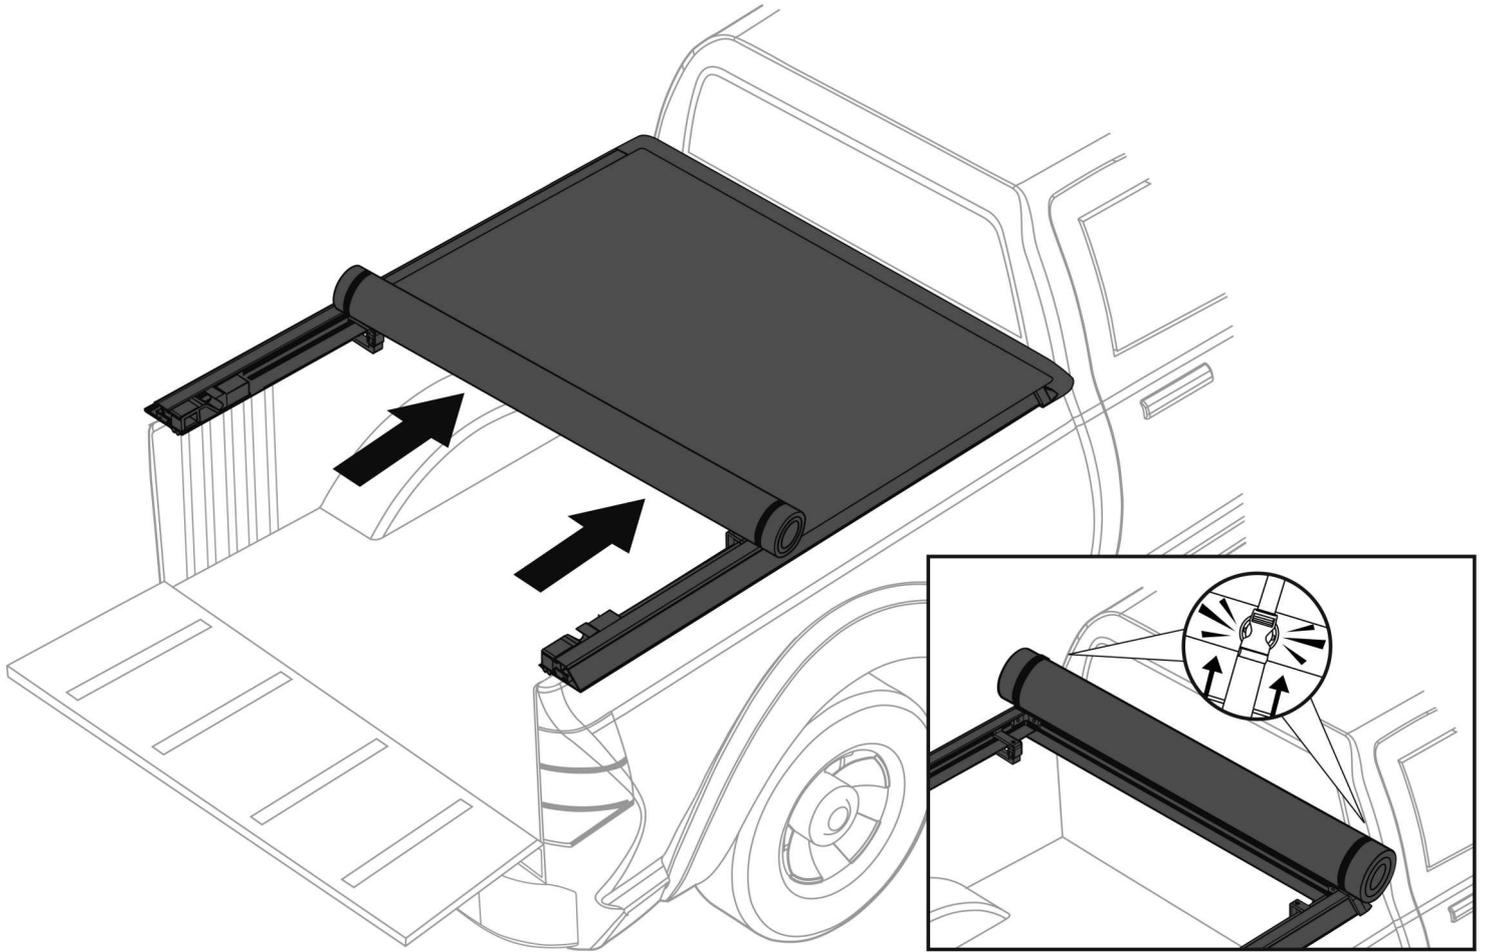

- 11** • There is a scale label at the end of the side rail. If you find that the bed cover tarp is loose, you can move the tail lock back as needed to make the canvas tighter.

