

Tools Required

13mm, 16mm Socket
13mm, 16mm Wrench
Ratchet
Torque Wrench

Before Installation:


Read this instruction carefully before starting installation.

Proper tools will improve the quality of installation and reduce the time required.

Remove the paint buildup on the factory threaded studs.

If missing parts or any damage found, please take a picture and contact us.

Professional installation would be highly recommended.

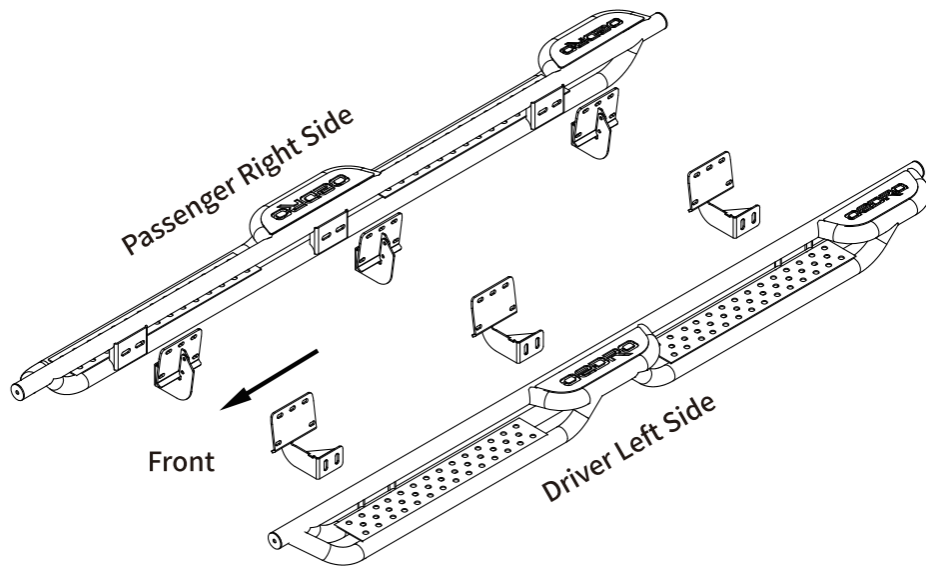


Step 1:

1. Locate (3) mounting positions each side.
2. Remove the paint buildup on the factory threaded studs.
3. Clean the sealant and dirt around mounting positions.

Step 2:



1. Attach bracket arm to the bracket base and secure with (2) M8 hex bolts, (2) M8 flat washers, (2) M8 hex nuts.
2. Repeat to assemble all brackets. Do not fully tighten.

Note: Passenger side bracket as shown.

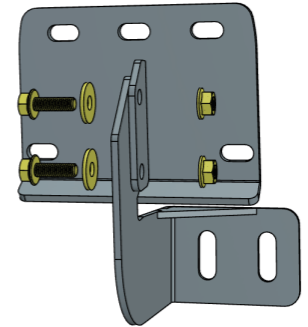



Step 3:

1. Attach bracket assembly to the inner rocker panel, feed the factory studs through the holes on mounting bracket.
2. Secure the mounting bracket with (3) M8 flat washers, (3) M8 hex nuts.
3. Repeat to install all brackets. Do not fully tighten.

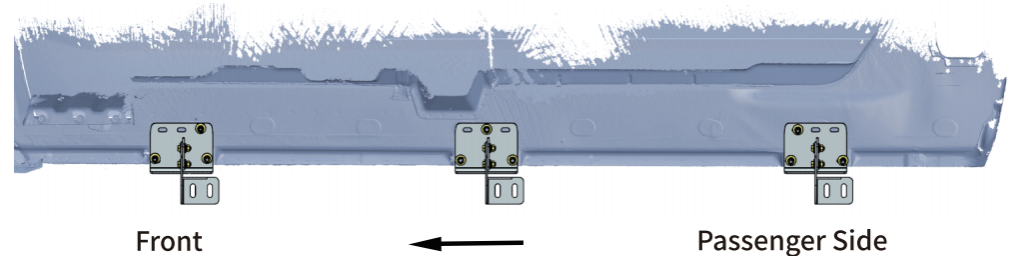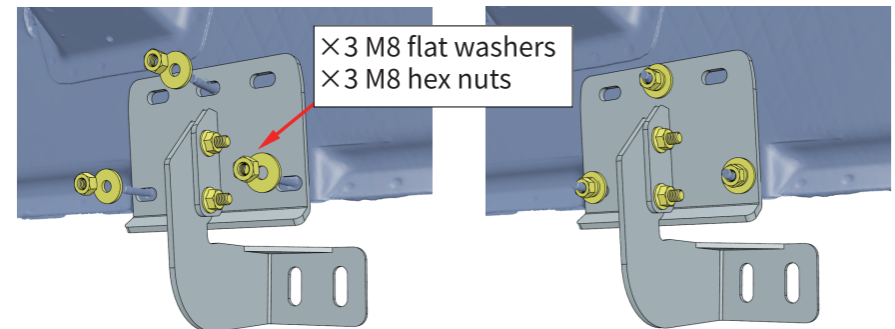

Step 4:

1. With assistance, lift and attach the step bar to brackets. Secure the step bar on brackets using (6) M10 hex bolts, (12) M10 flat washers, (6) M10 lock washers, (6) M10 hex nuts.
2. Repeat to install the other side step bar.

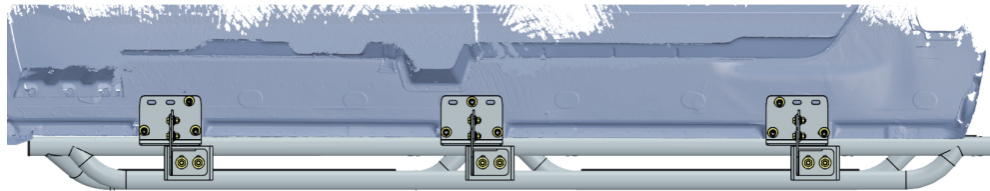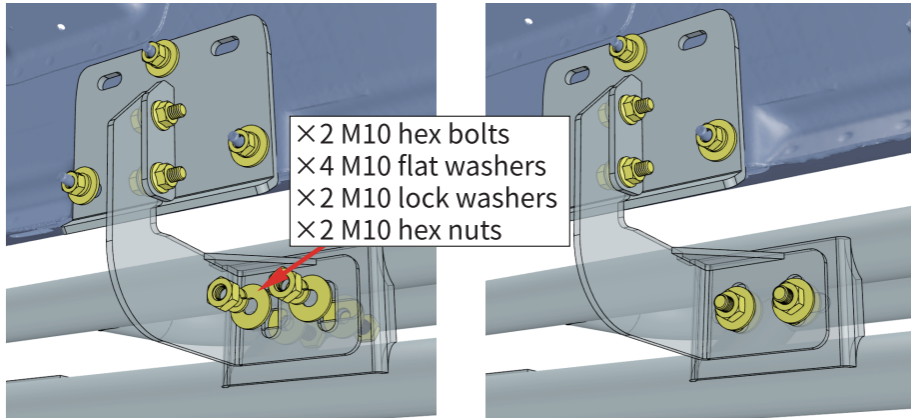

Front


Passenger Side

Step 5:


1. Tighten M8 hex bolts and nuts on vehicle side with 15 ft. lbs. torque.
2. Adjust the step bar to level and tighten M10 hex bolts and nuts with 30 ft. lbs. torque.
3. After the step bar installed, periodic check to ensure all mounting hardware remains secure and tight.

Part List:


	Qty.	Description
①	× 6	Bracket Mounting Base
②	× 3	Driver Side Bracket Arm(D)
③	× 3	Passenger Side Bracket Arm(P)
④	× 12	M10×30 Hexagon Bolt
⑤	× 12	M8×25 Hexagon Flange Bolt
⑥	× 24	M10×30 Flat Washer
⑦	× 30	M8×24 Flat Washer
⑧	× 12	M10 Lock Washer
⑨	× 12	M10 Hexagon Nut
⑩	× 30	M8 Hexagon Flange Nut

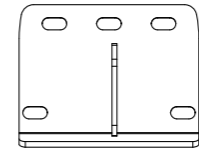


①

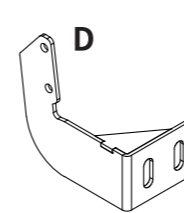


②




③

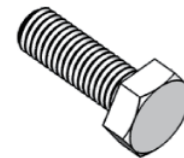


④

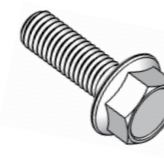


⑤

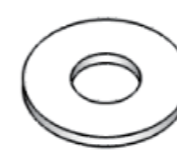


⑥

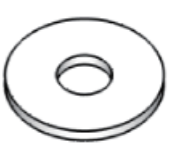

⑦



⑧

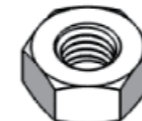

⑨



⑩