


Tools Required

13mm Socket



Ratchet

Torque Wrench

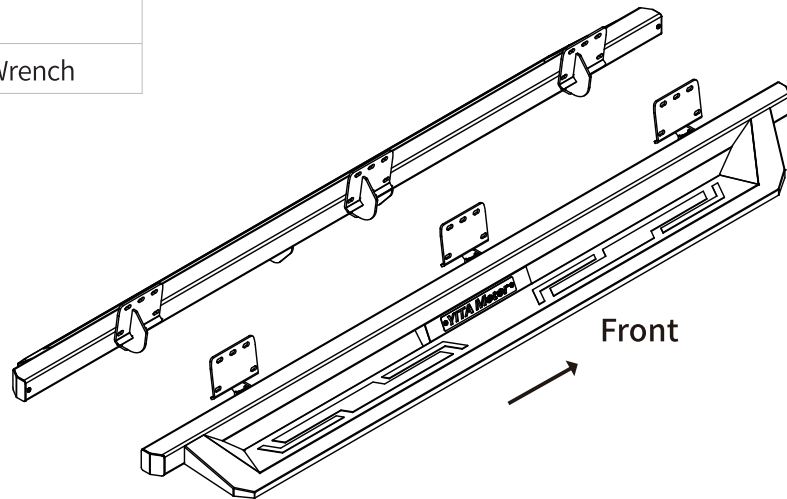

Step 2:

1. Attach the bracket to the factory studs on inner rocker panel.
2. Secure the bracket to inner rocker panel with (3) M8 flat washers, (3) M8 lock washers, (3) M8 hex nuts.

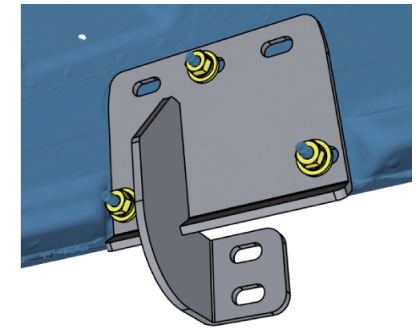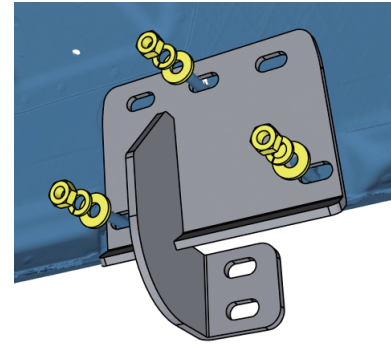

Center Passenger Side


Notes

Read this instruction carefully before starting installation.
Proper tools will improve the quality of installation and reduce the time required.

Remove the paint buildup on the factory threaded studs.

If missing parts or any damage found, please take a picture and contact us.

Professional installation would be highly recommended.

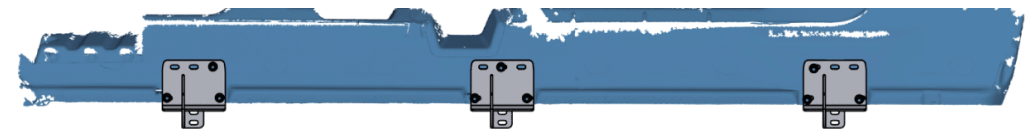

Front



Passenger Right Side

Step 1:

1. Locate (3) mounting positions each side.
2. Clean factory painting on mounting studs before installation.
3. Clean the sealant and dirt around mounting positions.

Step 3:

1. With assistance, lift and attach the step bar to the brackets.
2. Secure (3) support brackets and step bar onto brackets with (9) M8 flat washers, (9) M8 lock washers, (9) M8×30 hex bolts.

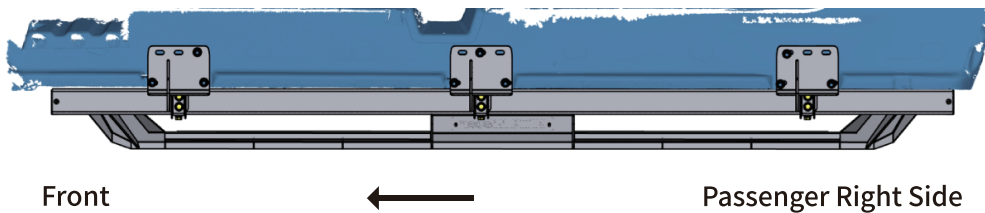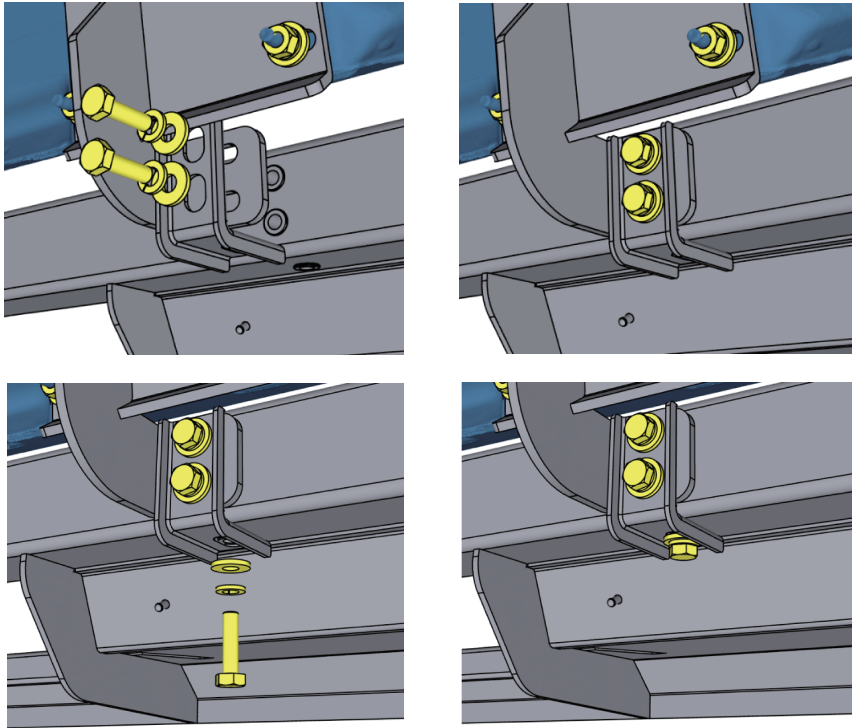


Step 4:


1. Tighten M8 hex nuts on vehicle with 15 ft. lbs. torque.
2. Adjust the step bar to level and tighten M8 hex bolts with 15 ft. lbs. torque.
3. After the step bar installed, periodic check to ensure all mounting hardware remains secure and tight.

Part List:


	Qty.	Description
①	×18	M8×30 Hexagon Bolt
②	×36	M8 Flat Washer
③	×36	M8 Lock Washer
④	×18	M8 Hexagon Nut
⑤	×6	Mounting Bracket
⑥	×6	Support Bracket

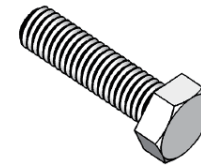


①

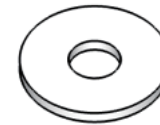

②



③



④



⑤



⑥