




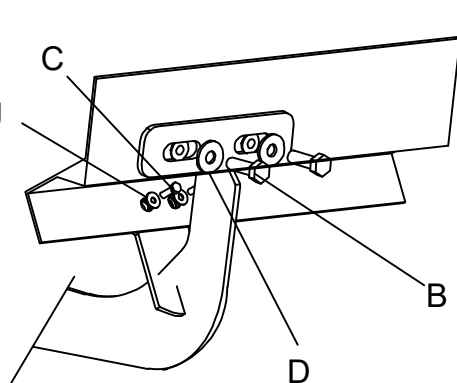
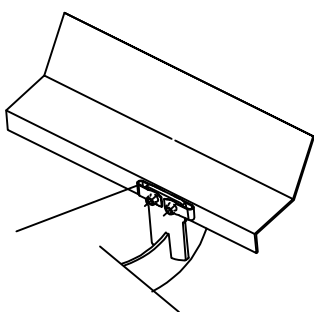
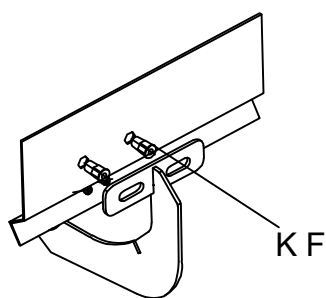




# INSTRUCTION

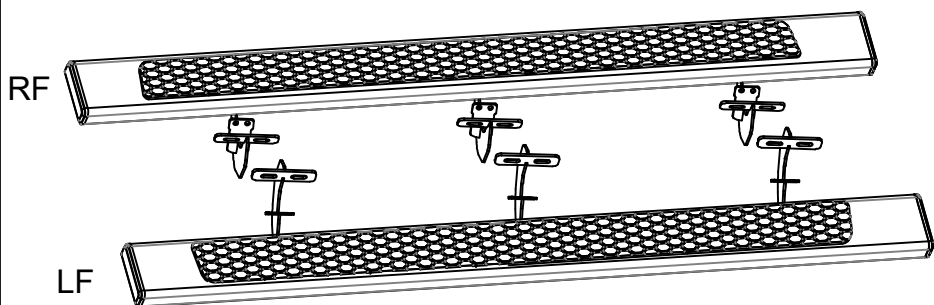


screws install on  
the car


B	8*30	C	6*30
12pcs		12pcs	
D	8*22	F	M6*25
12pcs		12pcs	




J	M6*20
12pcs	
K	M8*13
12pcs	

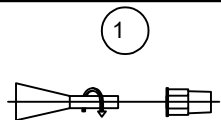


1  
Crimp nut is set in  
fixing tool

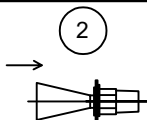


2  
Crimp nut is  
inserted in hole of  
work

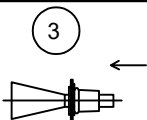


3  
The bulge is formed  
by turning tool

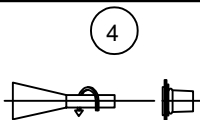



4  
After the bulge is  
completely expanded the  
tool is removed

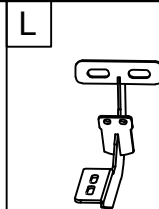

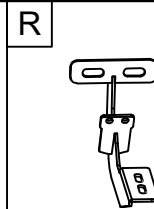

L  
3pcs

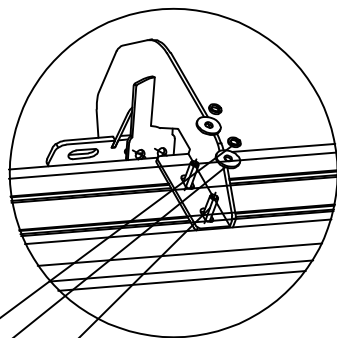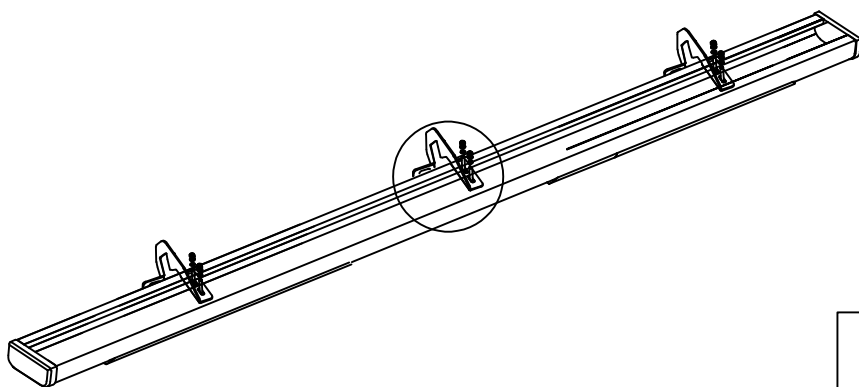

R  
3pcs



screws install on the  
nerf bar

B	8*30	D	8*22	E	8*2
12pcs		12pcs		12pcs	