



## Suit For 99-02 Silverado/99-06 Sierra Poket Style Fender Flares

### TOOLS REQUIRED

Drill Motor   Utility Knife   Wrench   Driver Bit   Torx Bit

### PARTS

FENDER FLARE BACK LEFT 1 PC (FL)

FENDER FLARE FRONT RIGHT 1 PC (FR)

FENDER FLARE BACK LEFT 1 PC (BL)

FENDER FLARE BACK RIGHT 1 PC (BR)

PUSH IN CLIP 26 PCS

RUBBER EDGE TRIM 1 PCS

**ATTENTION: PLEASE READ BEFORE INSTALLATION**

### INSTALLATION STEPS

#### 1. Checking Fit:

Before installation, flares should be held to the pick up surface to see whether it is the correct type. The inner side of the flares should line up with the well rim of the wheel. And the edge of the outer flare should fit the flare contour. You can make some small adjustment by filing sanding or scraping the excess plastic to achieve a better fitment.

#### 2. Optional Choice (Painting)

This step should be better before installation and you can paint to match your own vehicle.

#### 3. Work Area preparation


- Using a Jack and jack stand to raise your pick up when necessary.
- Remove the fender trim or mud flaps if installed

#### 4. installation of Edge Trim


As it is illustrated by the picture #1. Peel two or three inches of red vinyl backing away from the edge trip tape. Applying the adhesive side of the trim to the inner side of the fender flare. Press the edge trim of the fender flares and pull the red vinyl backing.

#### 5. Flare Installation:


- install the decorative screws and secure with nyloc nut. See picture #2. Be careful not to over tighten the screw in case of scraping.
- hold the fender flares and install the push-in clips through the original holes or simply drill the holes for match. See picture #2 and #3.

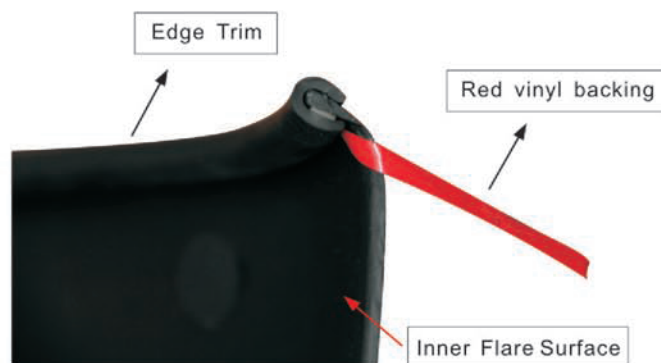

#1

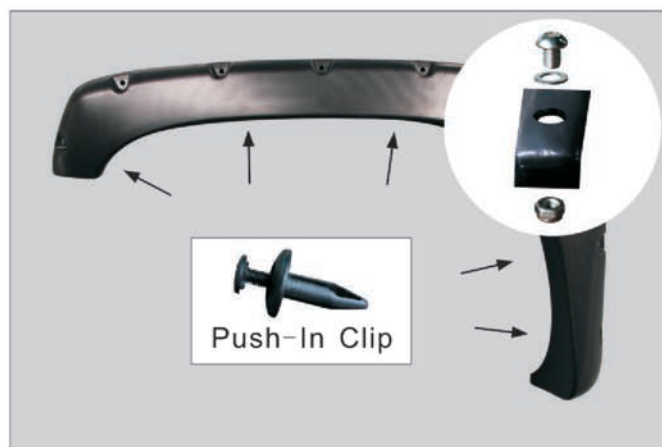

#2

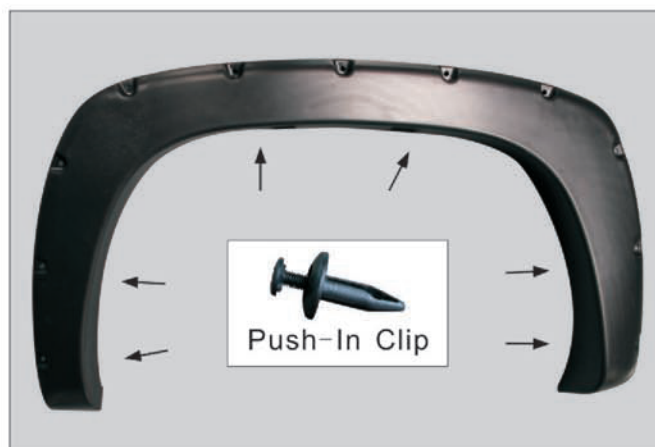

#3