

BEFORE INSTALLATION



- Professional Installation would be highly recommended, please seek assistance at local automotive shop if you have any difficulties in installing.
- Safety comes first ! Do not start to work on any vehicle without protection.
- An assistant would be better assist you in the bumper disassembly work.
- Keep cautions to prevent being scratched when working on any parts from the body of the vehicle.
- Do not touch the bulbs or the wire assembly before they are cooled to avoid the burns.

PRODUCT NUMBER

OEM Part Number: 4806165AJ, 4806164AJ




STEP 1

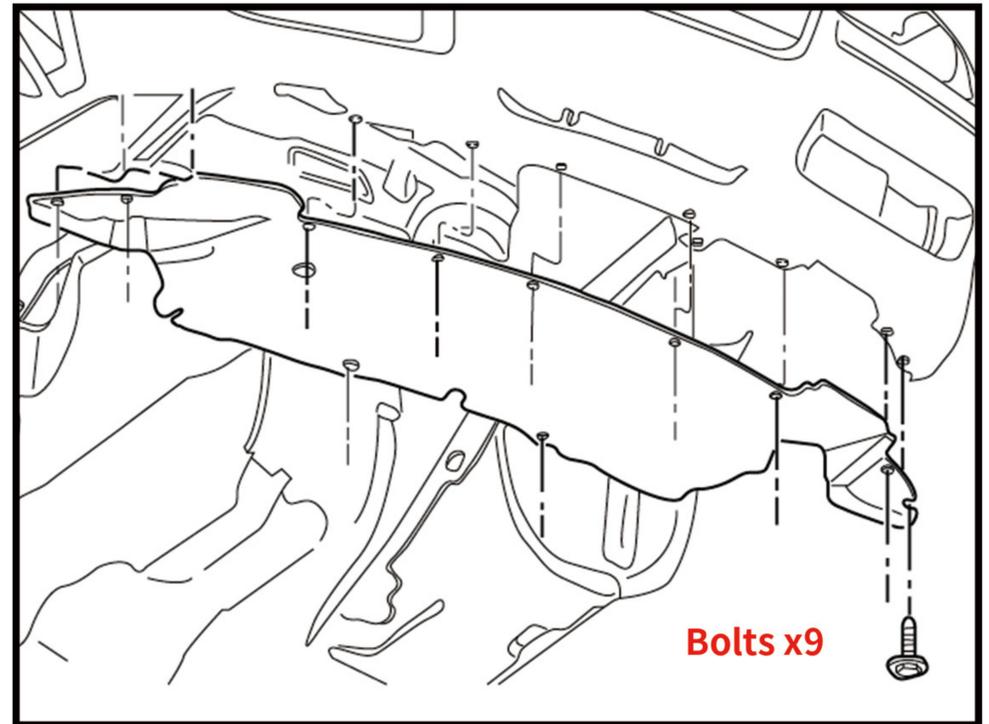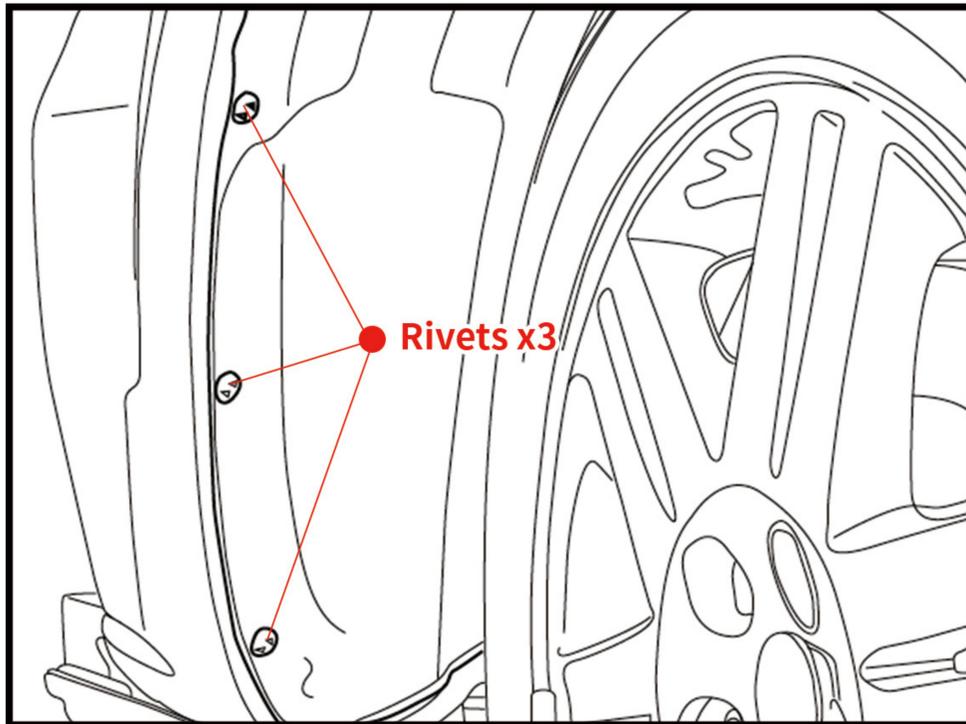



1. Remove (3) rivets in each side front wheel well to release inner fender liner.
2. Remove (9) bolts securing the splash guard on vehicle and remove the splash guard.

STEP 2

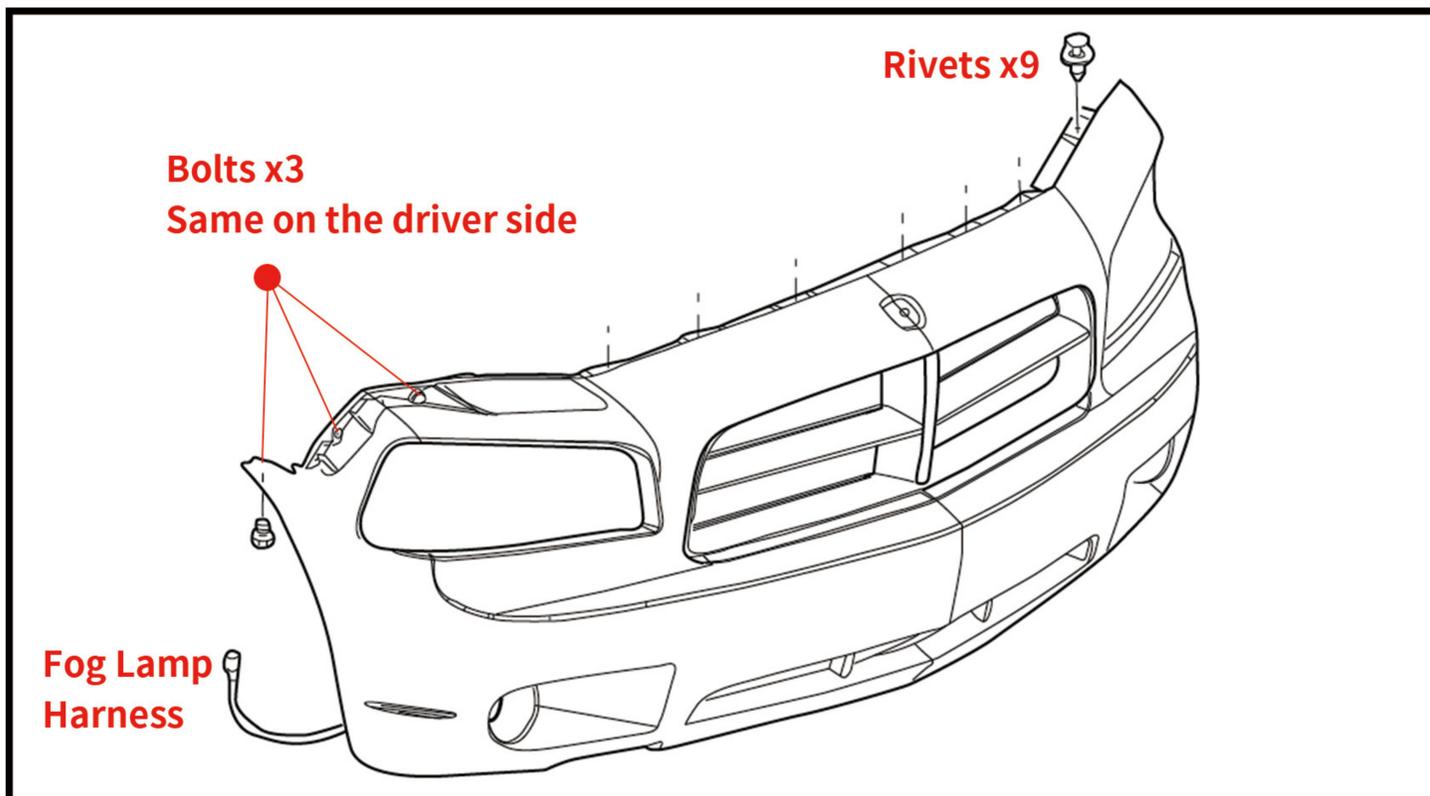

1. Remove (6) bolts and (8) rivets securing the front bumper cover on radiator bracket.
2. Pull the front bumper cover forward to disengage the claws securing the front bumper cover.
3. Disconnect fog lamp connector if equipped.
4. Remove the front bumper cover.

STEP 3

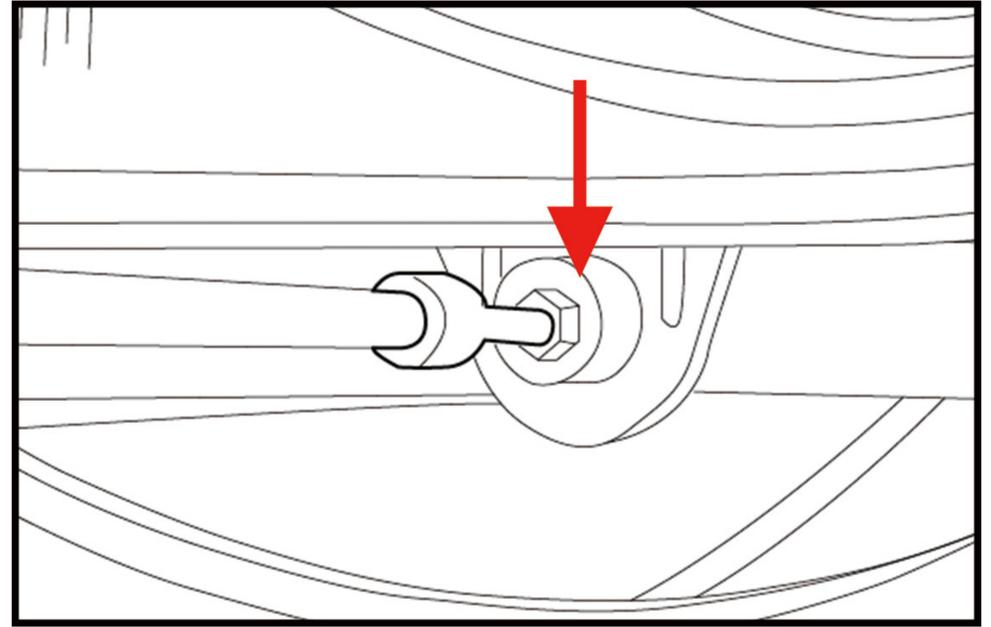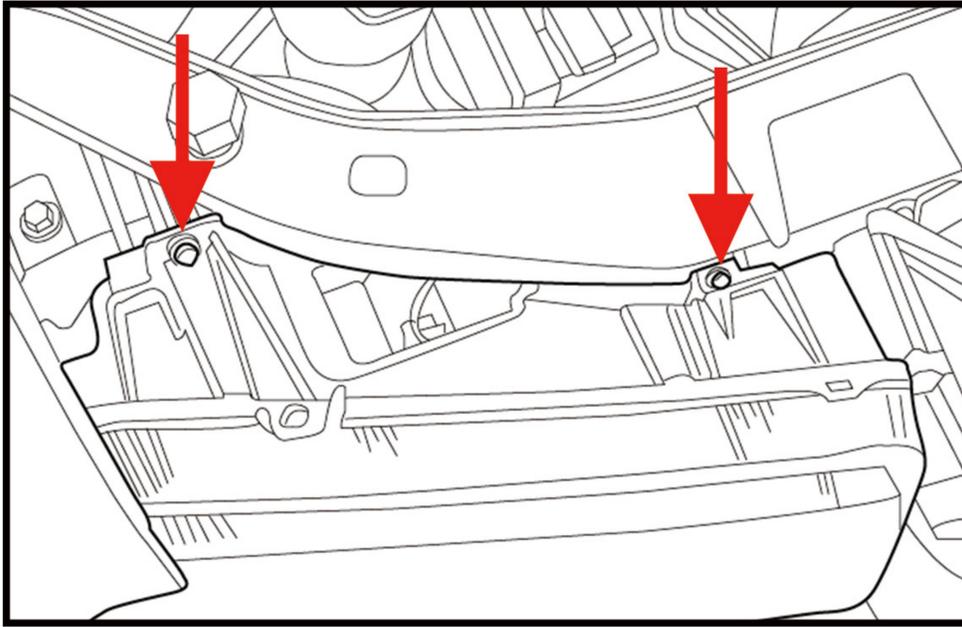

1. Remove (3) bolts securing headlamp on radiator bracket.
2. Disconnect high beam and low beam connectors.
3. Twist high beam and low beam bulbs counterclockwise and remove from headlamp.
4. Twist signal parking light and side mark light sockets counter counterclockwise and remove from headlamp.
5. Remove the old headlamp.

STEP 4

1. Insert and lock high beam and low beam bulbs into the new headlamp.
2. Connect high beam and low beam connectors.
3. Insert and lock signal parking light and side mark light sockets into the new headlamp.
4. Install (3) bolts to secure the new headlamp on radiator bracket.

STEP 5

1. Repeat step 3 to step 4 on the other side.
2. With assistance, lift and attach front bumper cover on bumper reinforcement.
3. Connect fog light harness if equipped.
4. Pop on the claws behind bumper cover.
5. Install (6) bolts and (8) rivets to secure the front bumper cover on radiator bracket.
6. Install (9) bolts to secure the splash guard on vehicle.
7. Install (3) rivets on each side front wheel well to restore the inner fender liner.

WARM TIPS



Before you begin to adjust the light, make sure check the alignment of your lights first. Park the vehicle about 10 to 25 feet from the wall with the lights aimed at the wall. The centerlines of the headlights should not be any higher than 3.5 feet above the ground.

1. Find the adjustment screws.
2. Adjust the headlights individually.
3. Adjust the vertical field.
4. Test your results.