

BEFORE INSTALLATION


- Professional Installation would be highly recommended, please seek assistance at local automotive shop if you have any difficulties in installing.
- Safety comes first ! Do not start to work on any vehicle without protection.
- An assistant would be better assist you in the bumper disassembly work.
- Keep cautions to prevent being scratched when working on any parts from the body of the vehicle.
- Do not touch the bulbs or the wire assembly before they are cooled to avoid the burns.

PRODUCT NUMBER

OEM Part Number: R3Z13008AA, YR3Z13008BA, 3R3Z13008CA, 3R3Z13008DA




STEP 1

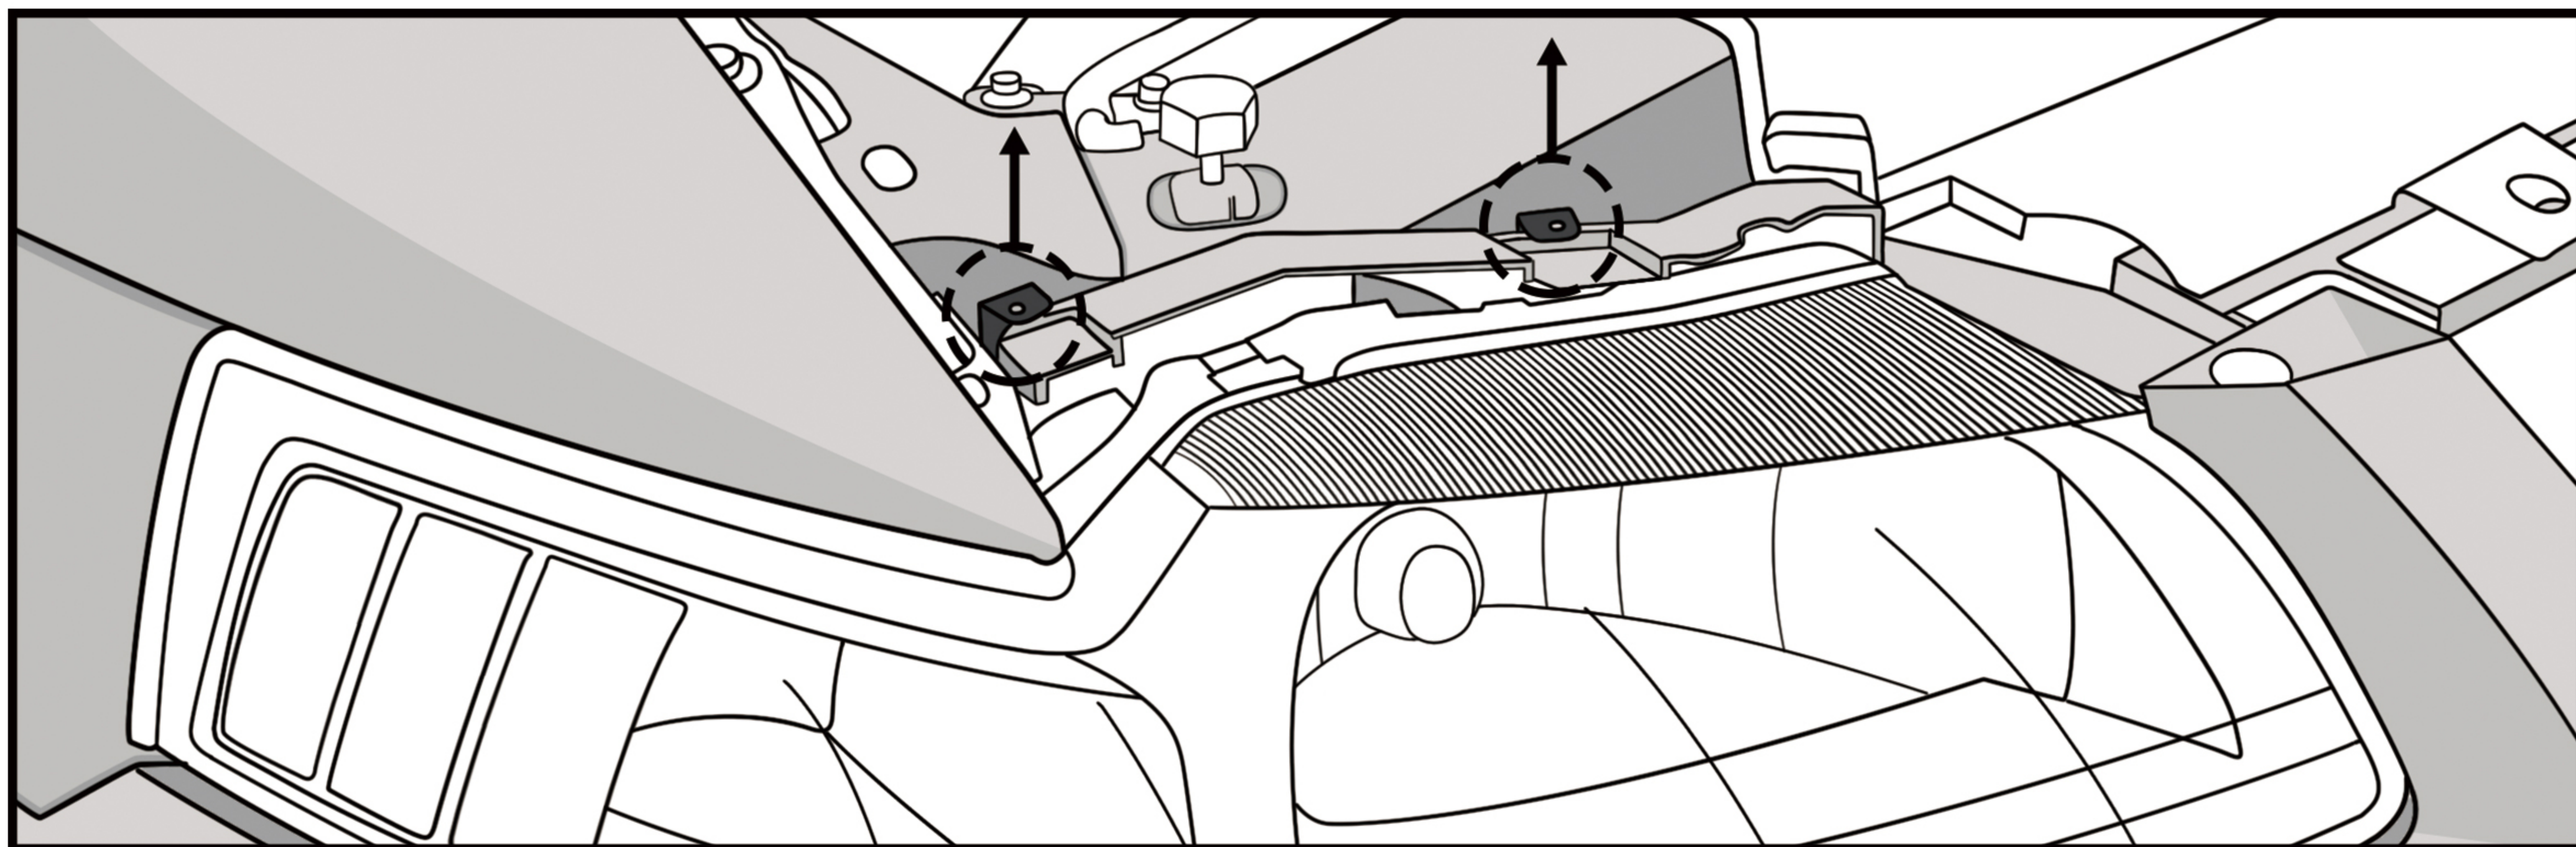

1. Open the hood.
2. At the back of the headlamp, pull (2) retainer pins up to release the headlamp assembly.
3. Pull headlamp assembly forward.


STEP 2

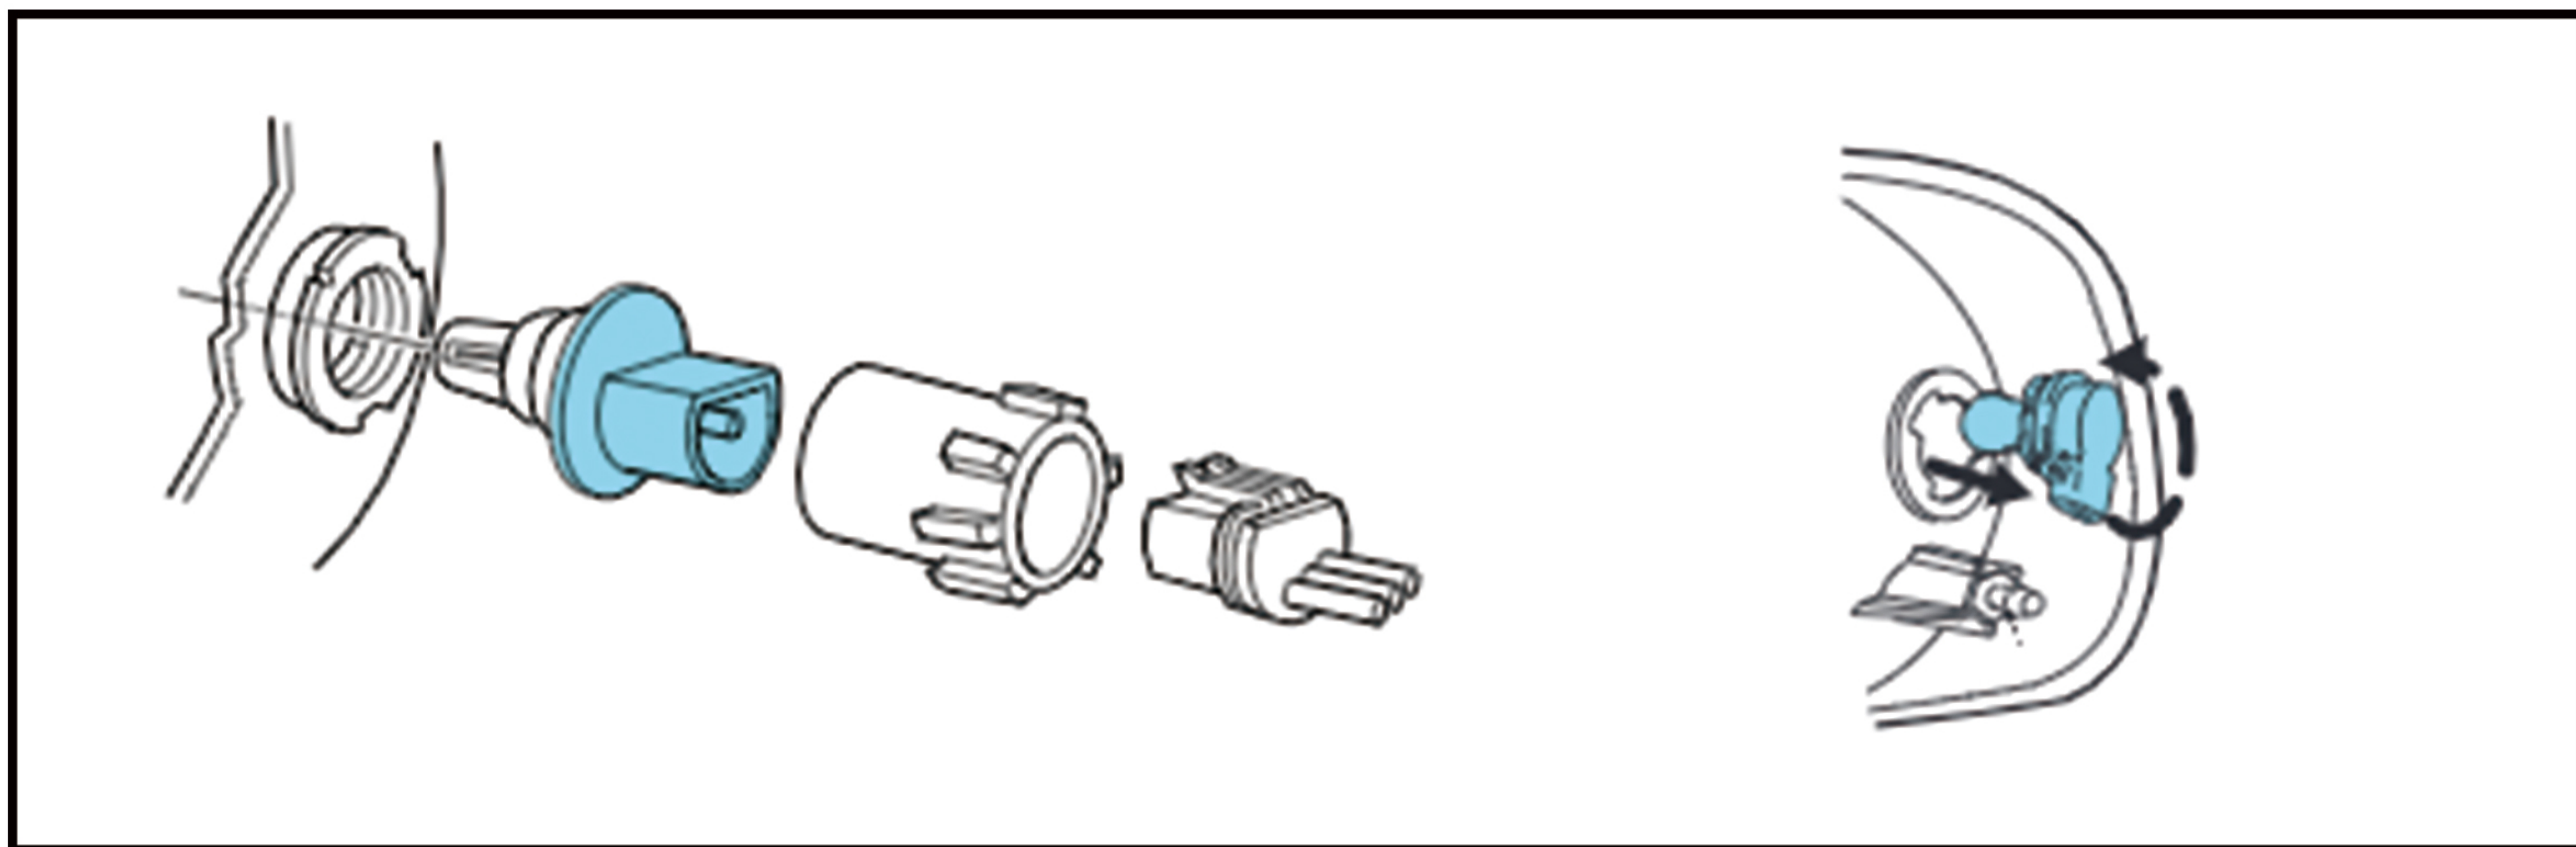

1. Disconnect the headlight and signal light connectors.
2. Remove the headlight bulb retaining ring by rotating it counterclockwise and slide off the headlamp housing.
3. Twist signal light socket counterclockwise and remove it from old headlamp.

STEP 3

1. Insert the headlight bulb into the new headlamp and secure with retaining ring.
2. Insert signal light socket to the new headlamp and twist counterclockwise to secure.

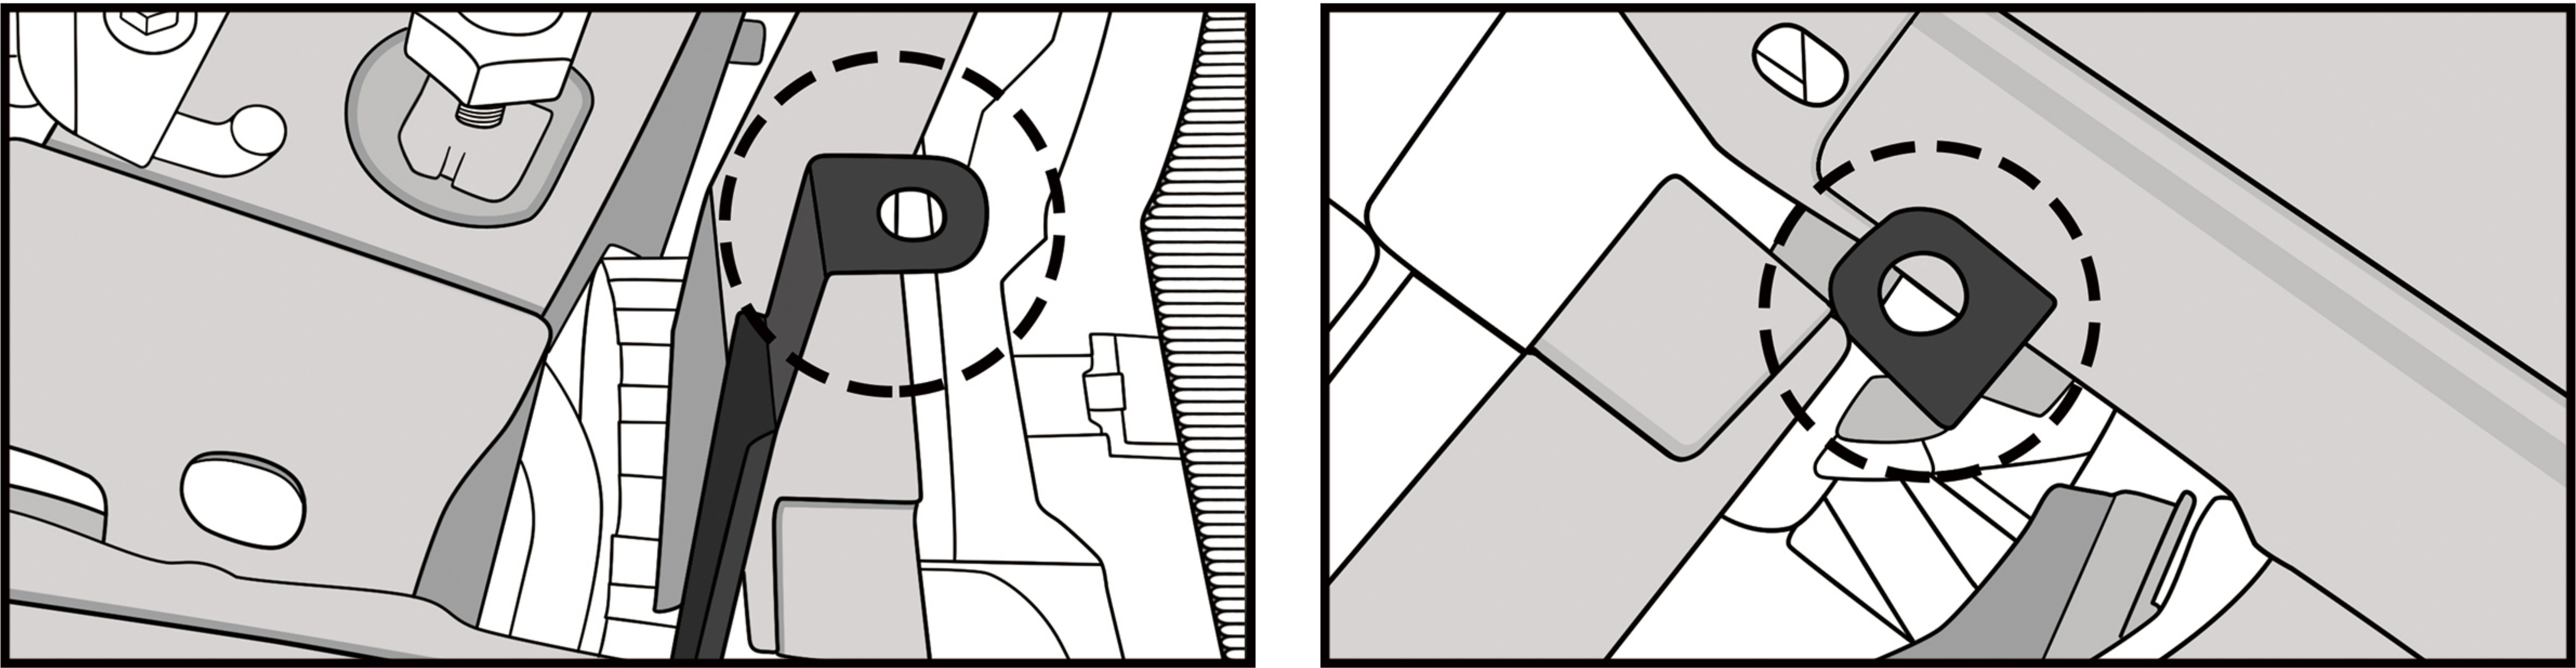

- 1.Connect headlight wire, signal parking light wire to the new headlamp.
- 2.Push and guide the new headlamp in place.
- 3.Insert and lock (2) retainer pins to secure the new headlamp.

NOTE: ADJUST HEADLAMP SLIGHTLY TO GUILD RETAINER PINS IN POSITION.

WARM TIPS



Before you begin to adjust the light, make sure check the alignment of your lights first. Park the vehicle about 10 to 25 feet from the wall with the lights aimed at the wall. The centerlines of the headlights should not be any higher than 3.5 feet above the ground.

- 1. Find the adjustment screws.
- 2. Adjust the headlights individually.
- 3. Adjust the vertical field.
- 4. Test your results.