

BEFORE INSTALLATION

- Professional Installation would be highly recommended, please seek assistance at local automotive shop if you have any difficulties in installing.
- Safety comes first ! Do not start to work on any vehicle without protection.
- An assistant would be better assist you in the bumper disassembly work.
- Keep cautions to prevent being scratched when working on any parts from the body of the vehicle.
- Do not touch the bulbs or the wire assembly before they are cooled to avoid the burns.

PRODUCT NUMBER

OEM: 68003125AB, 68003124AB



STEP 1

1. Open the hood. Let`s start from passenger side.

STEP 2




1. Remove (2) 10mm hex bolts on the inner side of headlamp.



2. On the front inner fender flare, pry up the rubber plug and remove (1) 10mm hex nut behind the plug.

STEP 3

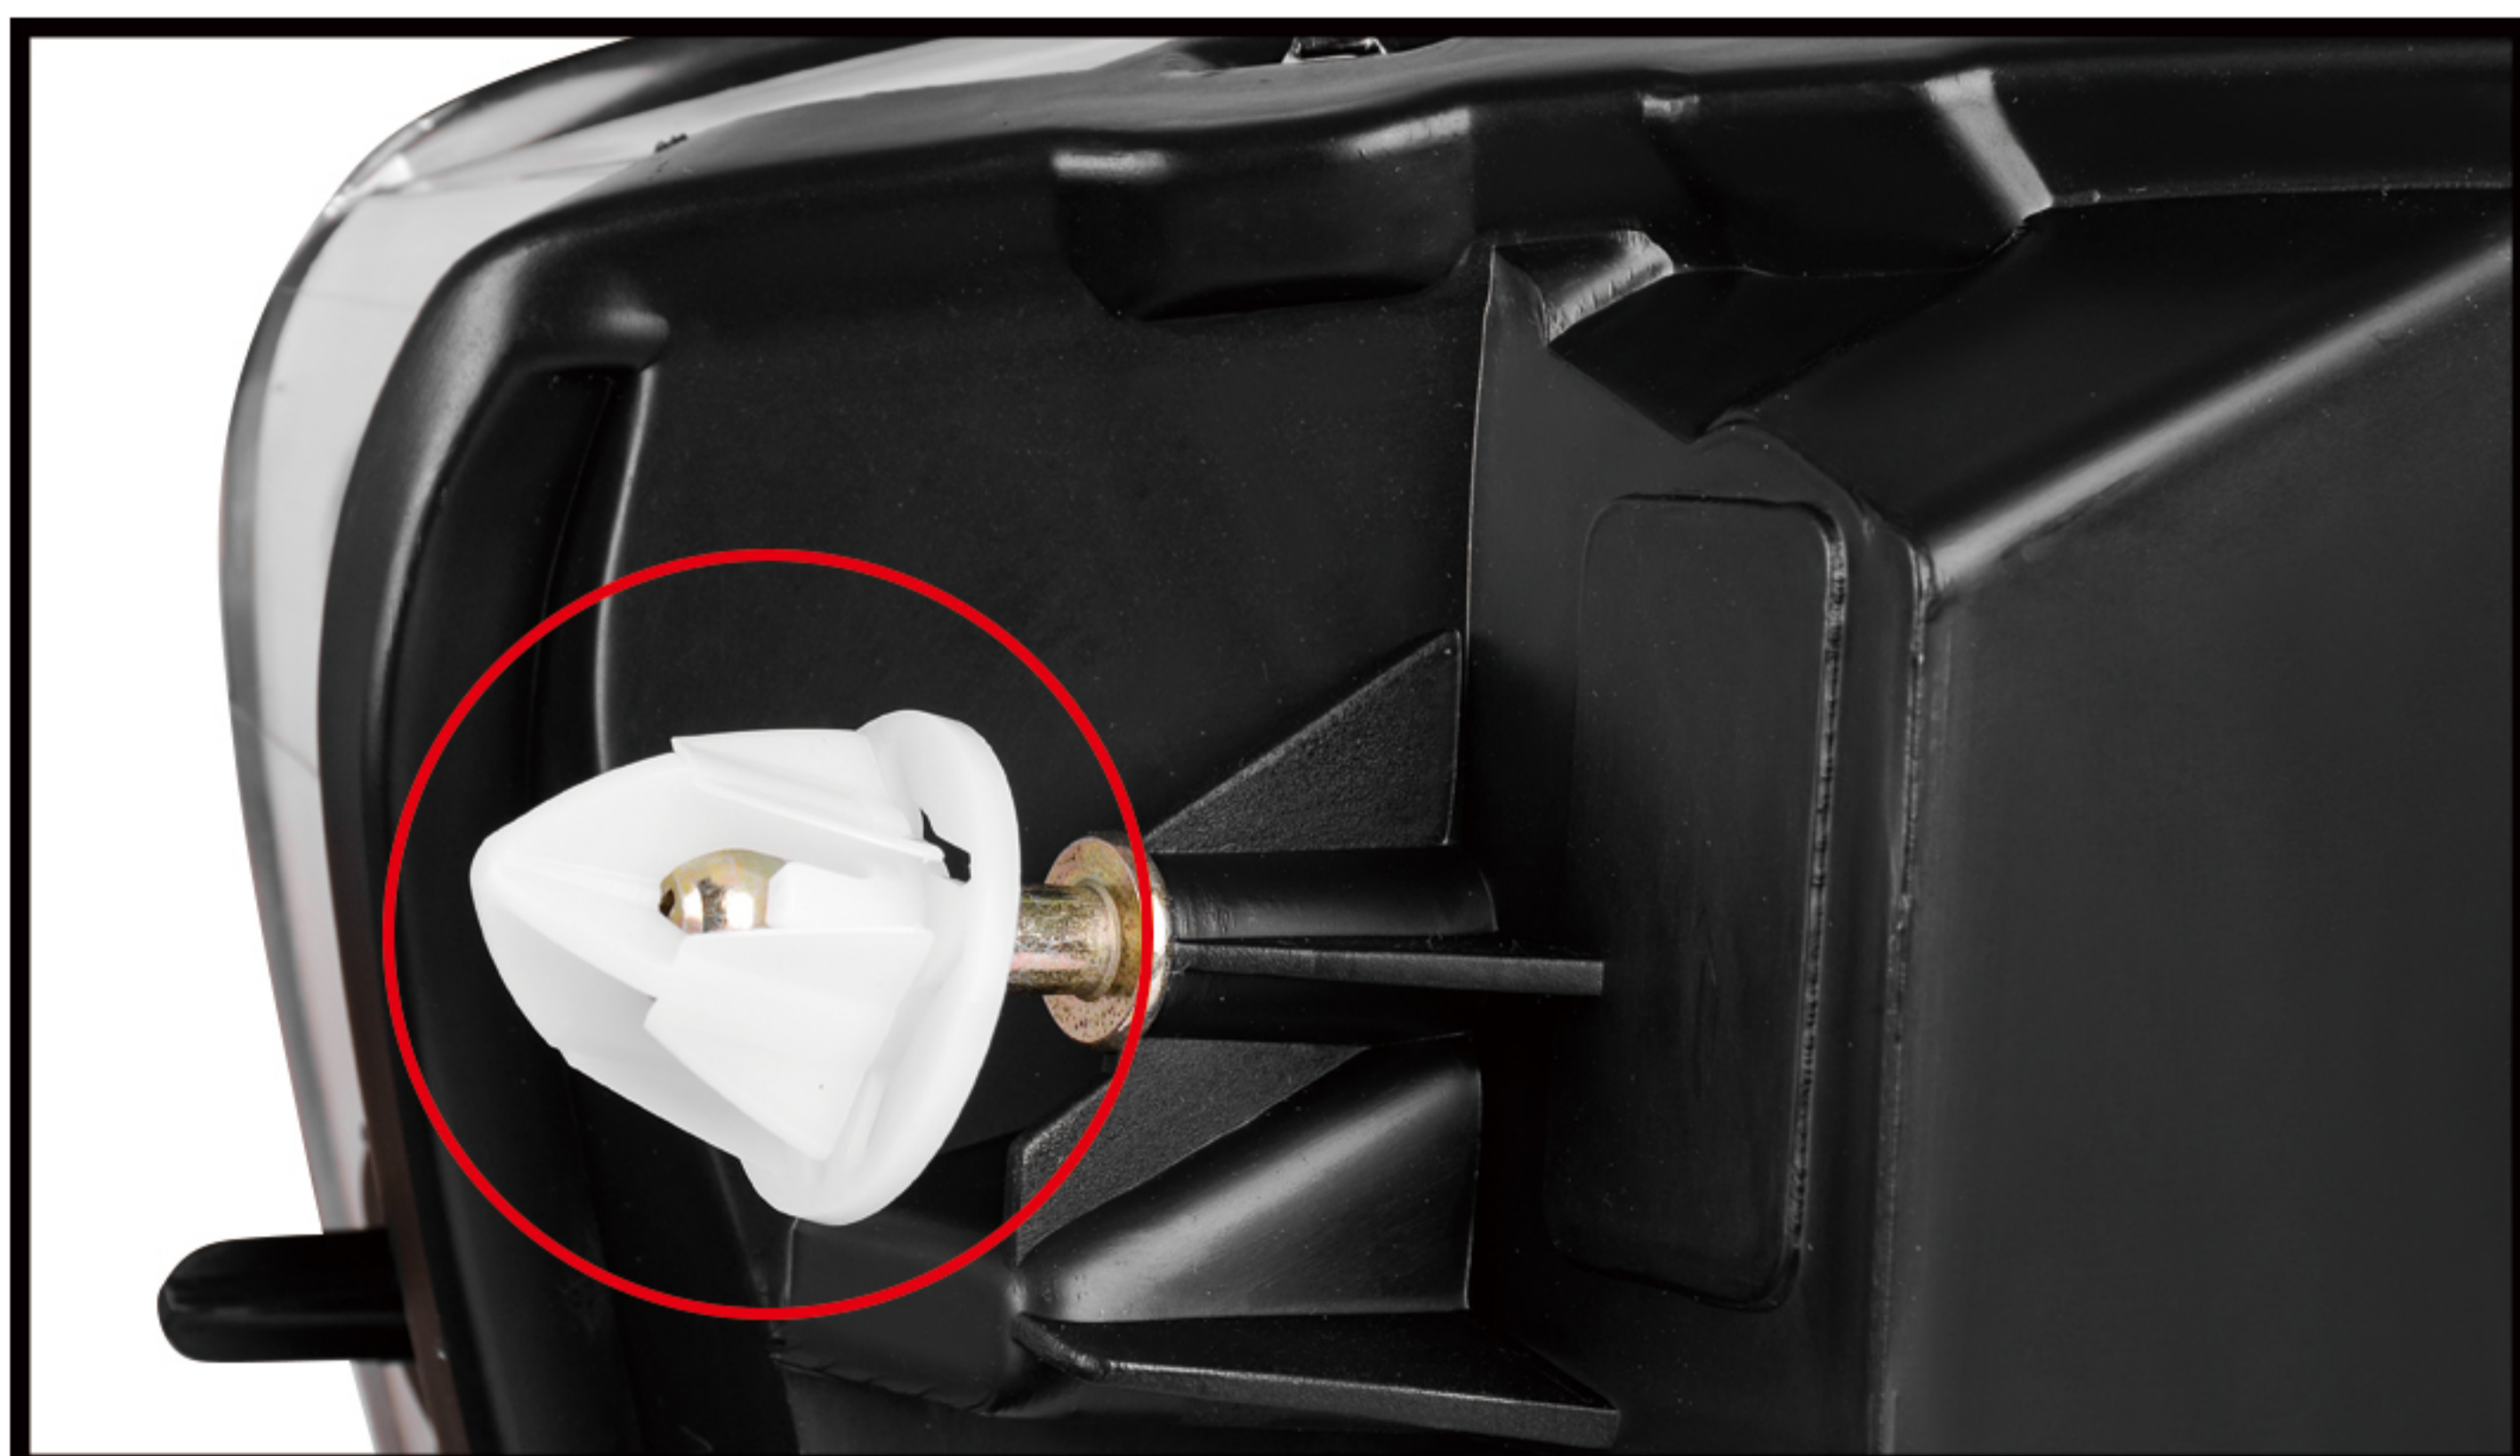

1. Grab the corner on fender side and pull the headlamp off from the vehicle. Make sure the plastic fastener come off with the old headlamp. If the fastener didn`t coming off with old headlamp, remove it from vehicle.

STEP 4

1. Disconnect wire harness and remove headlamp.
2. Remove light bulbs and signal light socket from old headlamp.
(Twist sockets counterclockwise, do not touch light bulbs with bare hand)

STEP 5

- 1.Install light bulbs and signal light socket to the new headlamp.
- 2.Connect headlight wire and signal light wire to new headlamp.

STEP 6



- 1.Guild the new headlamp into mounting position.



- 2.Reinstall (3) 10mm hex bolts and rubber plug on the front inner fender flare.

STEP 7

- 1.Repeat step 2 to 6 to install the driver side.

WARM TIPS



Before you begin to adjust the light, make sure check the alignment of your lights first. Park the vehicle about 10 to 25 feet from the wall with the lights aimed at the wall. The centerlines of the headlights should not be any higher than 3.5 feet above the ground.

- 1. Find the adjustment screws.
- 2. Adjust the headlights individually.
- 3. Adjust the vertical field.
- 4. Test your results.