






SOFT TRI-FOLD TONNEAU COVER

ASSEMBLY INSTRUCTIONS

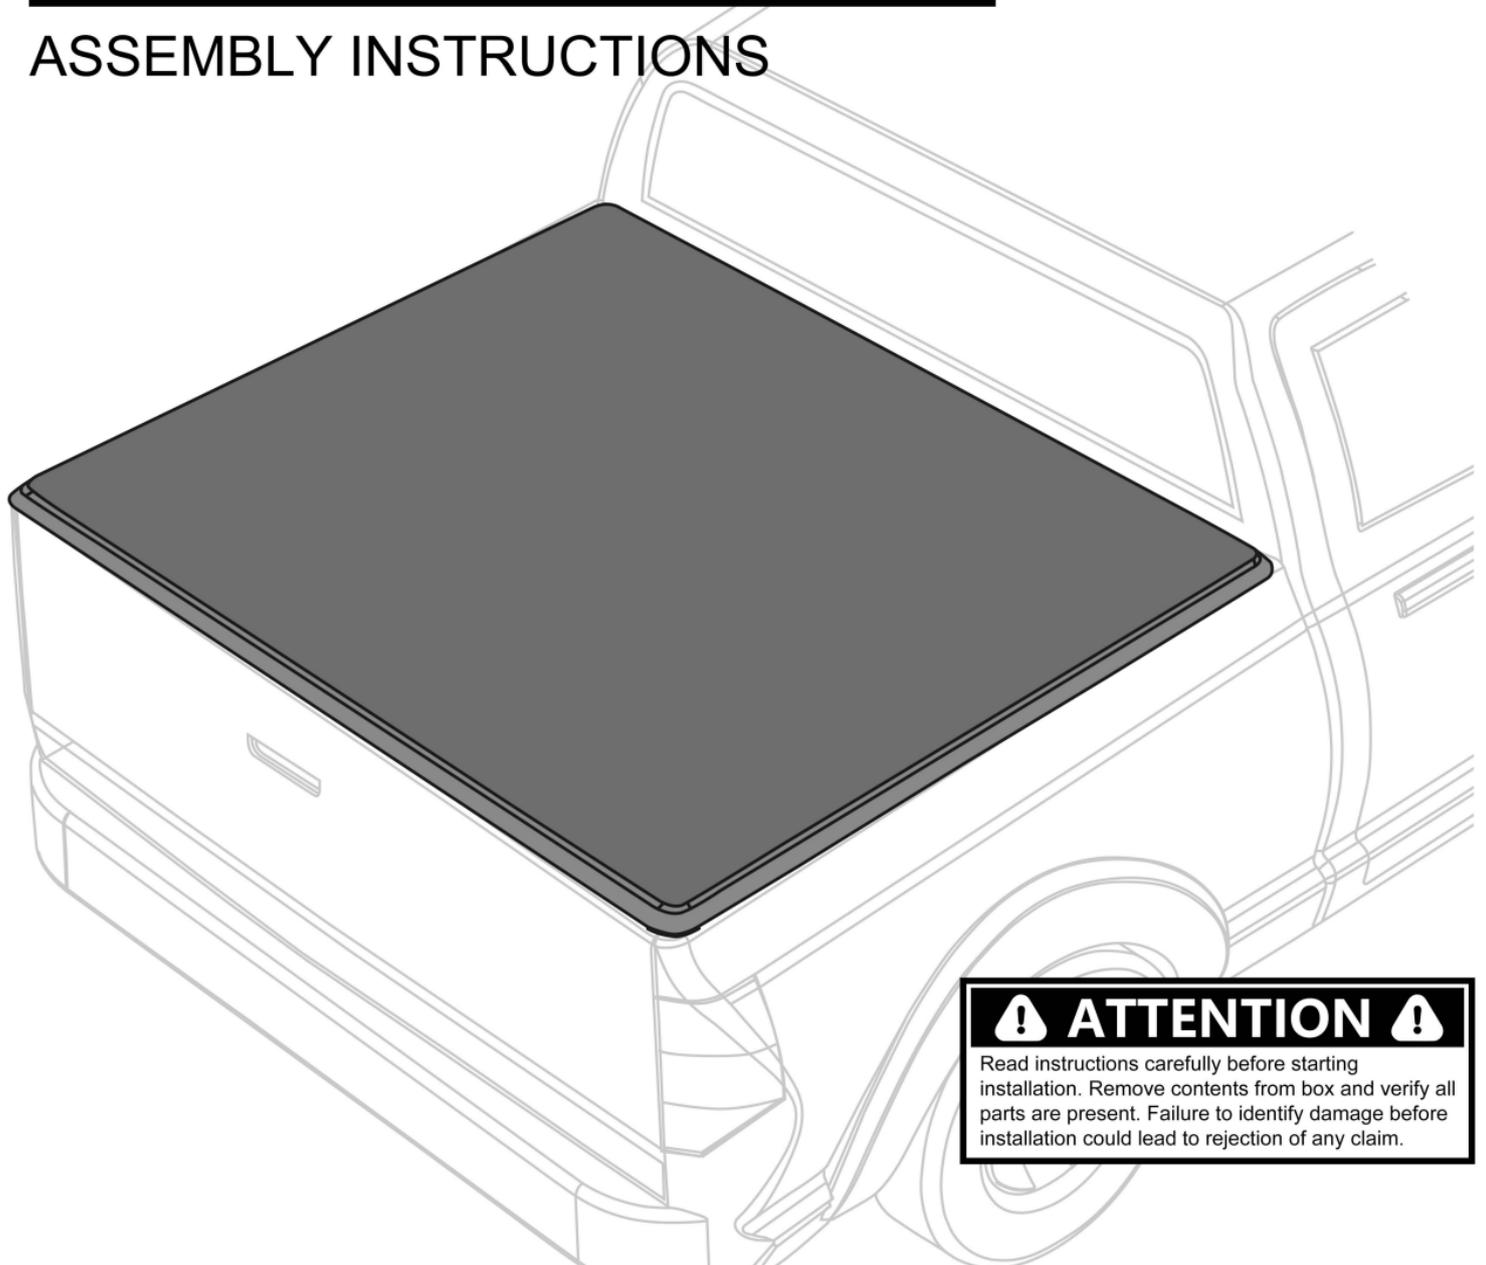

⚠ ATTENTION ⚠

Read instructions carefully before starting installation. Remove contents from box and verify all parts are present. Failure to identify damage before installation could lead to rejection of any claim.

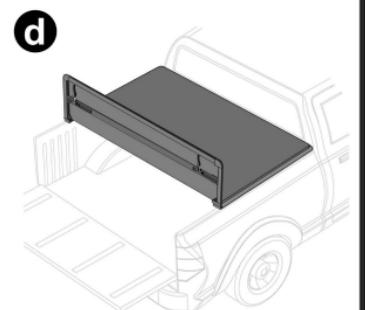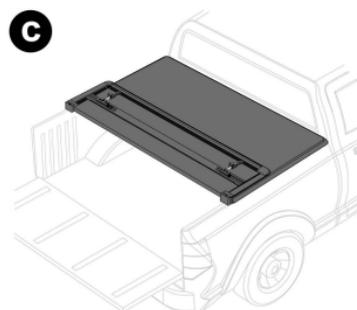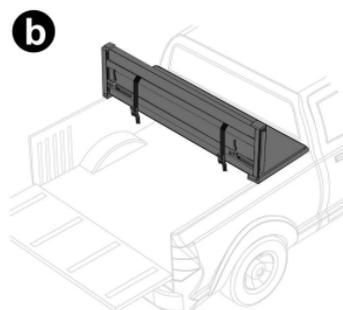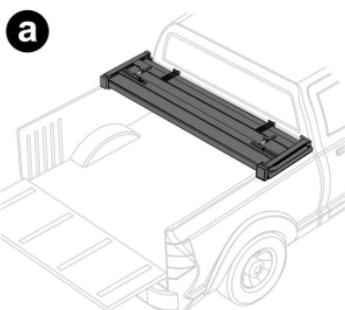



SEAL STRIP







Only needed
for certain models



1 APPLYING SEAL STRIP ⓘ



IF THE TRUCK'S FRONT BED RAIL IS LOWER THAN THE SIDES, USE THE PROVIDED WEATHER SEAL STRIPS. GAPS ON THE FRONT BED AND TAILGATE CAN CAUSE NOISE AND FLAPPING ISSUES WHILE DRIVING ALONG WITH WATER LEAKAGE.

NOTE: Spare sealing strip is included in case additional sealing is needed around the bed area.

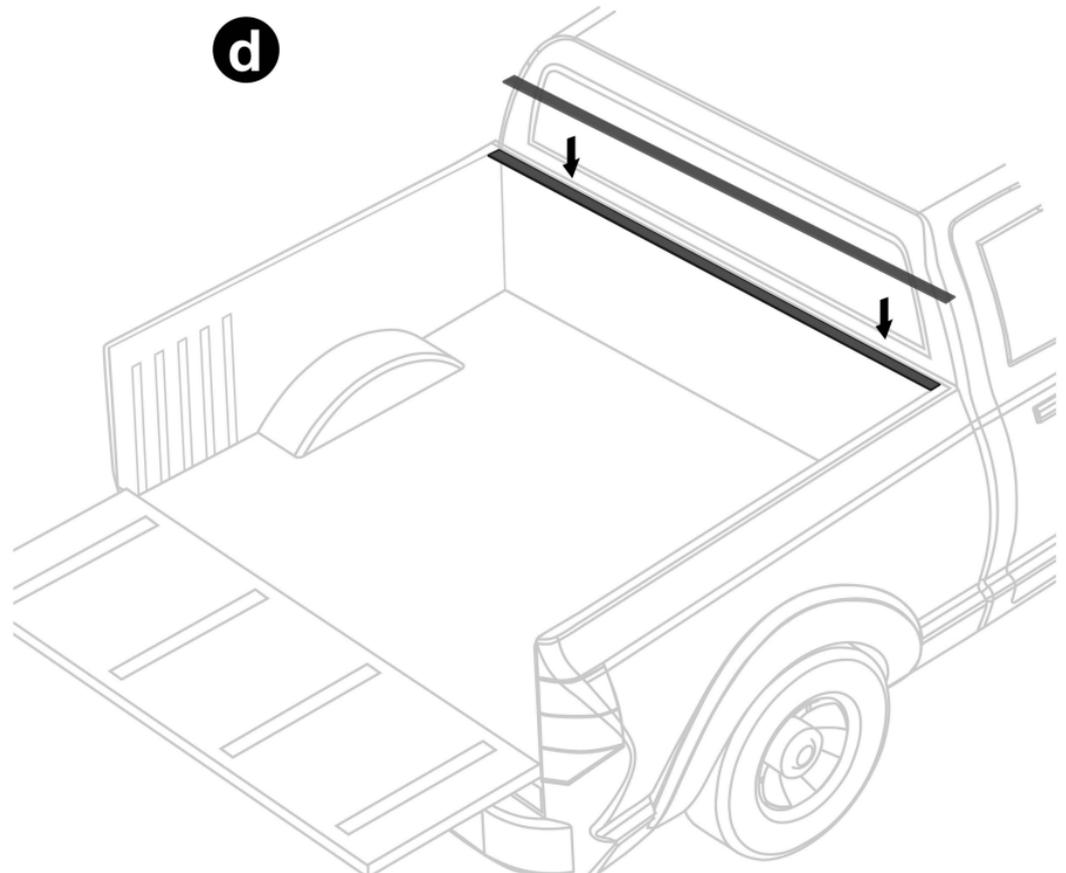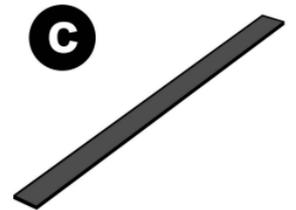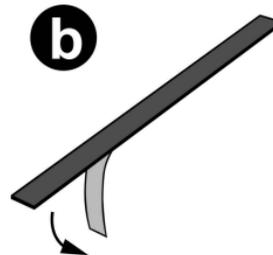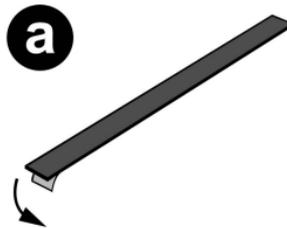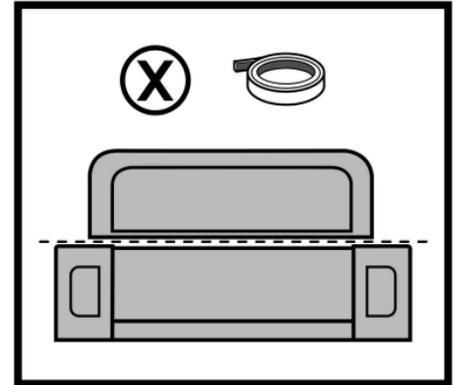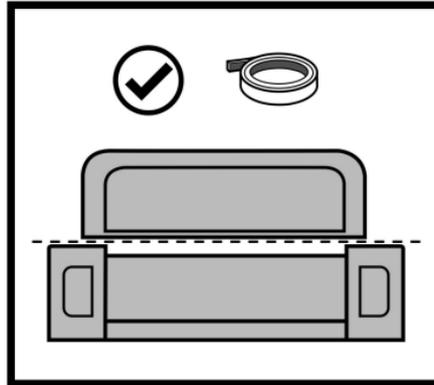


2 Special Installation for Honda Ridgeline

- Remove 6 factory screws from 6 indicated locations.
- Install each of the 6 brackets with factory screws.

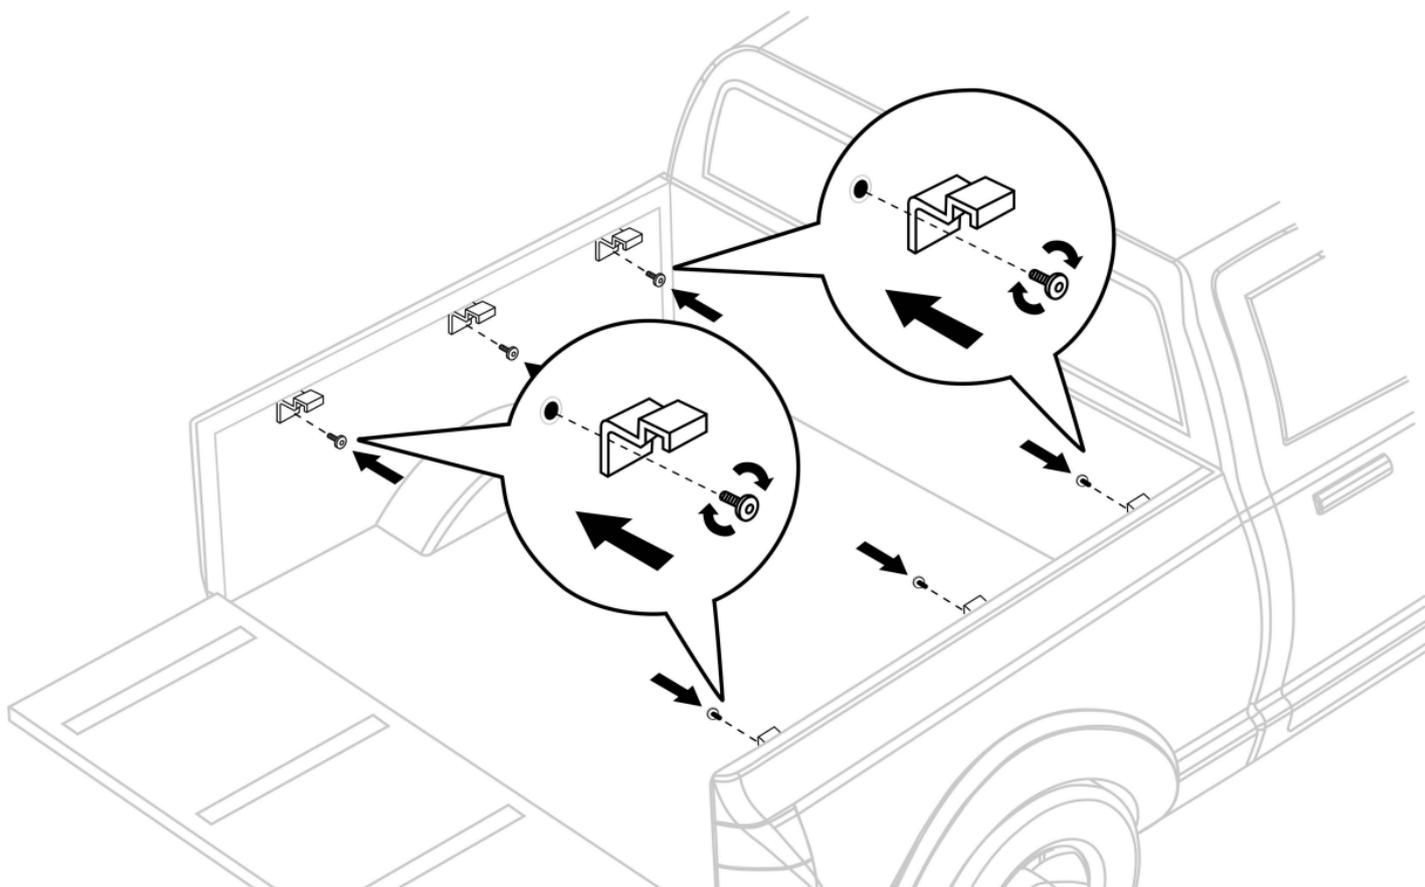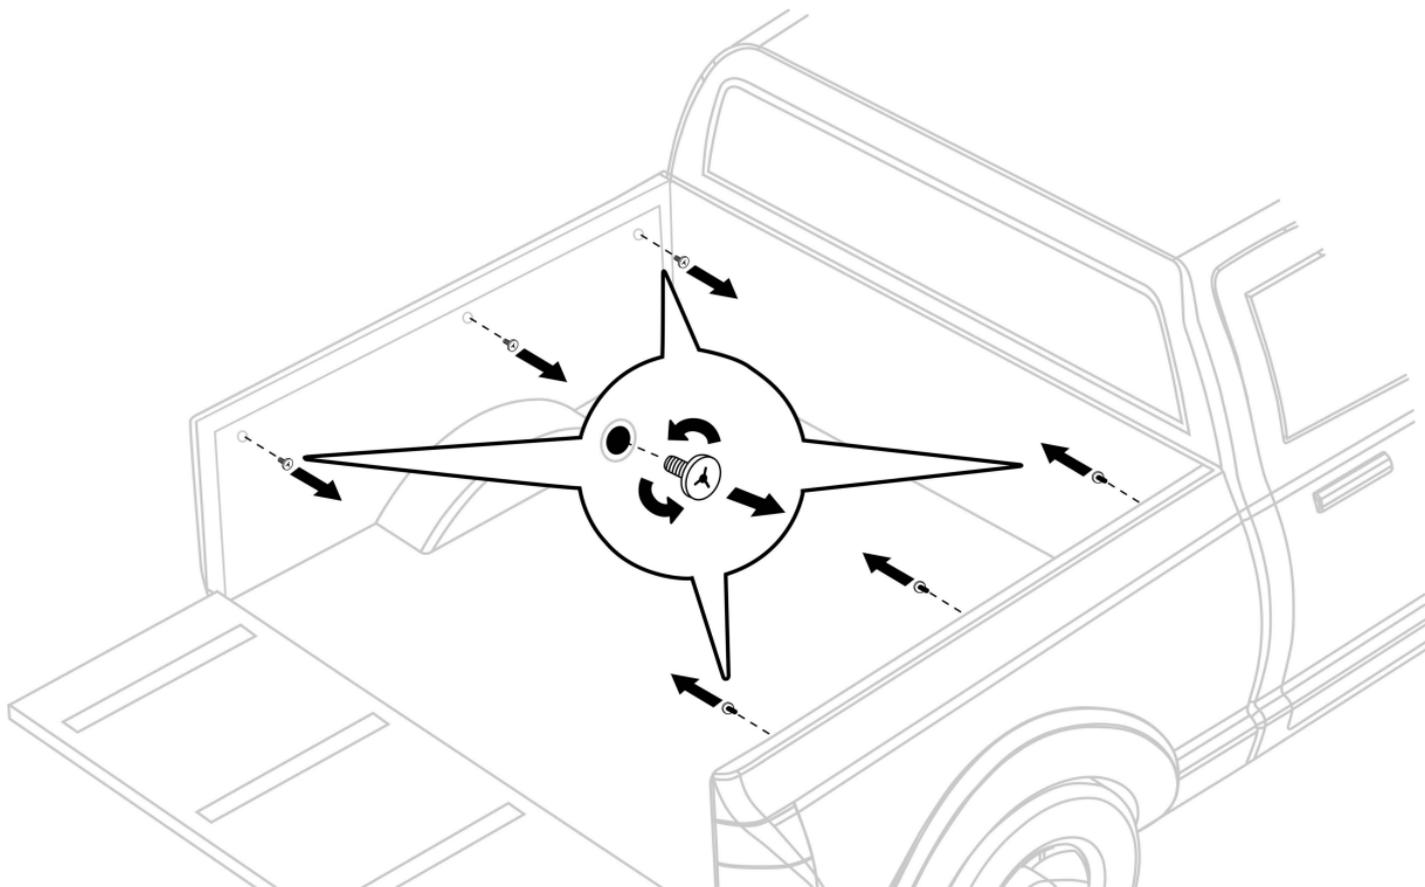


3 LAYING OUT THE COVER

- Place the folded cover assembly on the bed rail and align the front edge all the way with the outer edge of the bed rail.
- Release the safety buckles and fully unfold the cover towards the tailgate. Both sides should align evenly with the side bed rails.

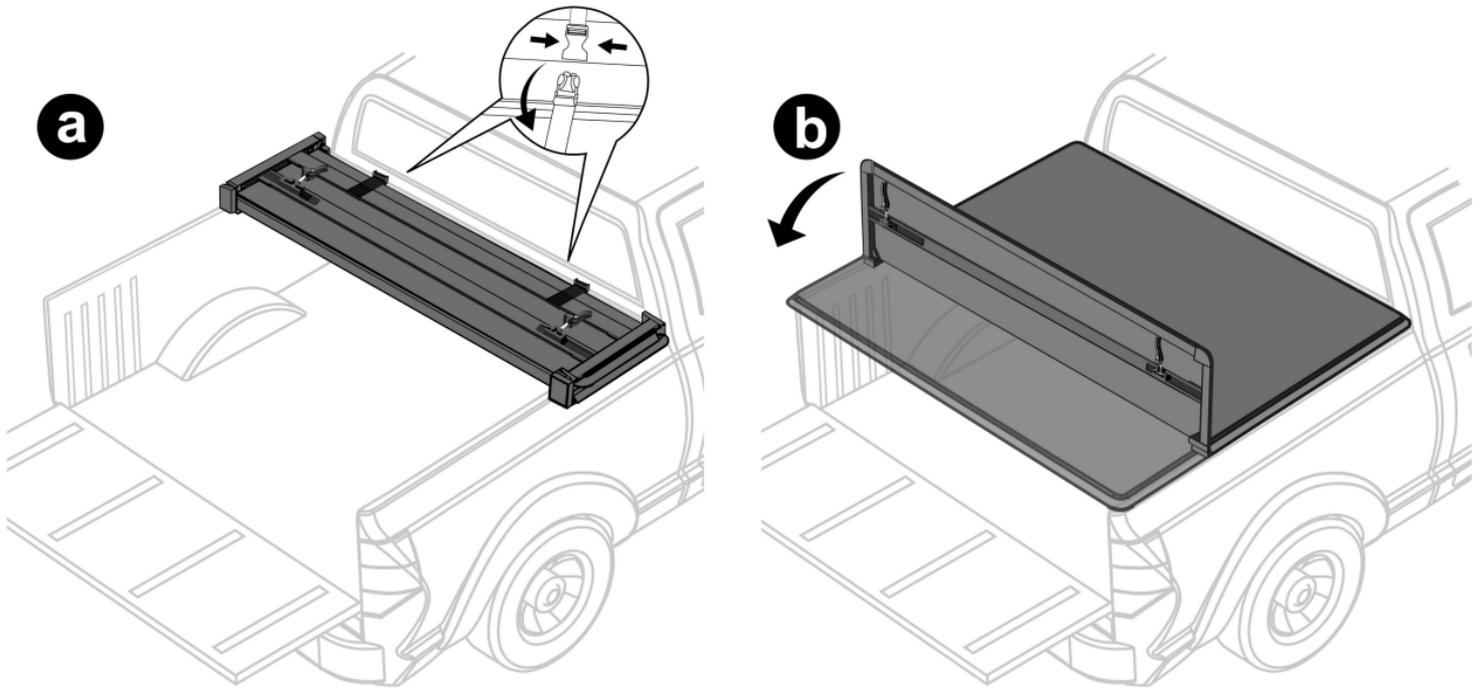


- C**
- C-1** • Align the front of the cover against the outer edge at the midpoint of the front bed rail.
 - C-2** • Align both sides of the cover evenly on the side bed rails. The width of the cover does not cover all the way to the outer edges of the side rails.

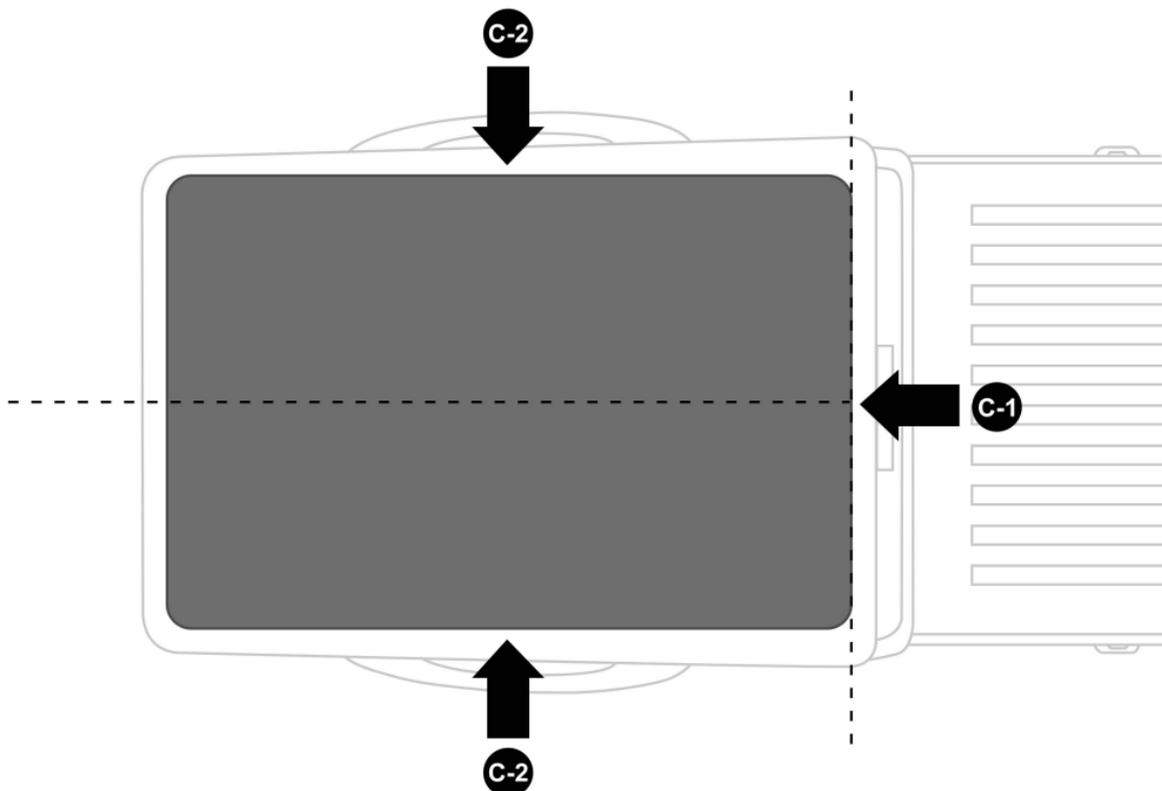


4 FOLDING BACK THE COVER

- CAREFULLY REFOLD THE COVER WITHOUT MOVING ITS POSITION ON THE TRUCK BED.

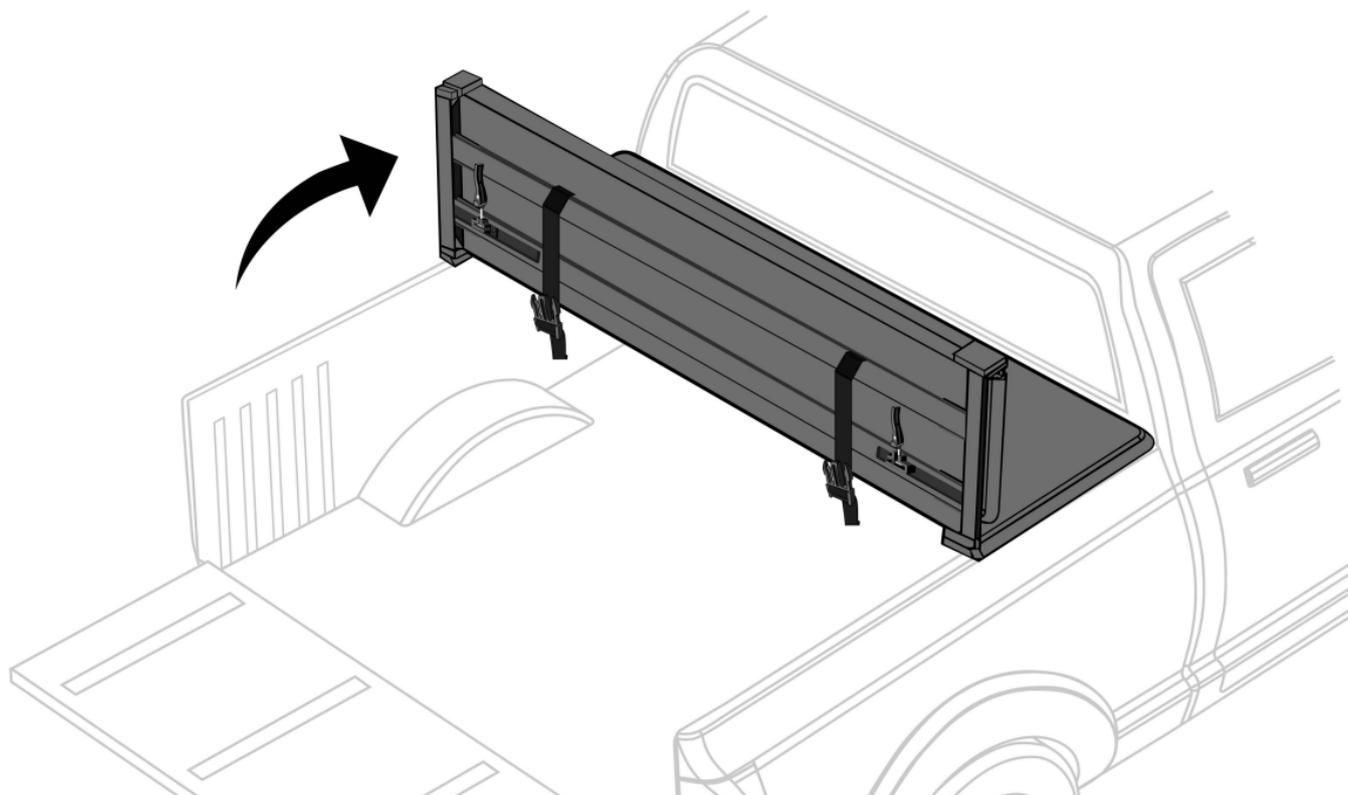

5 CLAMPS & LATCHES OVERVIEW

- THE CLAMPS AND LATCHES ARE ALREADY ATTACHED TO THE ASSEMBLED COVER.

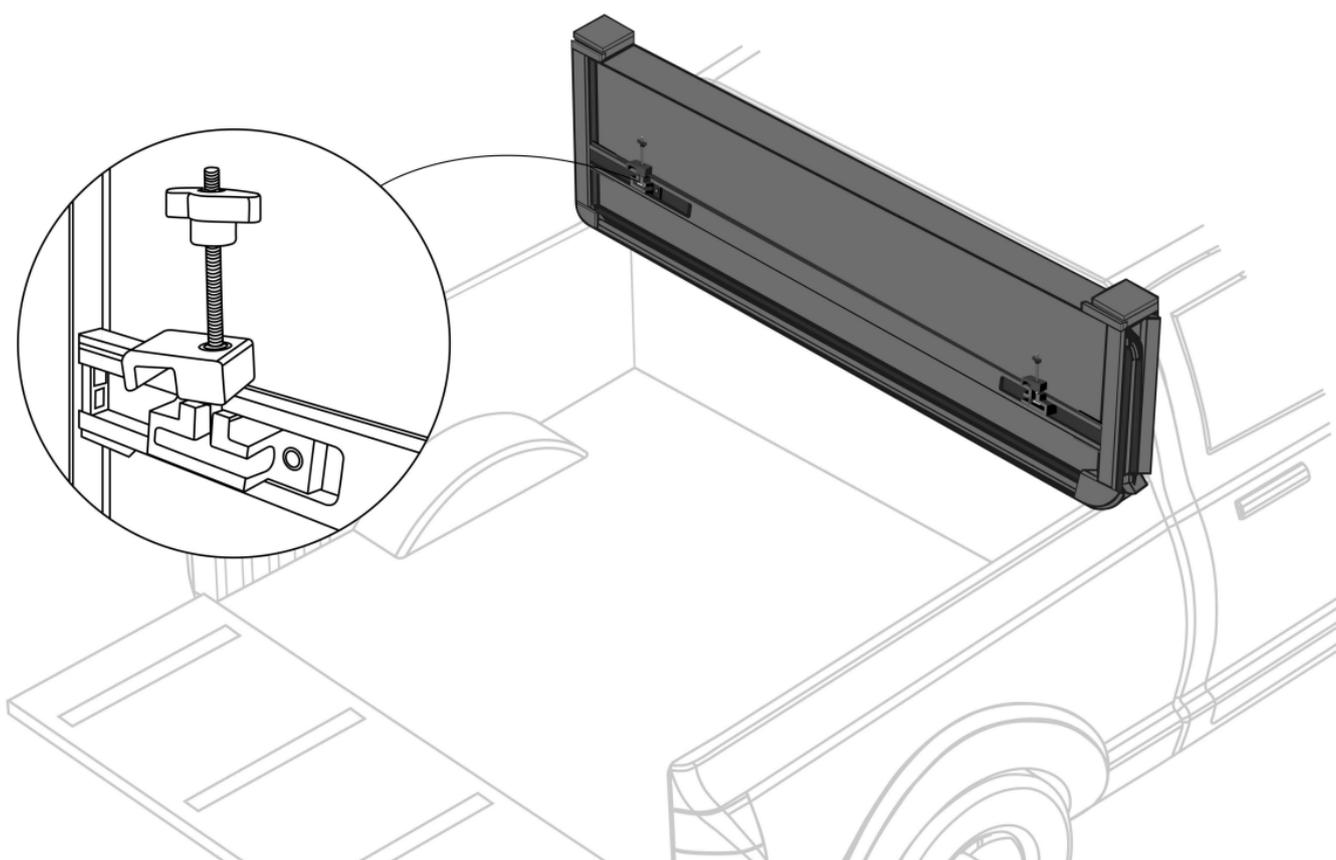



ATTENTION

DO NOT overtighten!



YOU NEED




YOU NEED




6 APPLYING FRONT CLAMPS ⓘ


• PULL DOWN FRONT CLAMPS INTO VERTICAL POSITION

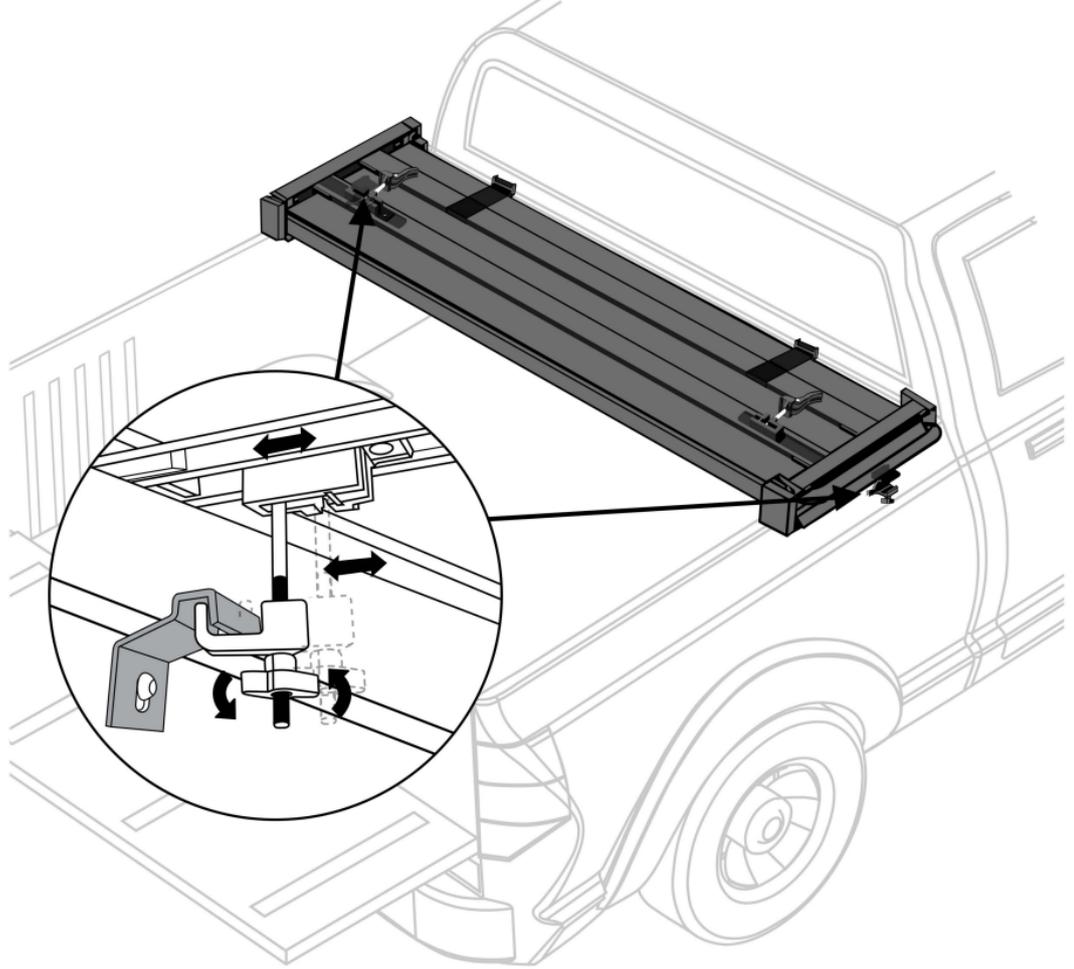


a Moving the plastic slider to the bed rail lip until it contacts the edge.

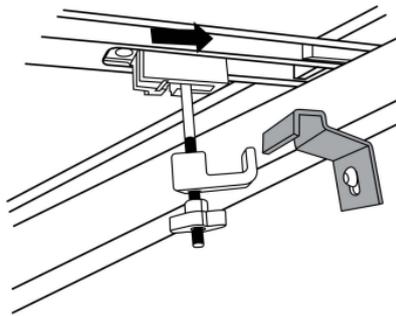


b Move the lever so that it can fit snugly against the edge of the bed.

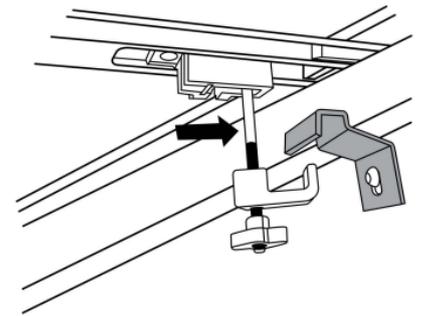

c Hook jaw portion of the clamp under the installed front bracket.

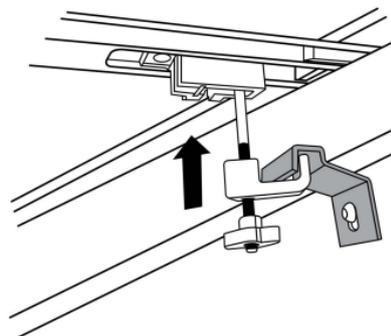

d Turn the knob until side D-seal on the cover is compressed and the clamp is snug.

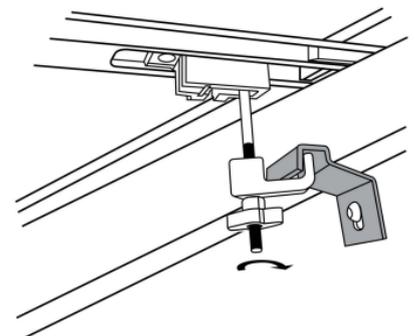



ATTENTION


DO NOT overtighten!




NOTE

All latches & clamps must make solid contact with the metal bed rail lip for the cover to be secured.


7 FINISHING INSTALLATION ⓘ

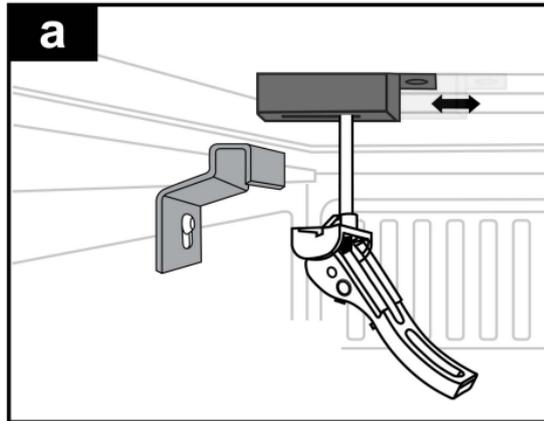


- Start by moving the plastic slider to the bed rail lip until it contacts the edge.

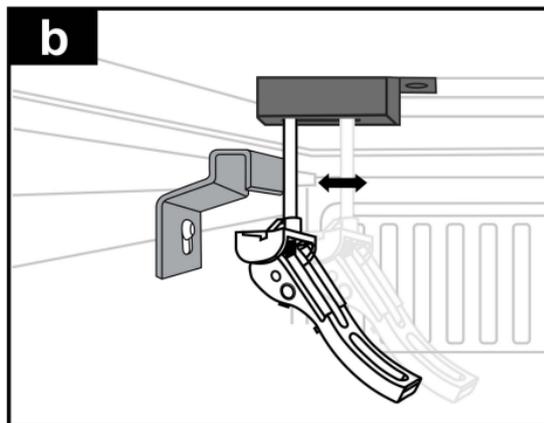

- Move the lever so that it can fit snugly against the edge of the bed.

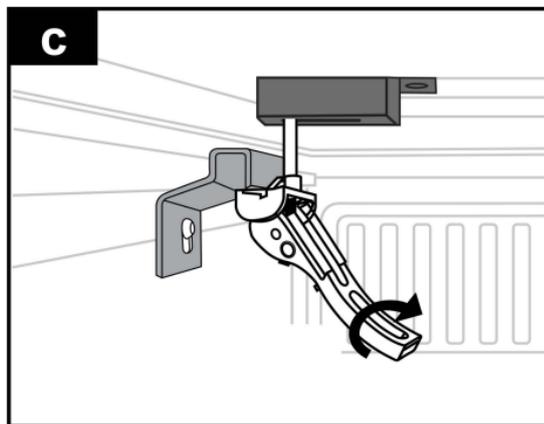

- Then rotate the clamps to raise its position. Optimally, opening of latch jaw should be level with the bracket without limiting access to the jaw's groove.

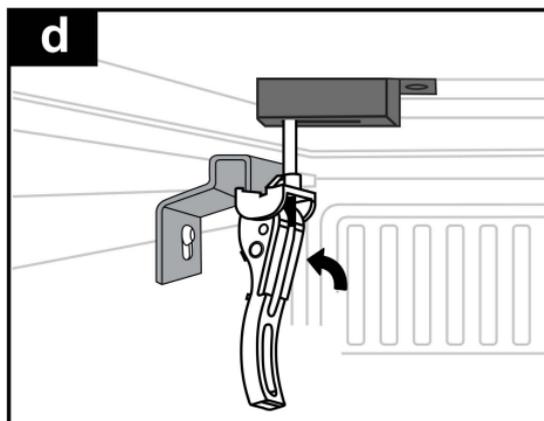

- Latch onto the bracket fully into jaw's groove. Then crank handle down to tighten.



NOTE

Safety clamps must be secured properly to the metal part of the bed rail while the vehicle is in motion, otherwise the warranty




ATTENTION

DO NOT use wrench or overtighten!


8 FASTENING REAR LATCHES ⓘ

- UNFOLD THE COVER COMPLETELY TOWARDS THE TAILGATE.

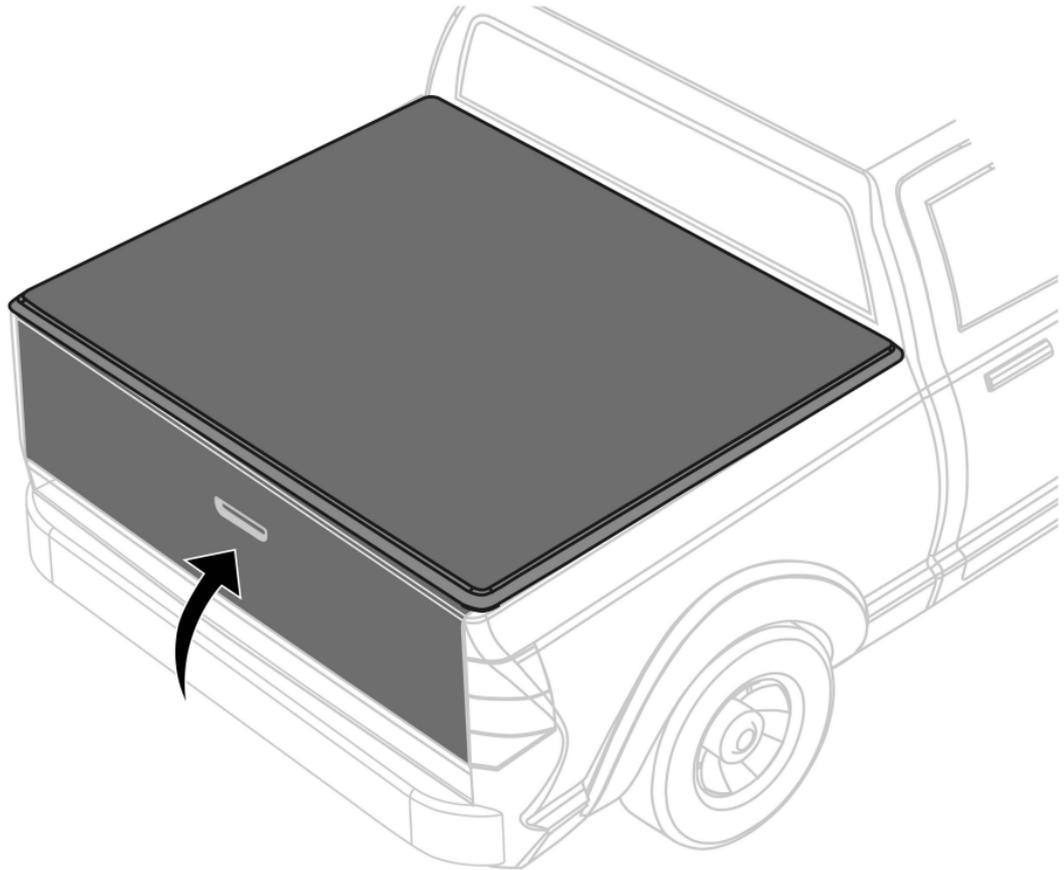


9 CLAMPS & LATCHES OVERVIEW

- THE CLAMPS AND LATCHES ARE ALREADY ATTACHED TO THE ASSEMBLED COVER.

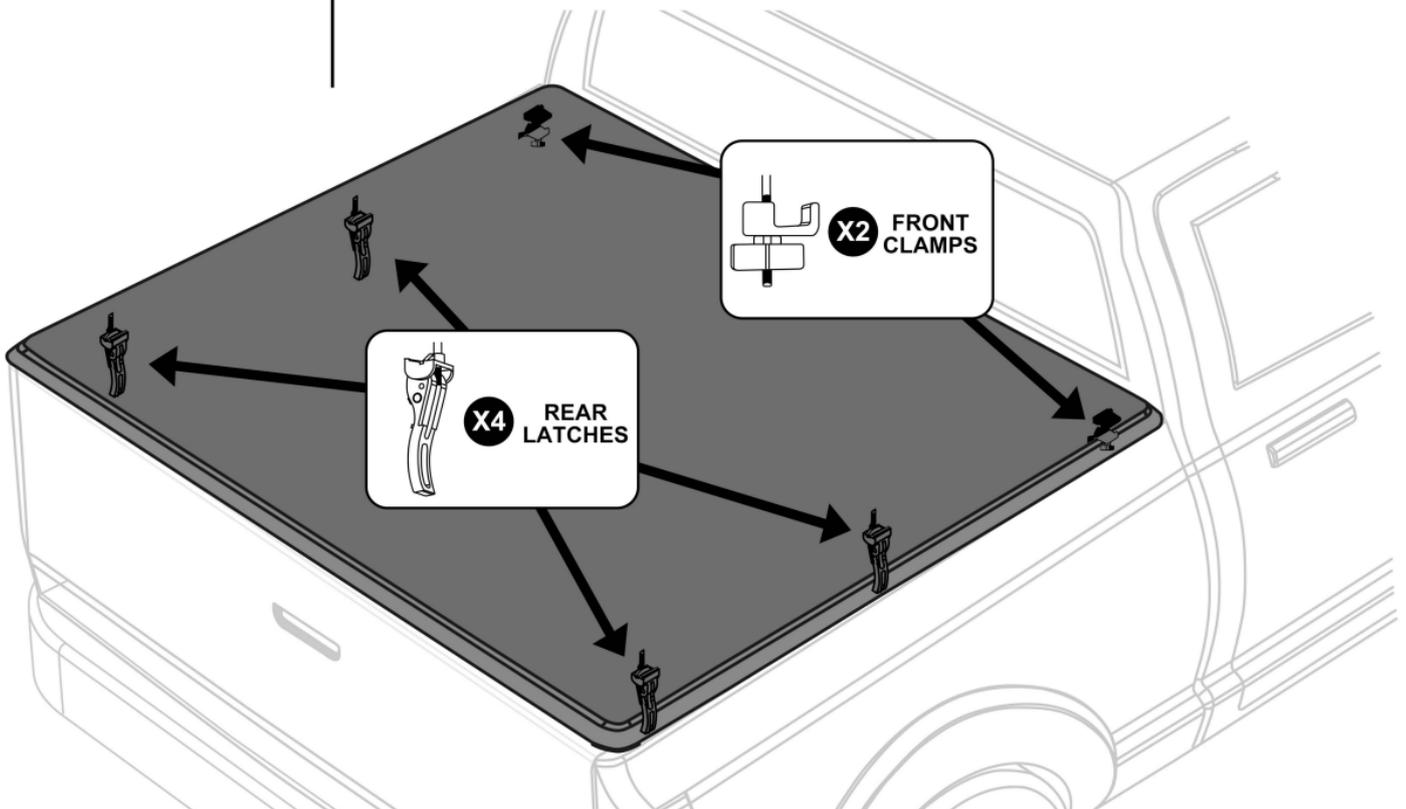


AFTERINSTALLATION

10 FOLDING UP THE COVER

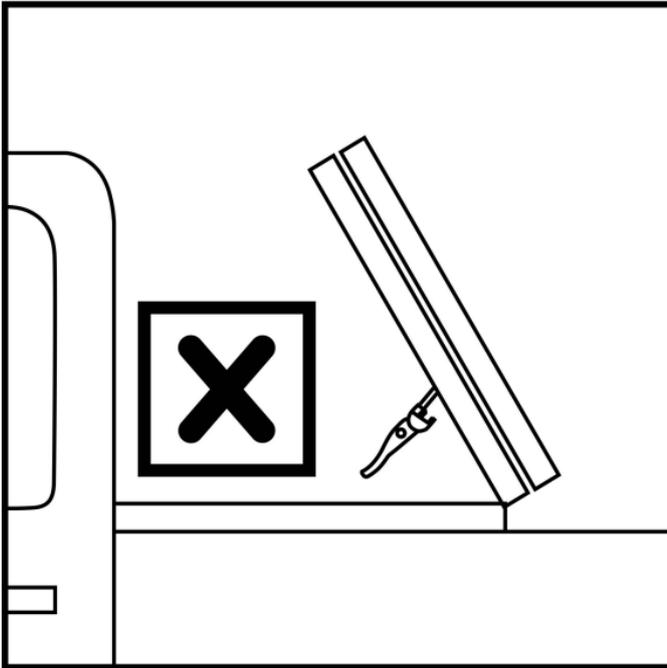

- Rear latches must be tucked in before you fold back the cover.

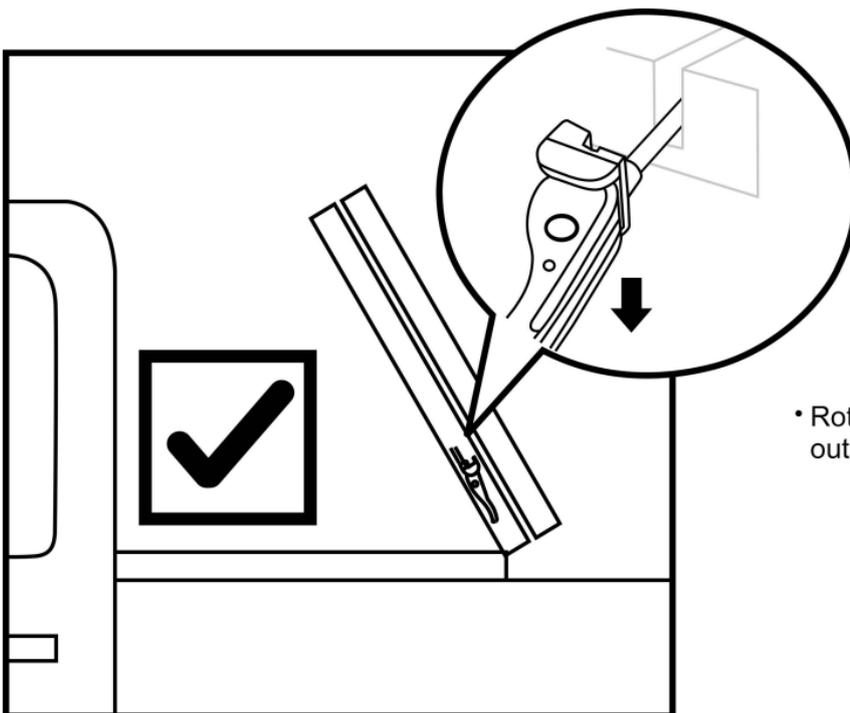

- Rotate the latch so the jaw is not sticking out from the under-side of the cover.