

Notes

Read this instruction carefully before starting installation.

Proper tools will improve the quality of installation and reduce the time required.


All mirrors are asymmetrical design for better view range.

For vehicles without factory heat and signal light functions require an additional wiring.

Power fold/Memory/Auto-Dimming/Blind-Spot functions are not available. If missing parts or any damage found, please take a picture and contact us. Reference the vehicle owner's manual to adjust the new mirrors.

Step 1:

- 1. Open the front door, remove (2) small covers from door handle bowl and inner door lever.
- 2. Remove (2) Philips screws behind the covers.
- 3. Remove the upper extension triangular trim panel.
- 4. Pry up the door switch panel and disconnect all harness connectors.
- 5. Remove (1) push clip.
- 6. Carefully pull the door trim panel to release door sheet panel.

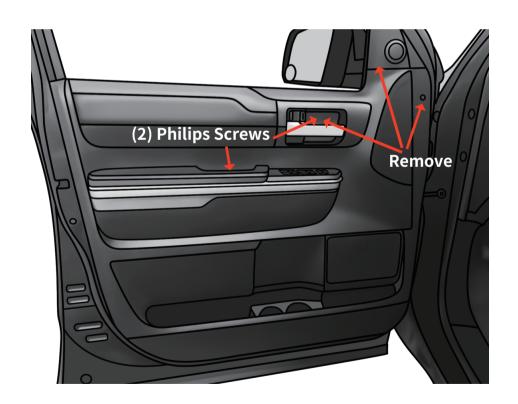

INSTALLATION INSTRUCTIONS

INSTALLATION INSTRUCTIONS

Step 2:

- 1. Disconnect the mirror harness connector.
- 2. Remove (3) 10mm hex nuts securing the factory mirror.
- 3. Carefully remove the factory mirror.

Step 3:

- 1. Take the new mirror, feed studs through the holes on door panel.
- 2. Install (3) provided hex nuts to secure the new mirror. Torque to 80 lb in.
- 3. Connect the mirror harness.


Step 4:

- 1. Take the door trim panel, engage all clips to secure the door trim panel to door sheet panel
- 2. Reinstall (1) push clip.
- 3. Secure the door trim panel using (2) Philips screws.
- 5. Reinstall covers back to the door handle bowl and the inner door lever.

Step 5:

- 1. Repeat above steps on the passenger side.
- 2. Carefully check all mirrors functions before first drive.

Reference Wire Diagram:

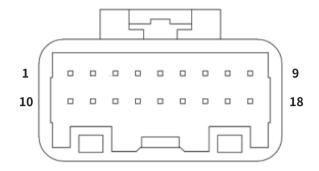

1-3: Mirror Motor

10-11: Mirror Heater

13: Signal Light

18: Clearance Light

4-9: Not Used

12: Signal Ground

14-17: Not Used