

SUPPLIES NEEDED

Adhesion Promoter
Alcohol Wipes
Glass Cleaner
Mild Soap
Sponge


WARNING:

Improper installation and usage will cause the bed mat flying out of the truck, which could result in serious unsafe conditions for the driver and passengers of the vehicle or other vehicles nearby.

Secure the mat onto the truck bed using screws and foam tapes are necessary.

Step 1:

1. Remove the bed mat from the shipping box and lay it face down on ground.
2. Clean the bottom of the bed mat from dirty and debris.
3. Keep the bed mat dry and clean until flatten.

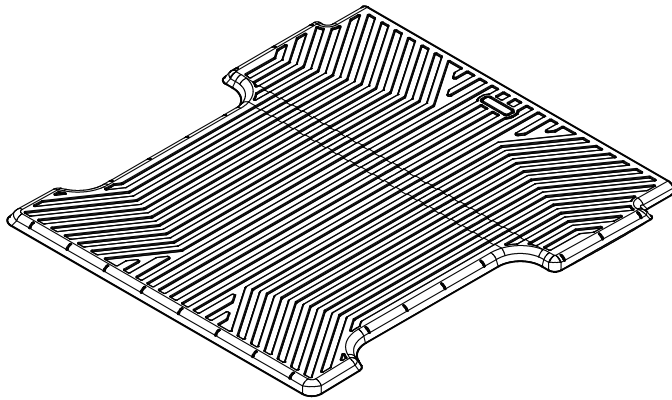


Step 2:


1. Remove all prior installed accessories from bed and tailgate.
2. The bed mat is to only be installed in a truck bed that is in factory original condition ONLY.
3. Clean the truck bed with soap and glass cleaner.

Step 3:

1. On bottom of the bed mat, stick the foam tapes to the corners and the center of the bed mat. Do not install if temperature below 50°F.
2. Place the bed mat into the truck bed and adjust to fit.
3. Clean the attachment location on truck bed using alcohol wipes.
4. For spray in liner bed, apply the adhesion promoter to a lint free cloth then apply a thin layer to the attachment location on liner surfaces.
5. Remove the plastic backing from the foam tapes, and press attachment location at least 30 seconds.

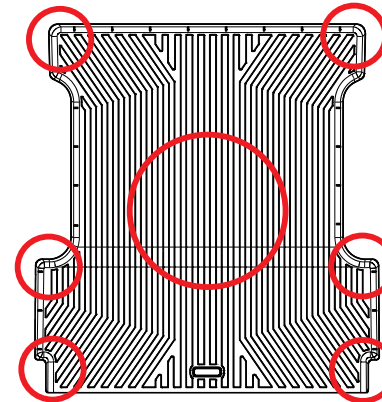

Attachment Location

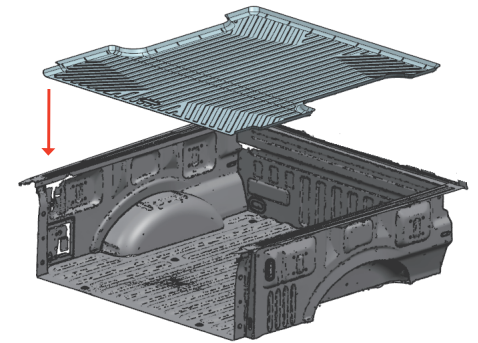

Step 4:

1. Continue press each attachment locations clockwise around the truck bed.
2. On the corner attachment locations, drill the self-tapping screw through the bed mat to the truck bed metal.
3. Periodic check to ensure the bed mat remains secure.