


CARE AND USE INSTRUCTIONS



Use Caution: Exposed studs may cause damage to shoes or apparel upon contact.
Child Safety: Sharp studs may pose a scratch hazard to children. Handle with care.

Tools Required

13mm, 16mm Socket
13mm, 16mm Wrench
Ratchet
Torque Wrench

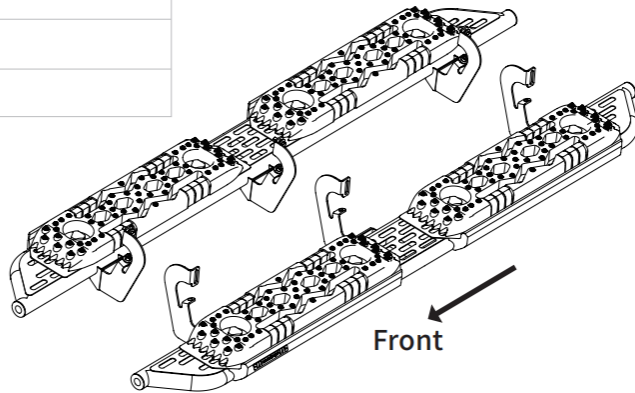

Before Installation:

Read this instruction carefully before starting installation.

Proper tools will improve the quality of installation and reduce the time required.

If missing parts or any damage found, please take a picture and contact us.

Professional installation would be highly recommended.

Periodically check components before routine use and off-road trips, and ensure all mounting hardware remains secure and tight.



Does NOT compatible with diesel engine vehicle.

Installation Order: Mount brackets, position step bars, then tighten all hardware.

Step 1:

1. Locate (3) mounting positions each side.
2. Remove rubber plugs on inner rocker panel.
3. Insert clip nuts onto existing holes in the inner rocker panel.

CARE AND USE INSTRUCTIONS

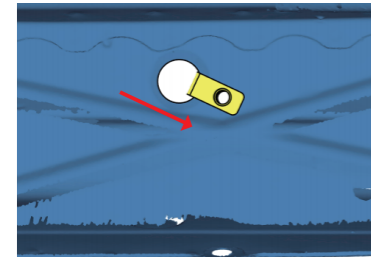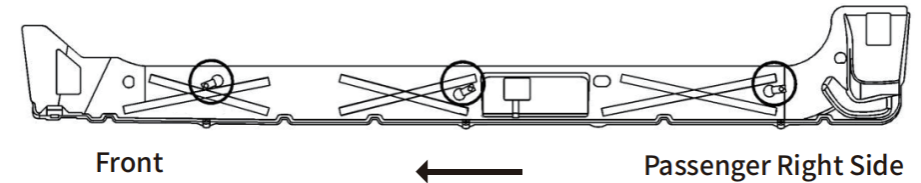


Insert M8 clip nut onto the large hole and over the smaller hole next to it, with threads inside of the inner rocker panel.

Note: Some vehicles may equipped threaded inserts in rocker panel, use them directly in the step 2.


Step 2:

1. Attach the bracket to the inner rocker panel and secure with (1) M8 hex bolt, (1) M8 lock washer, (1) M8 flat washer.
2. Secure the bracket to pinch weld with (1) M8 hex bolt, (2) M8 flat washers, (1) M8 lock washer, (1) M8 hex nut.
3. Repeat to install remaining brackets, do not fully tighten.

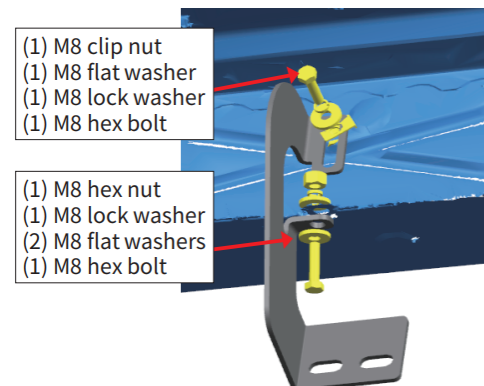


Step 3:

1. With assistance, lift and attach the step bar to brackets. Secure the step bar on brackets with (6) M10 hex bolts (12) M10 flat washers, (6) M10 lock washers, (6) M10 hex nuts.
2. Repeat to install the other side. Do not fully tighten.

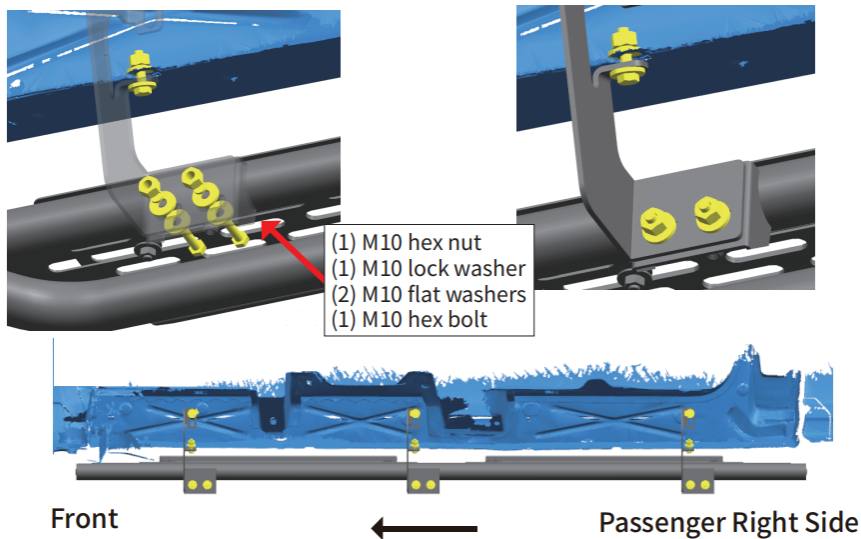**Step 4:**

1. Place the traction boards onto the support panels.
2. Secure the traction boards with (4) M8 triangle knob screws.

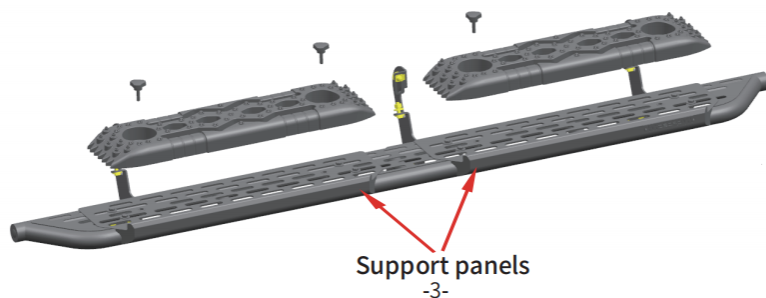**Step 5:**

1. Tighten M8 hex bolts and nuts on vehicle with 15 ft. lbs. torque.
2. Adjust the step bar to level and tighten M10 hex bolts and nuts with 31 ft. lbs. torque.
3. After the step bar installed, periodic check to ensure all mounting hardware remains secure and tight.

Part List:

	Qty.	Description		Qty.	Description
①	×3	Driver Side Bracket	⑧	×12	M10 Lock Washer
②	×3	Passenger Side Bracket	⑨	×6	M8 Hexagon Nut
③	×12	M8×25 Hexagon Bolt	⑩	×12	M10 Hexagon Nut
④	×12	M10×30 Hexagon Bolt	⑪	×6	M8 Clip Nut
⑤	×18	M8×24 Flat Washer	Pre-Install on Step Bar		
⑥	×24	M10×25 Flat Washer	⑫	×8	Triangle knob screws
⑦	×12	M8 Lock Washer			

