

Tools Required

13mm, 16mm Socket

Ratchet

Torque Wrench

Before Installation:


Read this instruction carefully before starting installation.

Proper tools will improve the quality of installation and reduce the time required.

If missing parts or any damage found, please take a picture and contact us.


Professional installation would be highly recommended.

Periodic check to ensure all mounting hardware remains secure and tight.

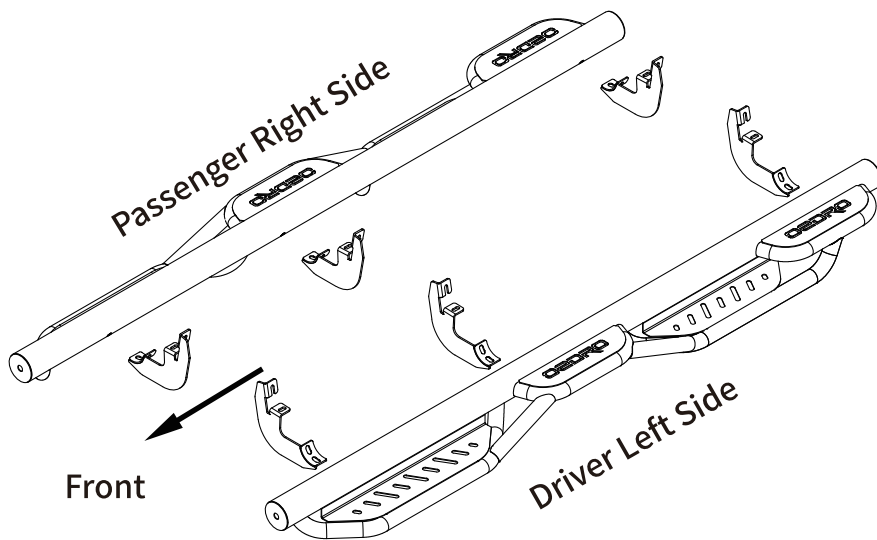


Step 1:

1. Locate (3) mounting positions each side.
2. Remove rubber plugs on inner rocker panel.
3. Insert clip nuts onto existing holes in the inner rocker panel.

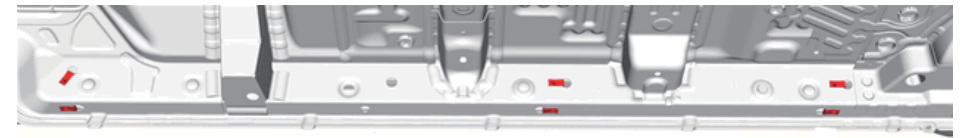

Driver Left Side


Front

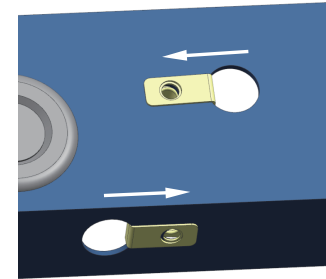


Insert M8 clip nut onto the large hole and over the smaller hole next to it, with threads inside of the inner rocker panel.

Step 2:



1. Attach bracket to the rocker panel and secure with (2) M8 hex bolts, (2) M8 flat washers, (2) M8 lock washers.
2. Repeat to install all brackets. Do not fully tighten.

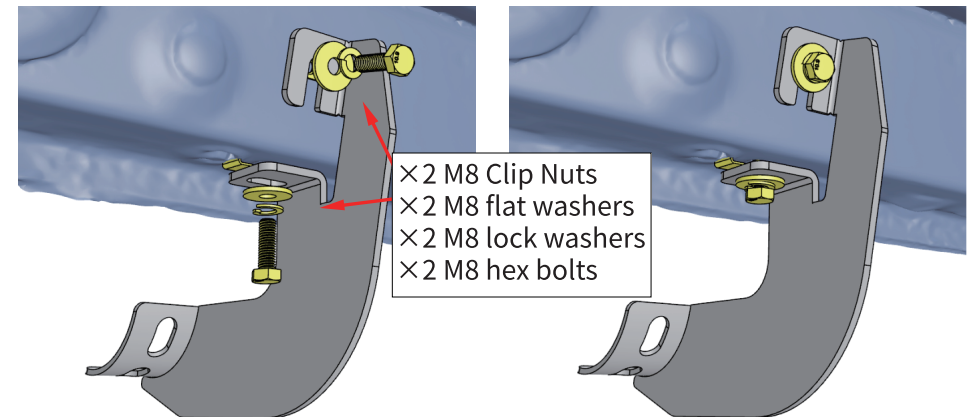

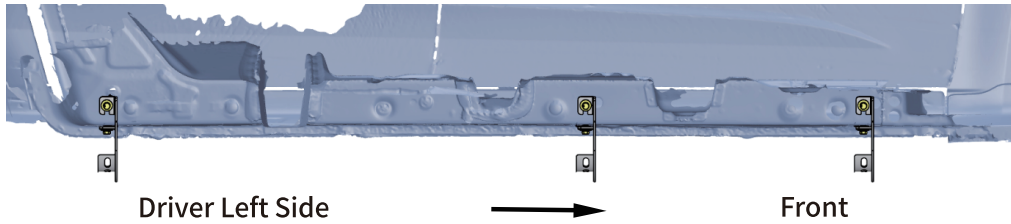

Step 3:

1. With assistance, lift and attach the step bar to brackets. Secure the step bar on brackets using (8) M8 hex bolts, (8) M8 flat washers, (8) M8 lock washers.
2. Repeat to install the other side step bar.

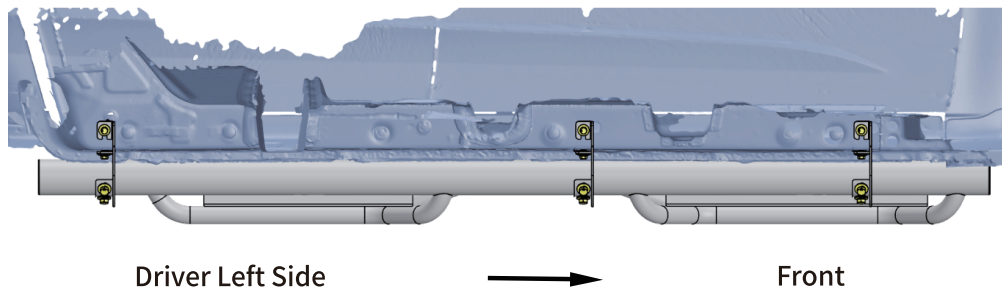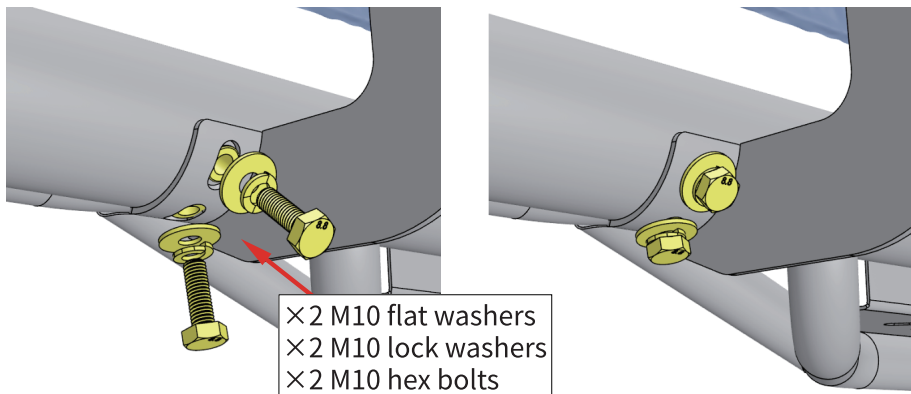


Step 4:


1. Tighten M8 hex bolts on vehicle with 15 ft. lbs. torque.
2. Adjust the step bar to level and tighten M10 hex bolts with 30 ft. lbs. torque.
3. After the step bar installed, periodic check to ensure all mounting hardware remains secure and tight.

Part List:


	Qty.	Description
①	×3	Driver Left Side Bracket
②	×3	Passenger Right Side Bracket
③	×12	M10×30 Hexagon Bolt
④	×12	M8×25 Hexagon Bolt
⑤	×12	M10×25 Flat Washer
⑥	×12	M8×24 Flat Washer
⑦	×12	M10 Lock Washer
⑧	×12	M8 Lock Washer
⑨	×12	M8 Clip Nut

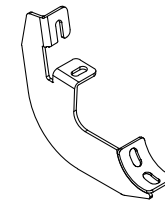


①

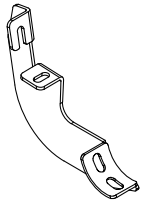

②

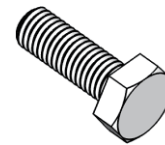


③

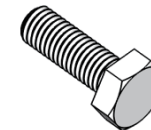


④



⑤

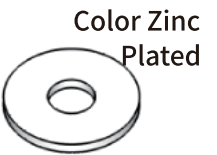


⑥



⑦



⑧

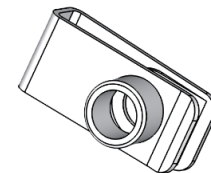

⑨