

Notes

Read this instruction carefully before starting installation.

Proper tools will improve the quality of installation and reduce the time required.

All mirrors are asymmetrical design for better view range.

For vehicles without factory heat and signal light functions require an additional wiring.


Power fold/Memory/Auto-Dimming functions are not available.

If missing parts or any damage found, please take a picture and contact us. Reference the vehicle owner's manual to adjust the new mirrors.

Reuse the factory components if the factory mirrors euquipped ambient sensor.

Step 1:

- 1. Open the front door to remove the upper extension triangular trim panel.
- 2. Remove (3) rubber plug beside triangular trim panel.
- 3. Remove cover under the hoor grab.
- 4. Pry up the door switch panel, and disconnect all connctors.
- 5. Remove (4) 7mm bolts.
- 6. Carefully pull the door trim panel up and remove from door panel.

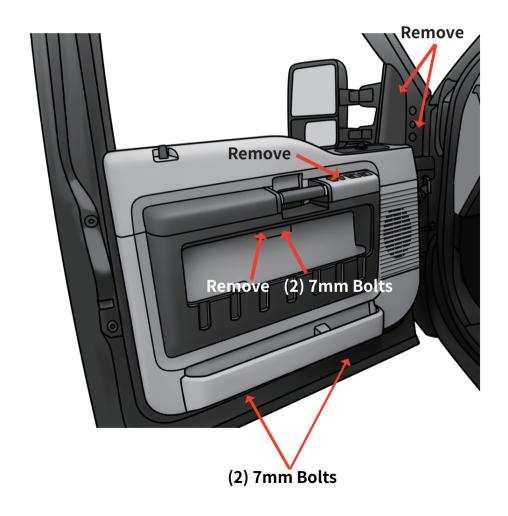

INSTALLATION INSTRUCTIONS

INSTALLATION INSTRUCTIONS

Step 2:

- 1. Peel up the weather shield (do not remove), and disconnect mirror harness. Remove the speaker may necessory (7mm bolts).
- 2. Remove (4) 11mm hex nuts.
- 3. Carefully remove factory mirror.

Step 3:

- 1. Take the new mirror, feed studs and harness through the holes on door panel.
- 2. Install (4) provided hex nuts to secure the new mirror. Torque to 80 lb in.
- 3. Connect mirror harness.


Step 4:

- 1. Take the door trim panel, reinstall the courtesy lamp socket and feed the door lock tab through the hole.
- 2. Positon the door trim panel and reinstall (4) 7mm bolts.
- 3. Connect all conenctor back to door switch panel, and reinstall the panel.
- 4. Reinstall the cover under the hoor grab.
- 5. Reinstall the triangular trim panel and (3) rubber plugs.

Step 5:

- 1. Repeat above steps on the passenger side.
- 2. Carefully check all mirrors functions before first drive.

Reference Wire Diagram:

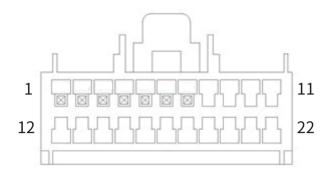

1-3: Mirror Motor

5: Ground

7: Side Marker

4: Turn Signal

6: Mirror Heater