


CARE AND USE INSTRUCTIONS



Use Caution: Exposed studs may cause damage to shoes or apparel upon contact.
Child Safety: Sharp studs may pose a scratch hazard to children. Handle with care.

Tools Required

16mm 13mm Socket
16mm Wrench
Ratchet
Torque Wrench

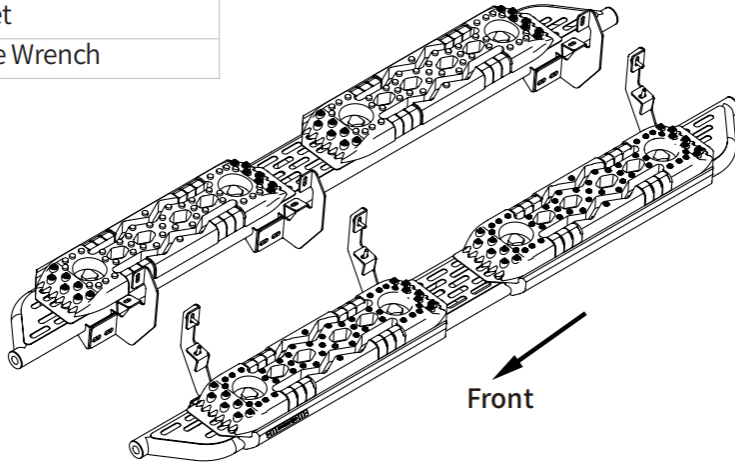

Before Installation:

Read this instruction carefully before starting installation.

Proper tools will improve the quality of installation and reduce the time required.

If missing parts or any damage found, please take a picture and contact us.

Professional installation would be highly recommended.

Periodically check components before routine use and off-road trips, and ensure all mounting hardware remains secure and tight.

Installation Order: Mount brackets, position step bars, then tighten all hardware.

Step 1:

1. Locate (3) mounting positions each side.
2. Remove factory plugs from mounting positions.
3. Clean the sealant and dirt around mounting positions.

CARE AND USE INSTRUCTIONS





Driver Left Side

Front

Step 2:

1. Attach bracket to the rocker panel and secure with (2) M8 hex bolts, (2) M8 flat washers, (2) M8 lock washers.
2. Repeat to install all brackets. Do not fully tighten.

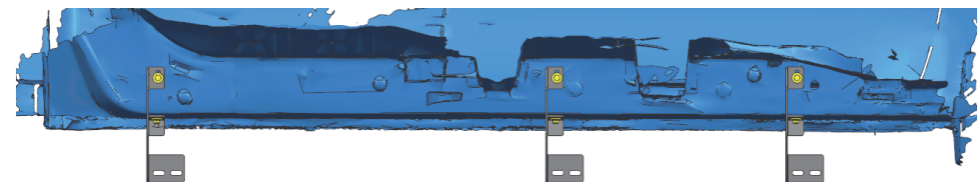
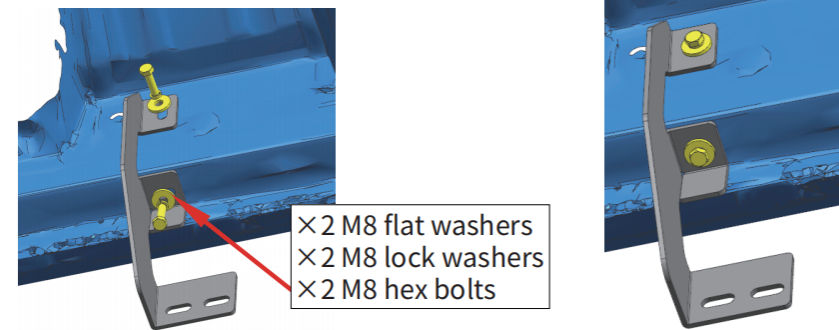


Driver Left Side

Front


Step 3:

1. With assistance, lift and attach the step bar to brackets. Secure the step bar on brackets using (6) M10 hex bolts, (6) M10 het nuts, (6) M10 flat washers, (6) M10 lock washers.
2. Repeat to install the other side step bar.

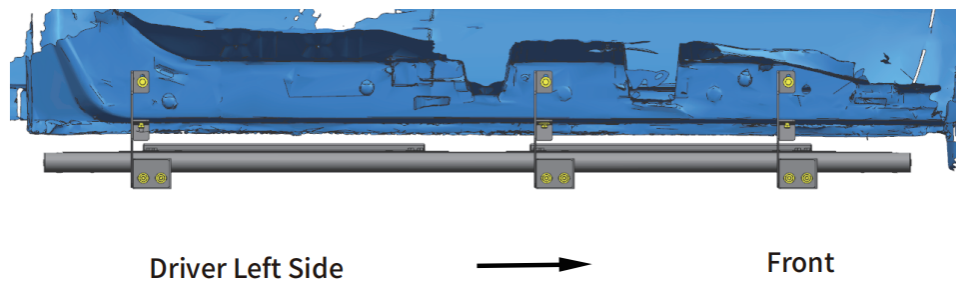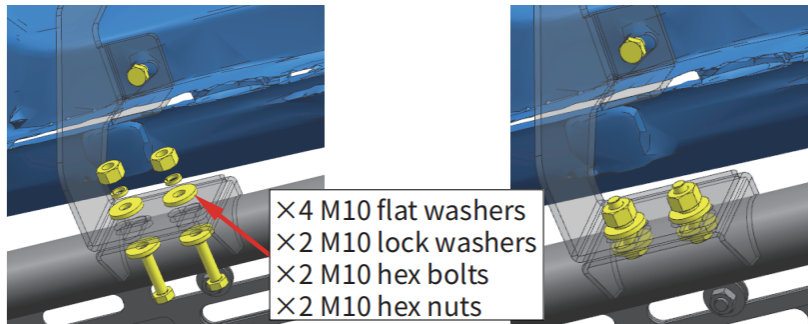

Step 4:

1. Place the traction boards onto the support panels.
2. Secure the traction boards with (4) M8 triangle knob screws.

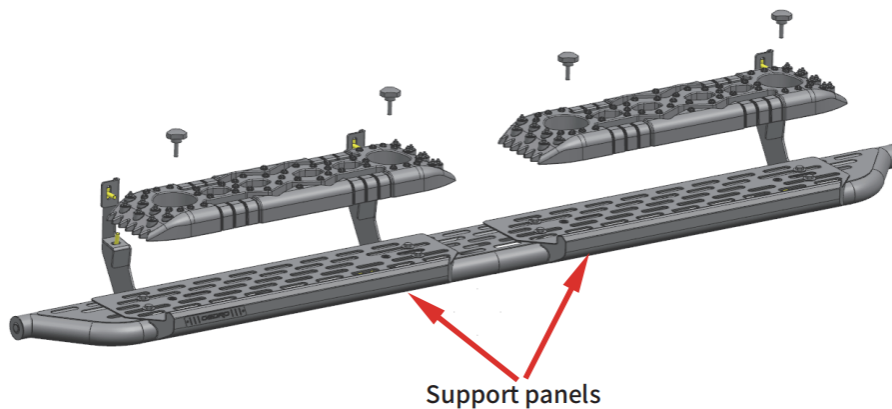

Step 5:

1. Tighten M8 hex bolts on vehicle with 15 ft. lbs. torque.
2. Adjust the step bar to level and tighten M8 hex bolts with 15 ft. lbs. torque.
3. After the step bar installed, periodic check to ensure all mounting hardware remains secure and tight.

Part List:

	Qty.	Description
①	×3	Driver Side Bracket
②	×3	Passenger Side Bracket
③	×12	M8×25 Hexagon Bolt
④	×12	M10×30 Hexagon Bolt
⑤	×12	M8×24 Flat Washer
⑥	×24	M10×25 Flat Washer
⑦	×12	M8 Lock Washer
⑧	×12	M10 Lock Washer
⑨	×12	M10 Hexagon Nut
Pre-Install on Step Bar		
⑩	×8	Triangle knob screws

