


Tools Required

13mm Socket

Ratchet

Torque Wrench

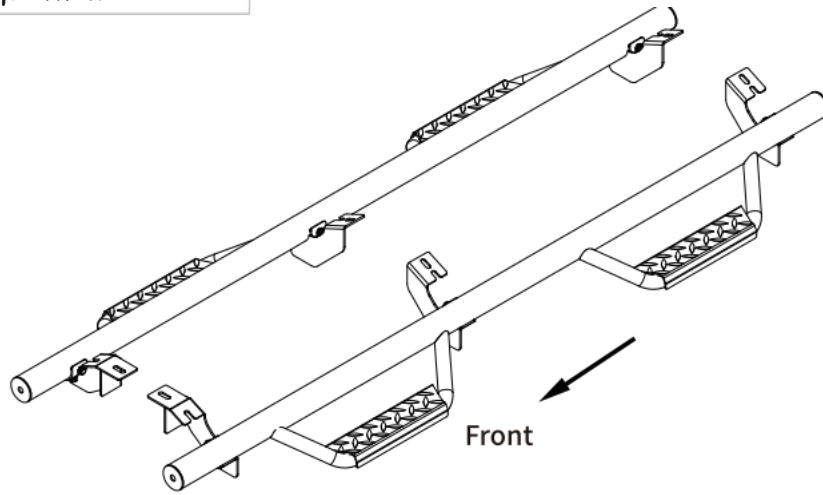

Before Installation:

Read this instruction carefully before starting installation.

Proper tools will improve the quality of installation and reduce the time required.

If missing parts or any damage found, please take a picture and contact us.

Professional installation would be highly recommended.


Periodic check to ensure all mounting hardware remains secure and tight.

Step 1:


1. Locate (3) mounting positions each side.
2. Remove factory plugs from mounting positions.
3. Clean the sealant and dirt around mounting positions.

Step 2:


1. Attach bracket to the rocker panel and secure with (2) M8 hex bolts, (2) M8 flat washers, (2) M8 lock washers.
2. Repeat to install all brackets. Do not fully tighten.

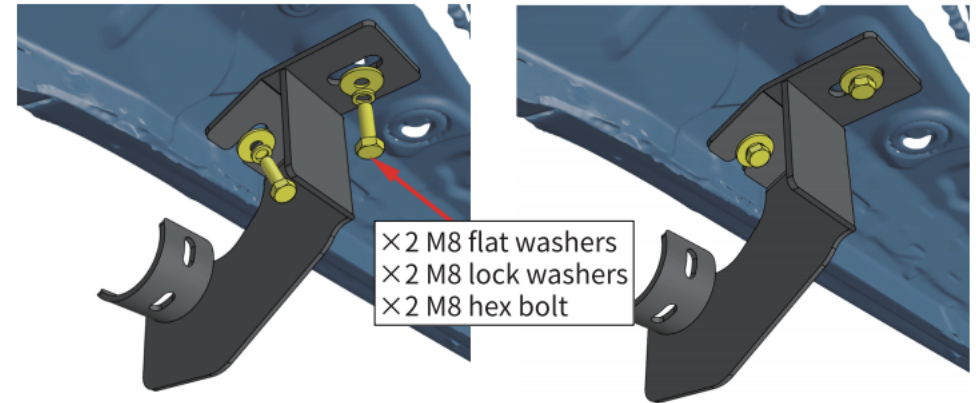

Front Passenger Side Bracket


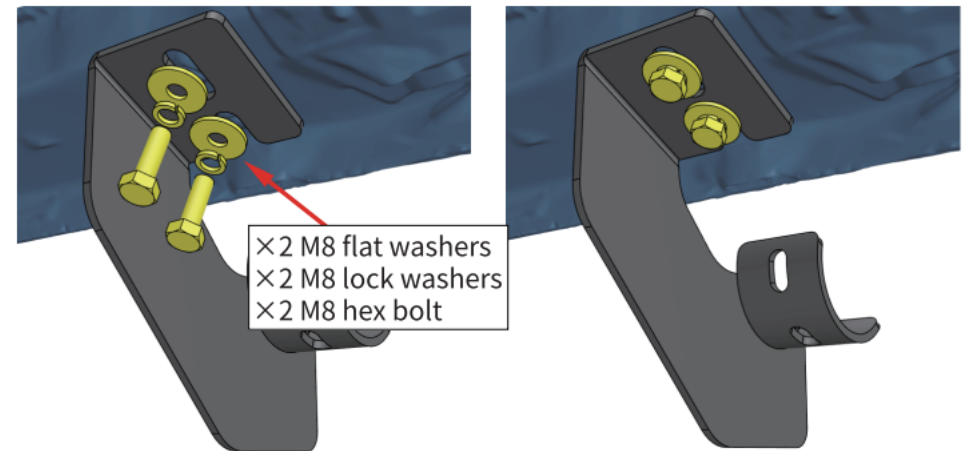


Center/Rear Passenger Side Bracket

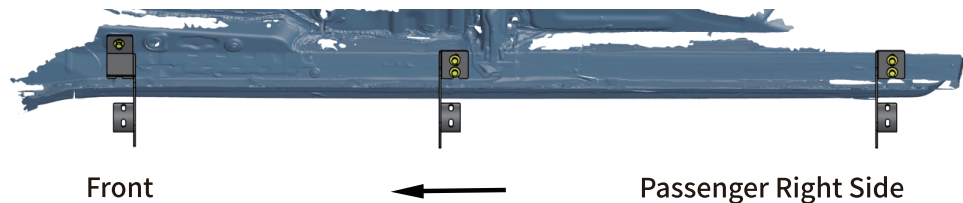

Step 3:

1. With assistance, lift and attach the step bar to brackets. Secure the step bar on brackets using (6) M8 hex bolts, (6) M8 flat washers, (6) M8 lock washers.
2. Repeat to install the other side step bar.

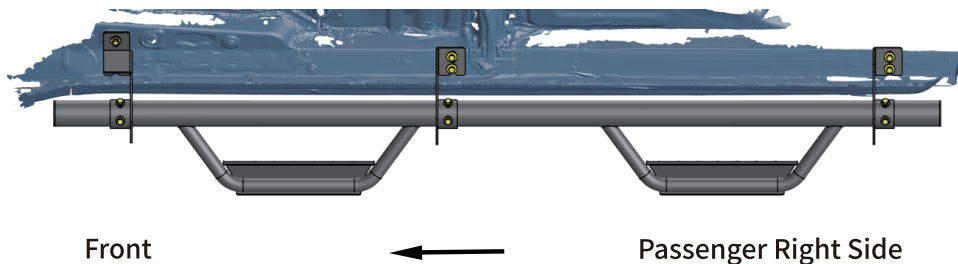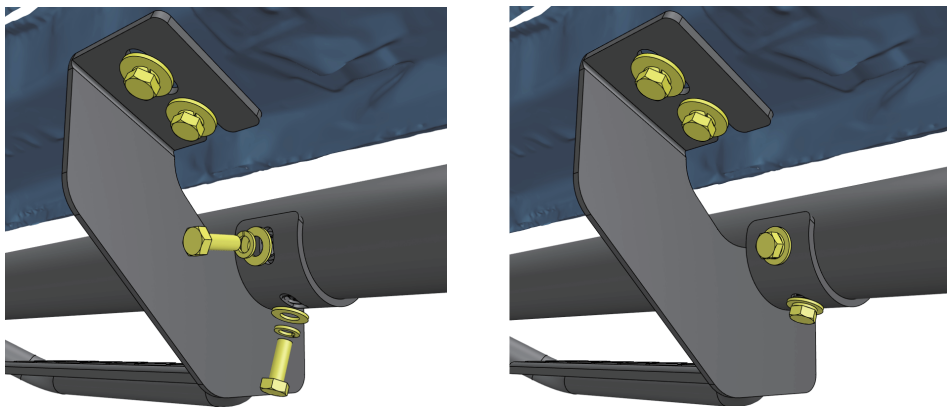


Step 4:


1. Tighten M8 hex bolts on vehicle with 15 ft. lbs. torque.
2. Adjust the step bar to level and tighten M8 hex bolts with 15 ft. lbs. torque.
3. After the step bar installed, periodic check to ensure all mounting hardware remains secure and tight.

Part List:


	Qty.	Description
①	×1	Driver Side Front Bracket
②	×2	Driver Side Center/Rear Bracket
③	×1	Passenger Side Front Bracket
④	×2	Passenger Side Center/Rear Bracket
⑤	×24	M8×25 Hexagon Bolt
⑥	×24	M8×24 Flat Washer
⑦	×24	M8 Lock Washer

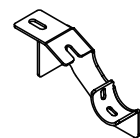


①




②

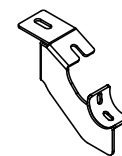


③



④

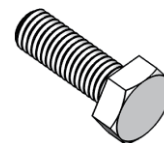

⑤

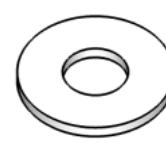

⑥



⑦