## Before You Begin

**Read instructions thoroughly before installation.**

**Installation Order:** Mount brackets, position step bars, then tighten all hardware.

**Use proper** tools to ensure a correct fit and save time.


Damaged or missing parts? Please take a photo and contact us for support.

**Professional installation** would be highly recommended.

**Maintenance:** Periodically check all hardware to ensure it remains secure and tight.

## Step 1:

1. Locate (3) mounting positions each side.
2. Remove factory bolts or plugs from inner rocker panel.
3. Clean the sealant and dirt around mounting positions.

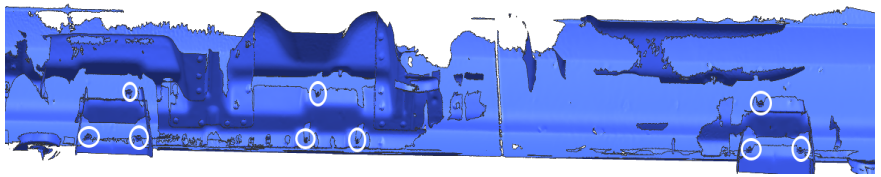



Front ← Passenger Right Side



## Step 2:

1. Attach bracket to the inner rocker panel, feed the factory studs through the holes on mounting bracket.
2. Secure the mounting bracket with (3) M8 flat washers, (3) M8 Hexagon Flange Nut
3. Repeat to install all brackets. Do not fully tighten.

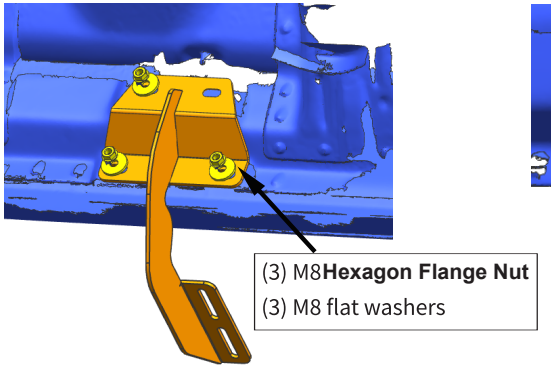


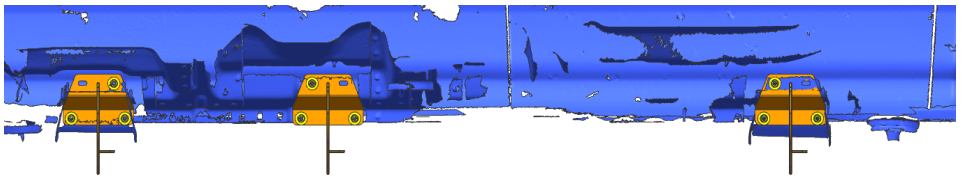



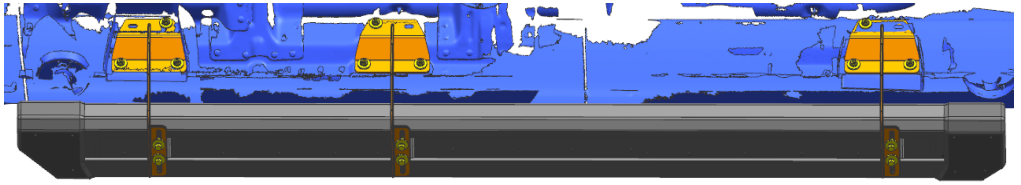
Front ← Passenger Right Side

## Step 3:

1. Remove (6) M8 hex bolts and (6) M8 flat washers from the step bar.
2. Slide mounting tracks to proper positions.
3. With assistance, lift and attach the step bar to brackets.
   Secure the step bar on brackets with (6) M8 hex bolts and (6) M8 flat washers.
4. Repeat to install the other side step bar, do not fully tighten.

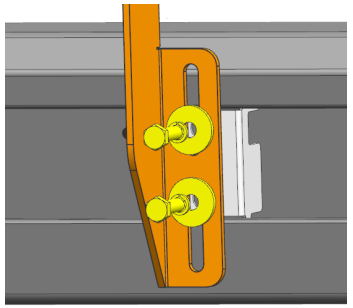

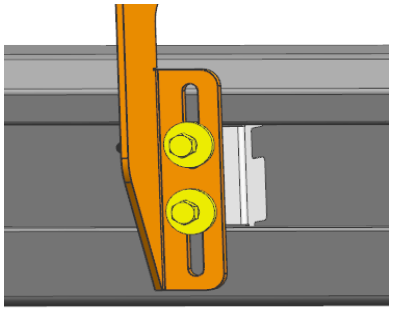



Front ← Passenger Right Side




## Step 4:


1. Tighten M8 hex nuts on vehicle with 15 ft-lbs. torque.
2. Adjust the step bar to level and tighten M8 hex bolts with 15 ft-lbs. torque.
3. After the step bar installed, periodic check to ensure all mounting hardware remains secure and tight.

## Part List:


| | Qty. | Description |
|---|---|---|
| ① | ×3 | Driver Left Side Bracket (D) |
| ② | ×3 | Passenger Right Side Bracket (P) |
| ③ | ×18 | M8×24 Flat Washer |
| ④ | ×18 | M8 Hexagon Flange Nut |

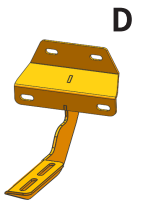


①

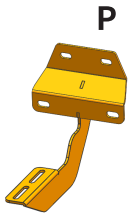


②

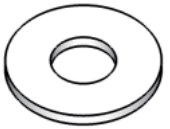

③



④