

Before You Begin :

Read instructions thoroughly before installation.

Installation Order: Mount brackets, position step bars, then tighten all hardware.


Use proper tools to ensure a correct fit and save time. Damaged or missing parts? Please take a photo and contact us for support.

Professional installation would be highly recommended.

Maintenance: Periodically check all hardware to ensure it remains secure and tight.

Step 1:

1. Locate (3) mounting positions each side.
2. Remove factory bolts or plugs from inner rocker panel.
3. Clean the sealant and dirt around mounting positions.

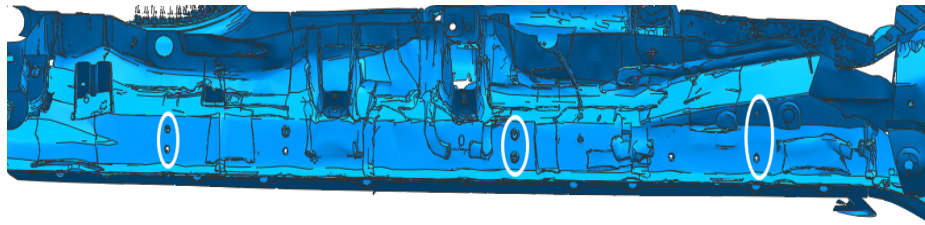


Driver Left Side




Front

Step 2:


1. Attach bracket to inner rocker panel.
2. Secure the bracket to inner rocker panel using (2) M8 hex bolts, (2) M8 Lock Washer (2) M8 flatwashers.
3. Repeat to install other brackets. Do not fully tighten.

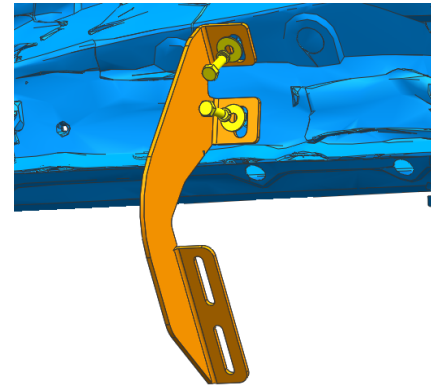

Front Driver Side Bracket

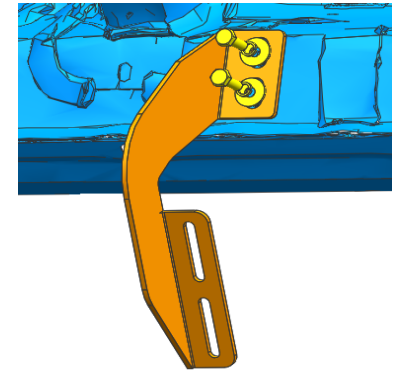

Center/Rear Driver Side Bracket

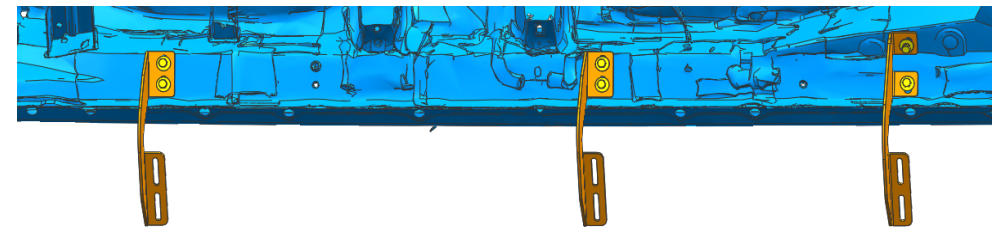


Driver Left Side




Front

Step 3:

1. Remove (6) M8 hex bolts, (6) M8 flat washers, (6) M8 lock washers.
2. Slide mounting tracks to proper positions.
3. With assistance, lift and attach the step bar to brackets.
Secure the step bar on brackets with, (6) M8 hex bolts, (6) M8 flat washers, (6) M8 lock washers.
4. Repeat to install the other side step bar, do not fully tighten.

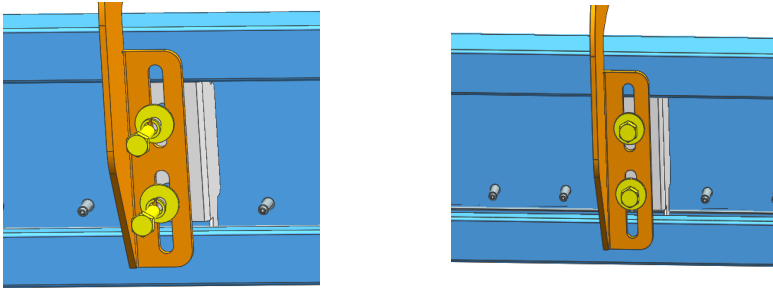

The pedal is connected to the bracket

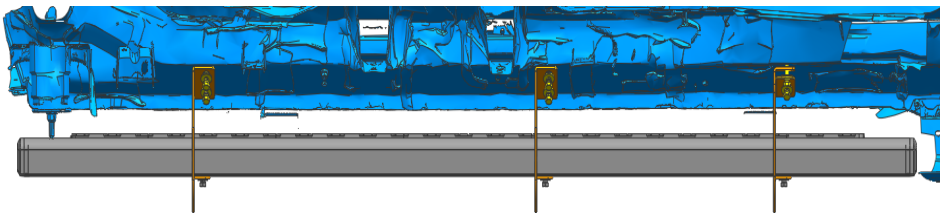

Driver Left Side



Front

Step 4:

1. Tighten M8 hex bolts on vehicle with 15 ft-lbs. torque.
2. Adjust the step bar to level and tighten M8 hex bolts with 15 ft-lbs. torque.
3. After the step bar installed, periodic check to ensure all mounting hardware remains secure and tight.

Part List:

	Qty.	Description
①	× 1	Driver Side Front Bracket
②	× 2	Driver Side Center/Rear Bracket
③	× 1	Passenger Side Front Bracket
④	× 2	Passenger Side Center/Rear Bracket
⑤	× 12	M8 × 25 Hexagon Bolt
⑥	× 12	M8 × 24 Flat Washer
⑦	× 12	M8 Lock Washer

