


Tools Required

13mm Socket
13mm Wrench
Ratchet
Torque Wrench

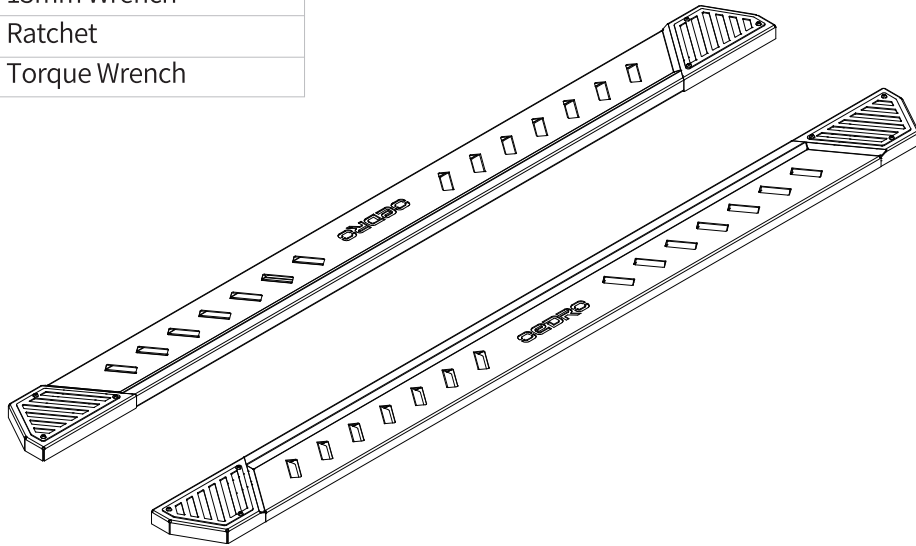

Before Installation:

Read this instruction carefully before starting installation.

Proper tools will improve the quality of installation and reduce the time required.


If missing parts or any damage found, please take a picture and contact us.

Professional installation would be highly recommended.

Periodic check to ensure all mounting hardware remains secure and tight.

Step 1:

1. Locate (4) mounting positions each side.
2. Remove factory plugs from mounting positions.
3. Clean the sealant and dirt around mounting positions.



Front



Passenger Right Side




Note:


Clean the rust and dirt around the threads before installation. Proper lubrication is required.

Step 2:

1. Attach bracket to the rocker panel and secure with (2) M8×30 hex bolts, (2) M8 flat washers, (2) M8 lock washers.
2. Repeat to install all brackets.
Do not fully tighten.

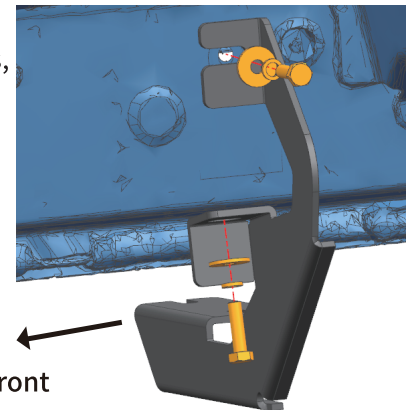

Front

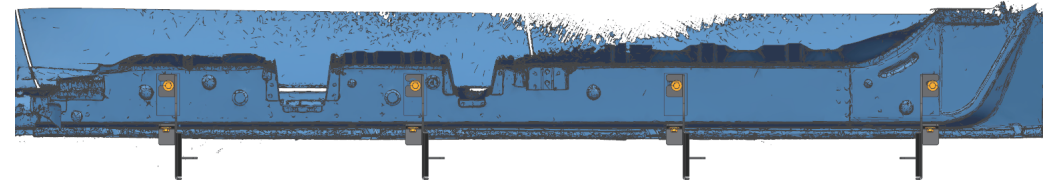

Front



Passenger Right Side





Note:

The rear bracket is in the opposite direction to the front and center brackets.

Step 3:

1. Insert (3) twin head bolt plates into the rail behind the running board.
2. With assistance, lift and attach the running board to brackets and secure with (6) M8 flat washers, (6) M8 lock washers, (6) M8 hex nuts.

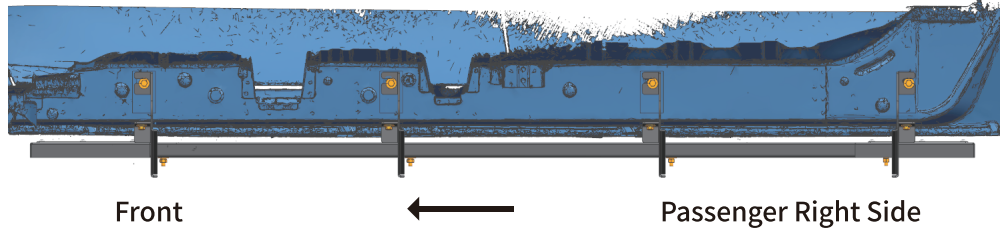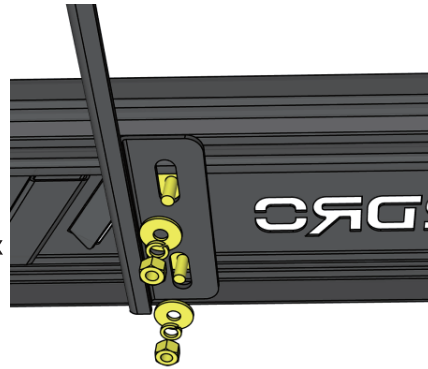

Note:
The rear bracket is in the opposite direction to the front and center brackets.


Step 4:

1. Tighten M8 hex bolts on vehicle with 15 ft-lbs. torque.
2. Adjust the step bar to level and tighten M8 hex nuts with 15 ft-lbs. torque.
3. After the step bar installed, periodic check to ensure all mounting hardware remains secure and tight.




Part List:

	Qty.	Description
①	× 4	Front & Center Driver Side Rear Passenger Side Bracket
②	× 4	Front & Center Passenger Side Rear Driver Side Bracket
③	× 16	M8×30 Hexagon Bolt
④	× 8	M8 Twin-Head Bolt Plate
⑤	× 32	M8×24 Flat Washer
⑥	× 32	M8 Lock Washer
⑦	× 16	M8 Hexagon Nut

FL/CL/RR

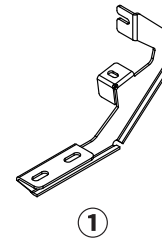

FR/CR/RL

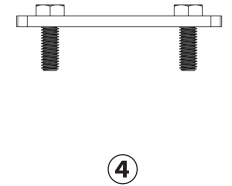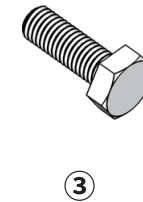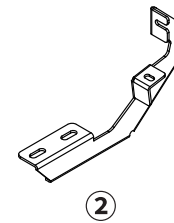

FL=Front Driver Left Side
CL=Center Driver Left Side
RL=Rear Driver Left Side
FR=Front Passenger Right Side
CR=Center Passenger Right Side
RR=Rear Passenger Right Side