


Tools Required

13mm Socket
10mm Socket
Ratchet
Torque Wrench

Part List

1	Driver Left Side Step Bar
1	Passenger Right Side Step Bar
6	M8 Hexagon Bolt
12	M6 Round Head Square Neck Bolt
6	M8 Flat Washer
12	M6 Flat Washer
6	M8 Spring Washer
12	M6 Spring Washer
12	M6 Hexagon Nut

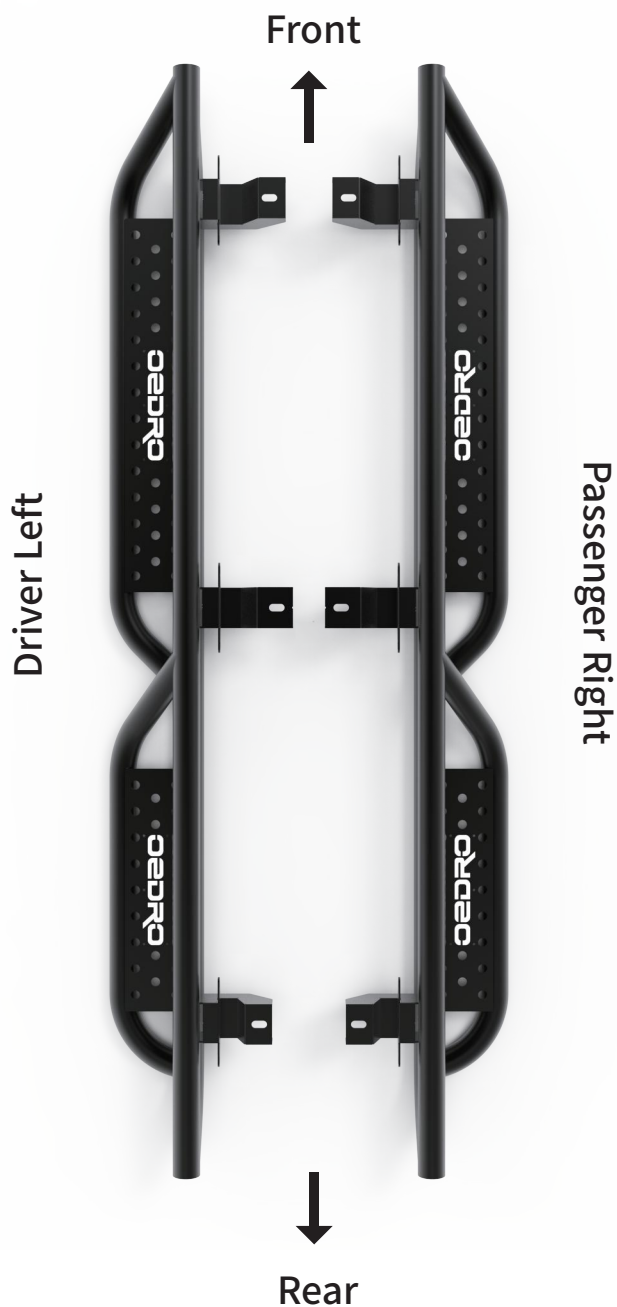

Notes

Read this instruction carefully before starting installation.

Verify all parts especially the direction of mounting brackets before installation.

If missing parts or any damage found, please take a picture and contact us.

Step 1:

1. Remove factory rock rail if equipped. Three mounting positions each side.
2. Remove (6) M6 hex nuts on rocker panel and (3) M8 hex bolts on body frame.

⚠️Note: The step bar and factory rock rail cannot coexist.

Step 2:

1. With assistance, lift step bar up and attach the mounting brackets to the rocker panel and align (6) mounting holes.
2. And secure with (6) M6 bolts, (6) M6 flat washers, (6) M6 spring washers (6) M6 hex nuts.
3. Do not fully tighten.



Step 3:

1. After the bracket is attached, secure the mounting tabs on body panel with (3) M8 hex bolts, (3) M8 flat washers, (3) M8 spring washers.
2. Do not fully tighten.



Step 4:

1. Tighten the M6 bolts and nuts on rocker panel with 10 ft. lbs.
2. Tighten the M8 bolts on body panel with 20 ft. lbs.
3. Periodic check to ensure all mounting hardware were remain secure and tight.

