


Tools Required

13mm, 16mm Socket
16mm Wrench
Ratchet
Torque Wrench

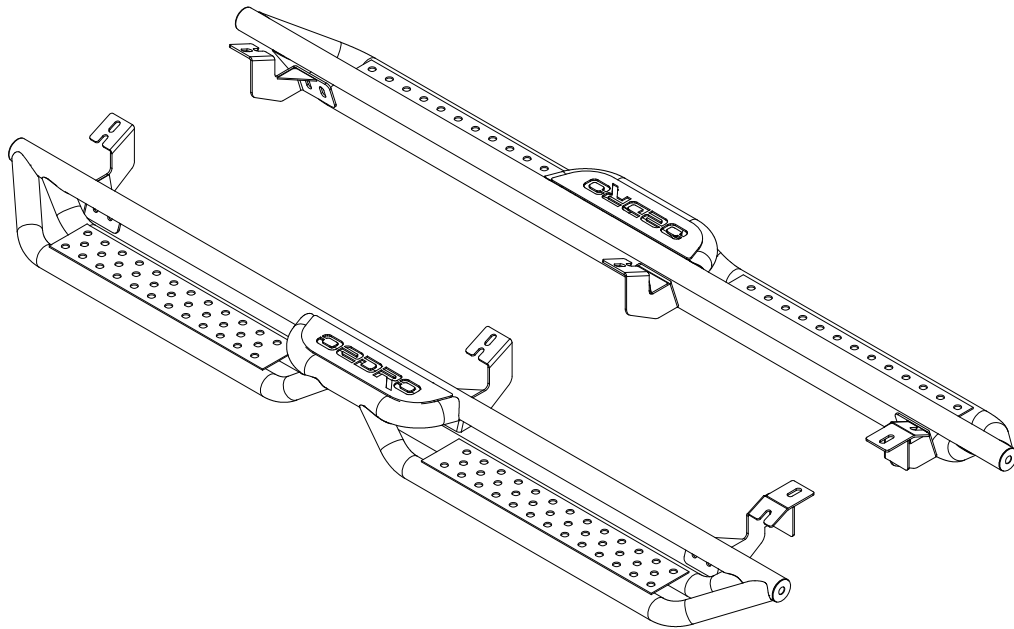

Notes

Read this instruction carefully before starting installation.
Proper tools will improve the quality of installation and reduce the time required.
If missing parts or any damage found, please take a picture and contact us.


Step 1:

1. Locate (3) mounting positions each side.
2. Remove factory plugs or hex bolts from mounting positions.
3. Clean the sealant and dirt around mounting positions.


Step 2:

1. Attach bracket to the rocker panel and secure with (2) M8 hex bolts, (2) M8 flat washers, (2) M8 lock washers.
2. Repeat to install all brackets. Do not fully tighten.


Note: Driver left side is shown.

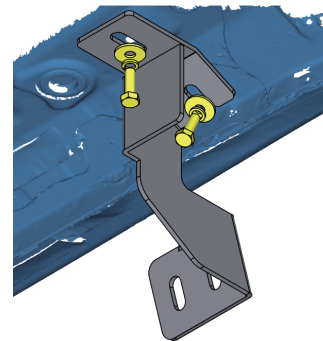

Front Bracket

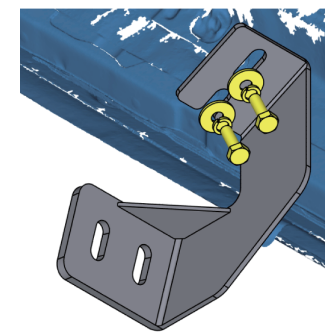

Center Bracket

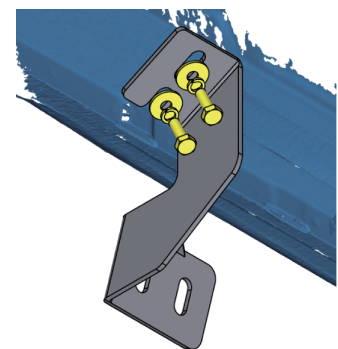

Rear Bracket




Driver Left Side



Front


Step 4:

1. With assistance, lift and attach the step bar to brackets. Secure the step bar on brackets using (6) M10 hex bolts, (12) M10 flat washers, (6) M10 lock washers, (6) M10 hex nuts.
2. Repeat to install the other side step bar.

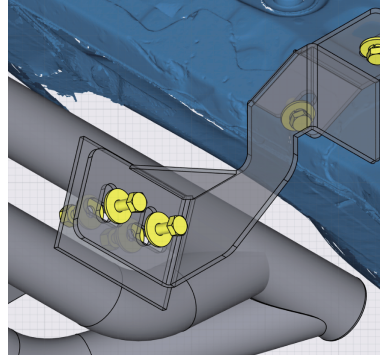

Step 5:

1. Tighten M8 hex bolts on vehicle with 15 ft. lbs. torque.
2. Adjust the step bar to level and tighten M10 hex bolts and nuts with 31 ft. lbs. torque.
3. After the step bar installed, periodic check to ensure all mounting hardware remains secure and tight.

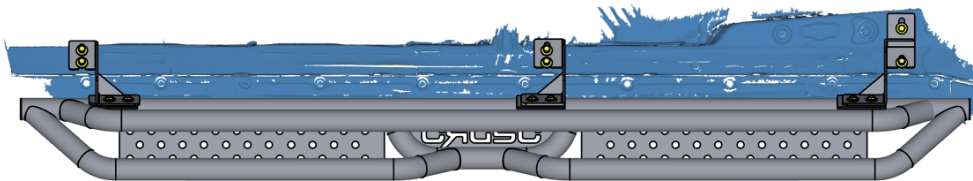










Driver Left Side



Front

Part List:

	Qty.	Description			
			⑦	× 12	M10×30 Hexagon Bolt
①	× 1	Front Driver Side Bracket	⑧	× 12	M8×25 Hexagon Bolt
②	× 1	Front Passenger Side Bracket	⑨	× 24	M10×25 Flat Washer
③	× 1	Center Driver Side Bracket	⑩	× 12	M8×24 Flat Washer
④	× 1	Center Passenger Side Bracket	⑪	× 12	M10 Lock Washer
⑤	× 1	Rear Driver Side Bracket	⑫	× 12	M8 Lock Washer
⑥	× 1	Rear Passenger Side Bracket	⑬	× 12	M10 Hexagon Nut

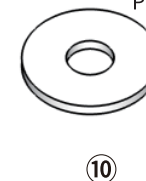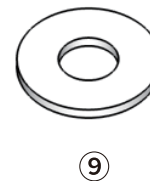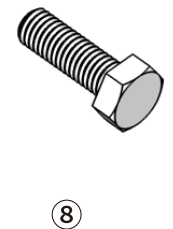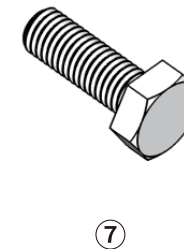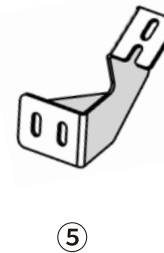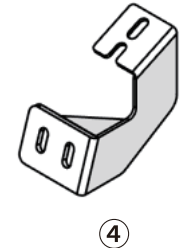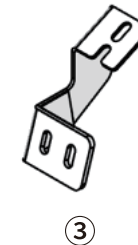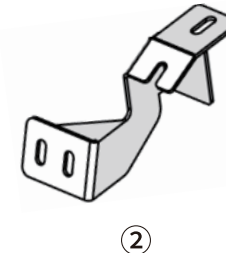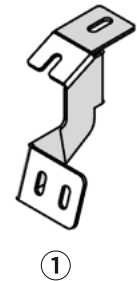

Color-Zinc
Plated

