

INSTALLATION INSTRUCTIONS



Notes

Read this instruction carefully before starting installation.

Proper tools will improve the quality of installation and reduce the time required.

All mirrors are asymmetrical design for better view range.


If missing parts or any damage found, please take a picture and contact us.

Reference the vehicle owner's manual to adjust the new mirrors.

INSTALLATION INSTRUCTIONS

Step 1:

1. Open the front door to remove the upper extension triangular trim panel.
2. Remove the foam pad from door sheet panel.
3. Remove (3) 10mm hex nuts securing the factory mirror.
4. Carefully remove the factory mirror.

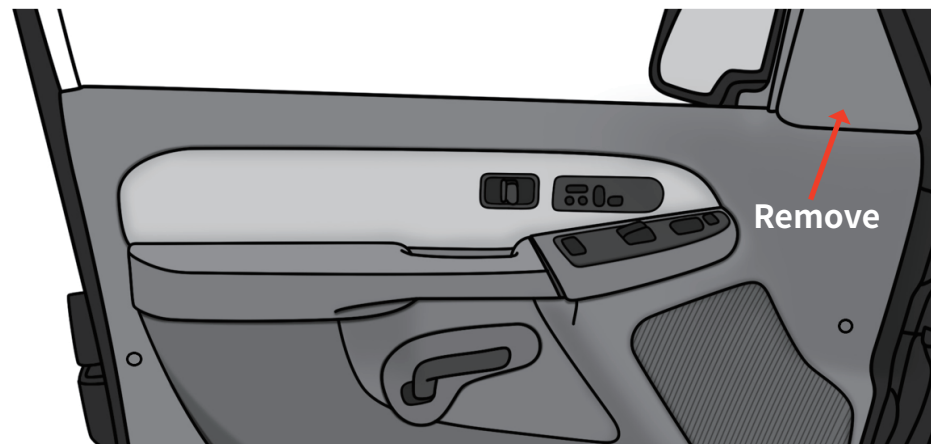

Step 2:

1. Take the new mirror, feed studs through the holes on door panel.
2. Install (3) provided hex nuts to secure the new mirror. Torque to **80 lb in.**
3. Insert the foam pad into the door sheet and reinstall the upper extension triangular trim panel.
4. Repeat on the passenger side.

