

## BEFORE INSTALLATION

- Professional Installation would be highly recommended, please seek assistance at local automotive shop if you have any difficulties in installing.
- Safety comes first ! Do not start to work on any vehicle without protection.
- An assistant would be better assist you in the bumper disassembly work.
- Keep cautions to prevent being scratched when working on any parts from the body of the vehicle.
- Do not touch the bulbs or the wire assembly before they are cooled to avoid the burns.


## PRODUCT NUMBER

OEM Part Number: 81150-06180, 81110-06180






## STEP 1


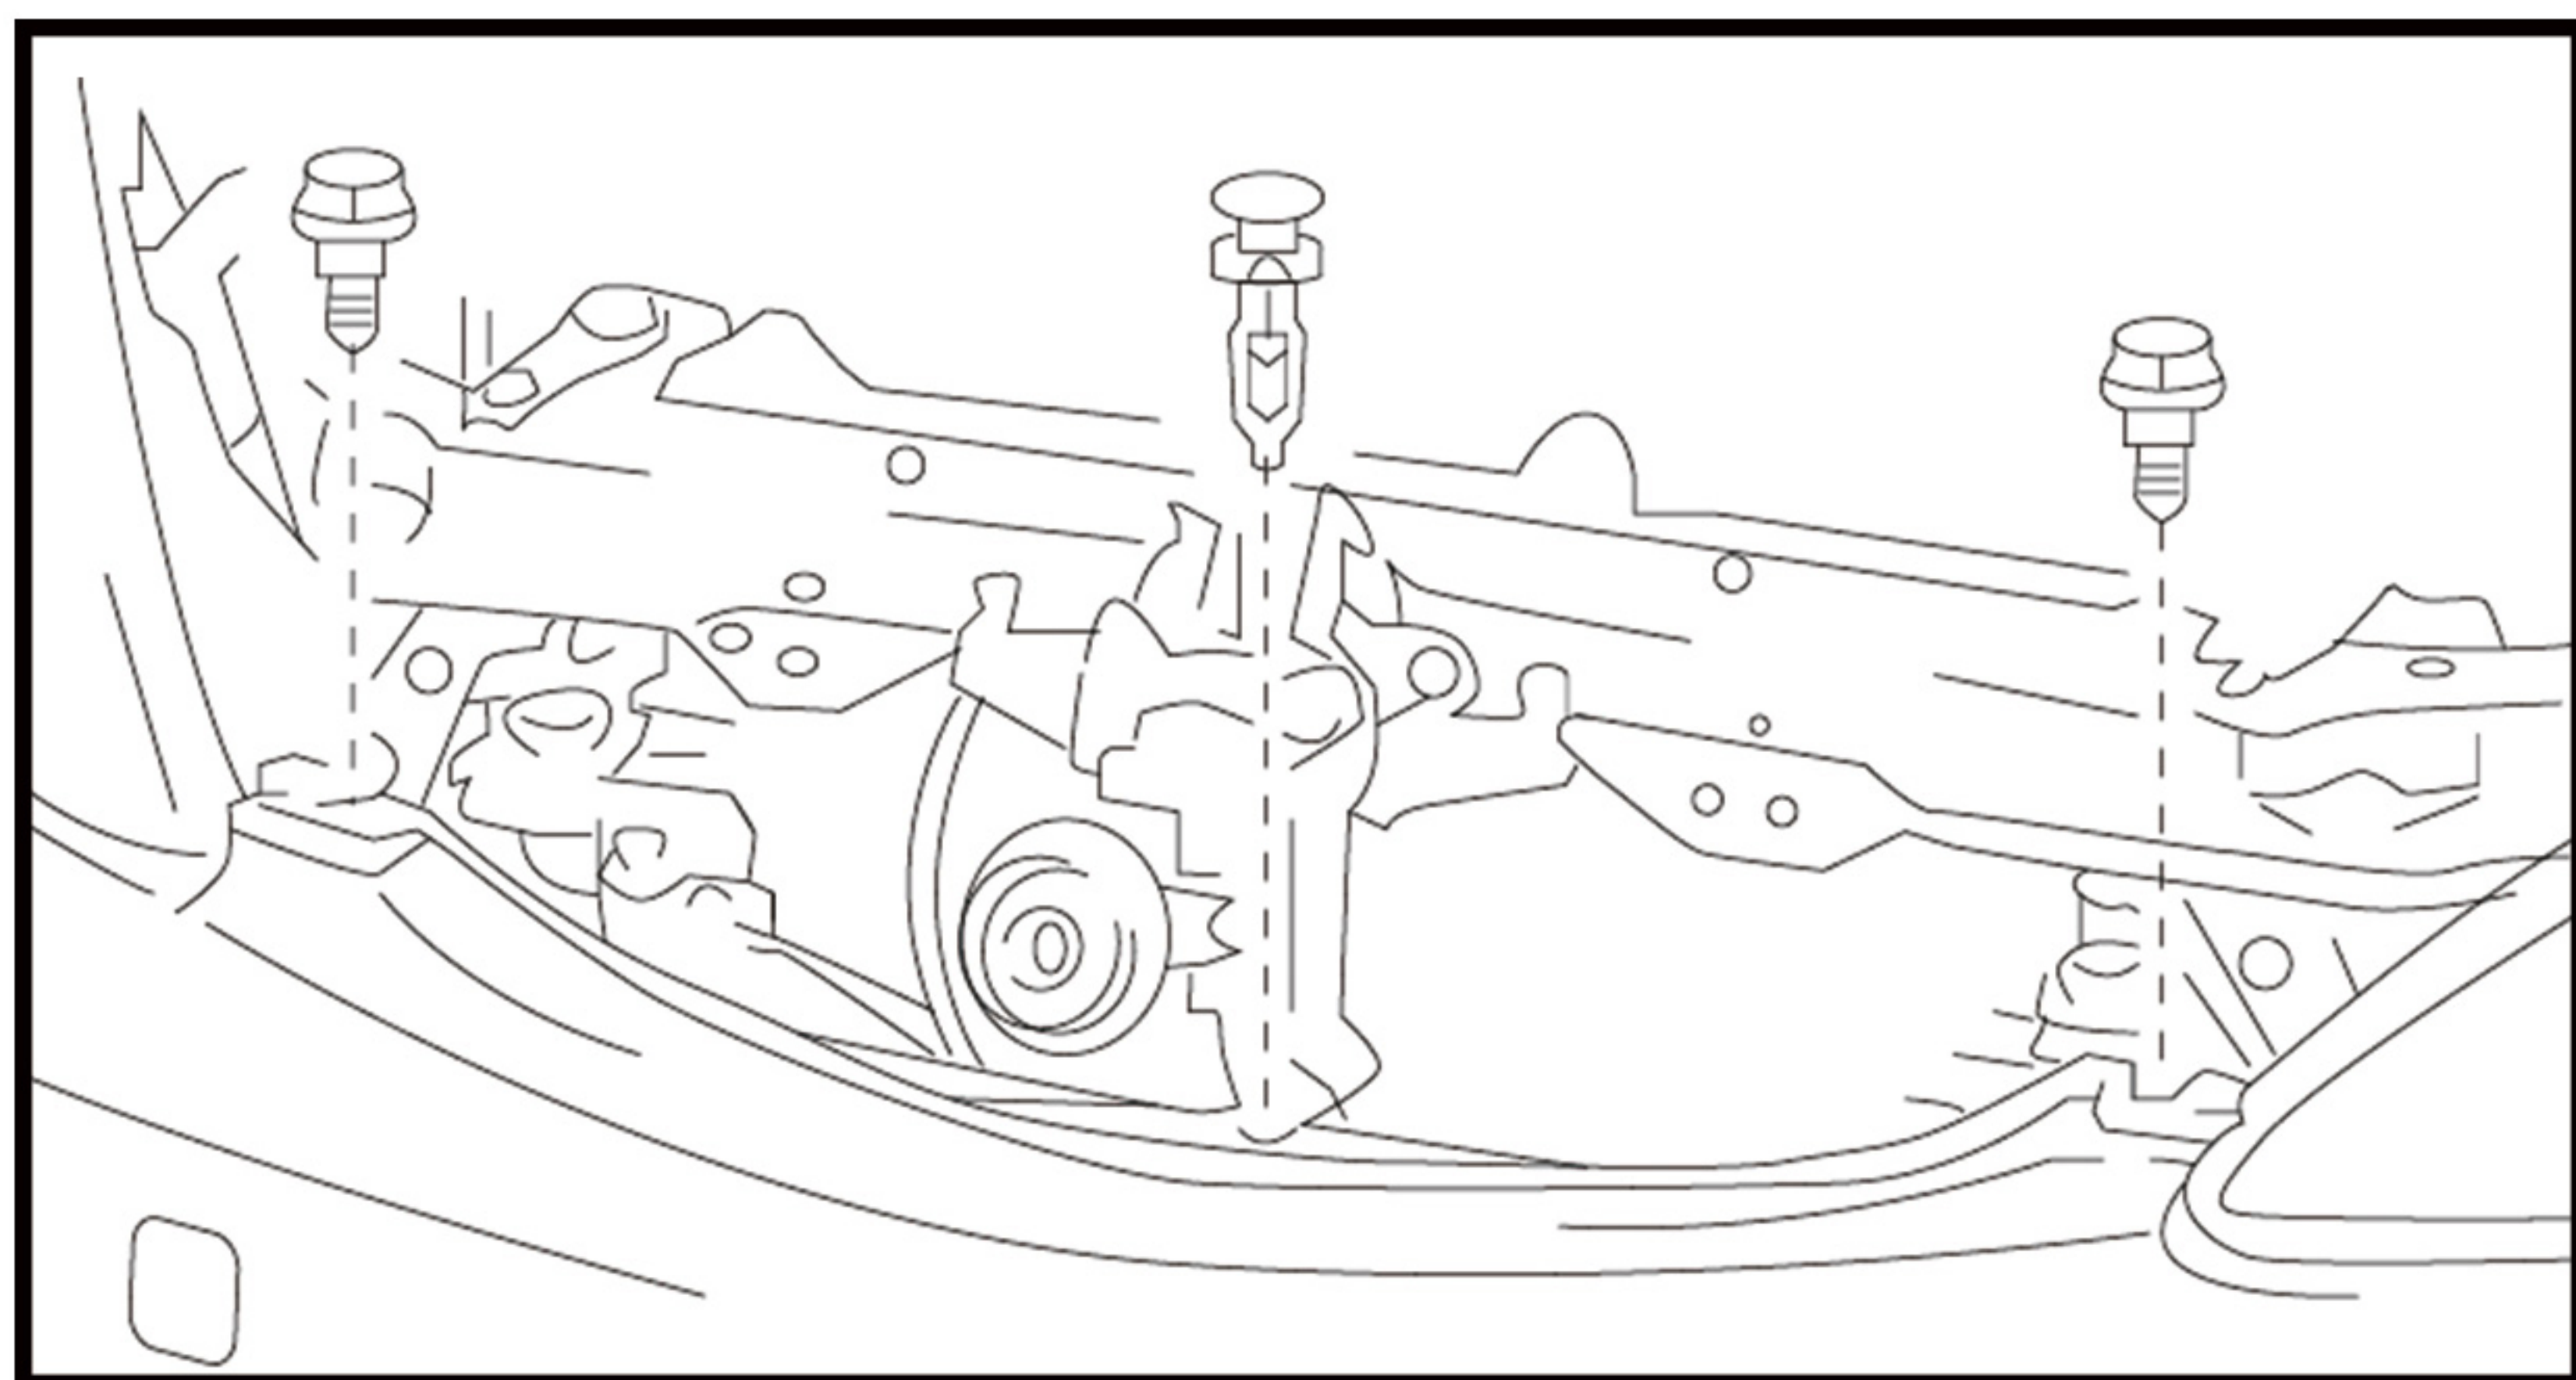


1. Open the hood.
2. Remove (2) bolts and (1) rivet on the front bumper cover.


## STEP 2

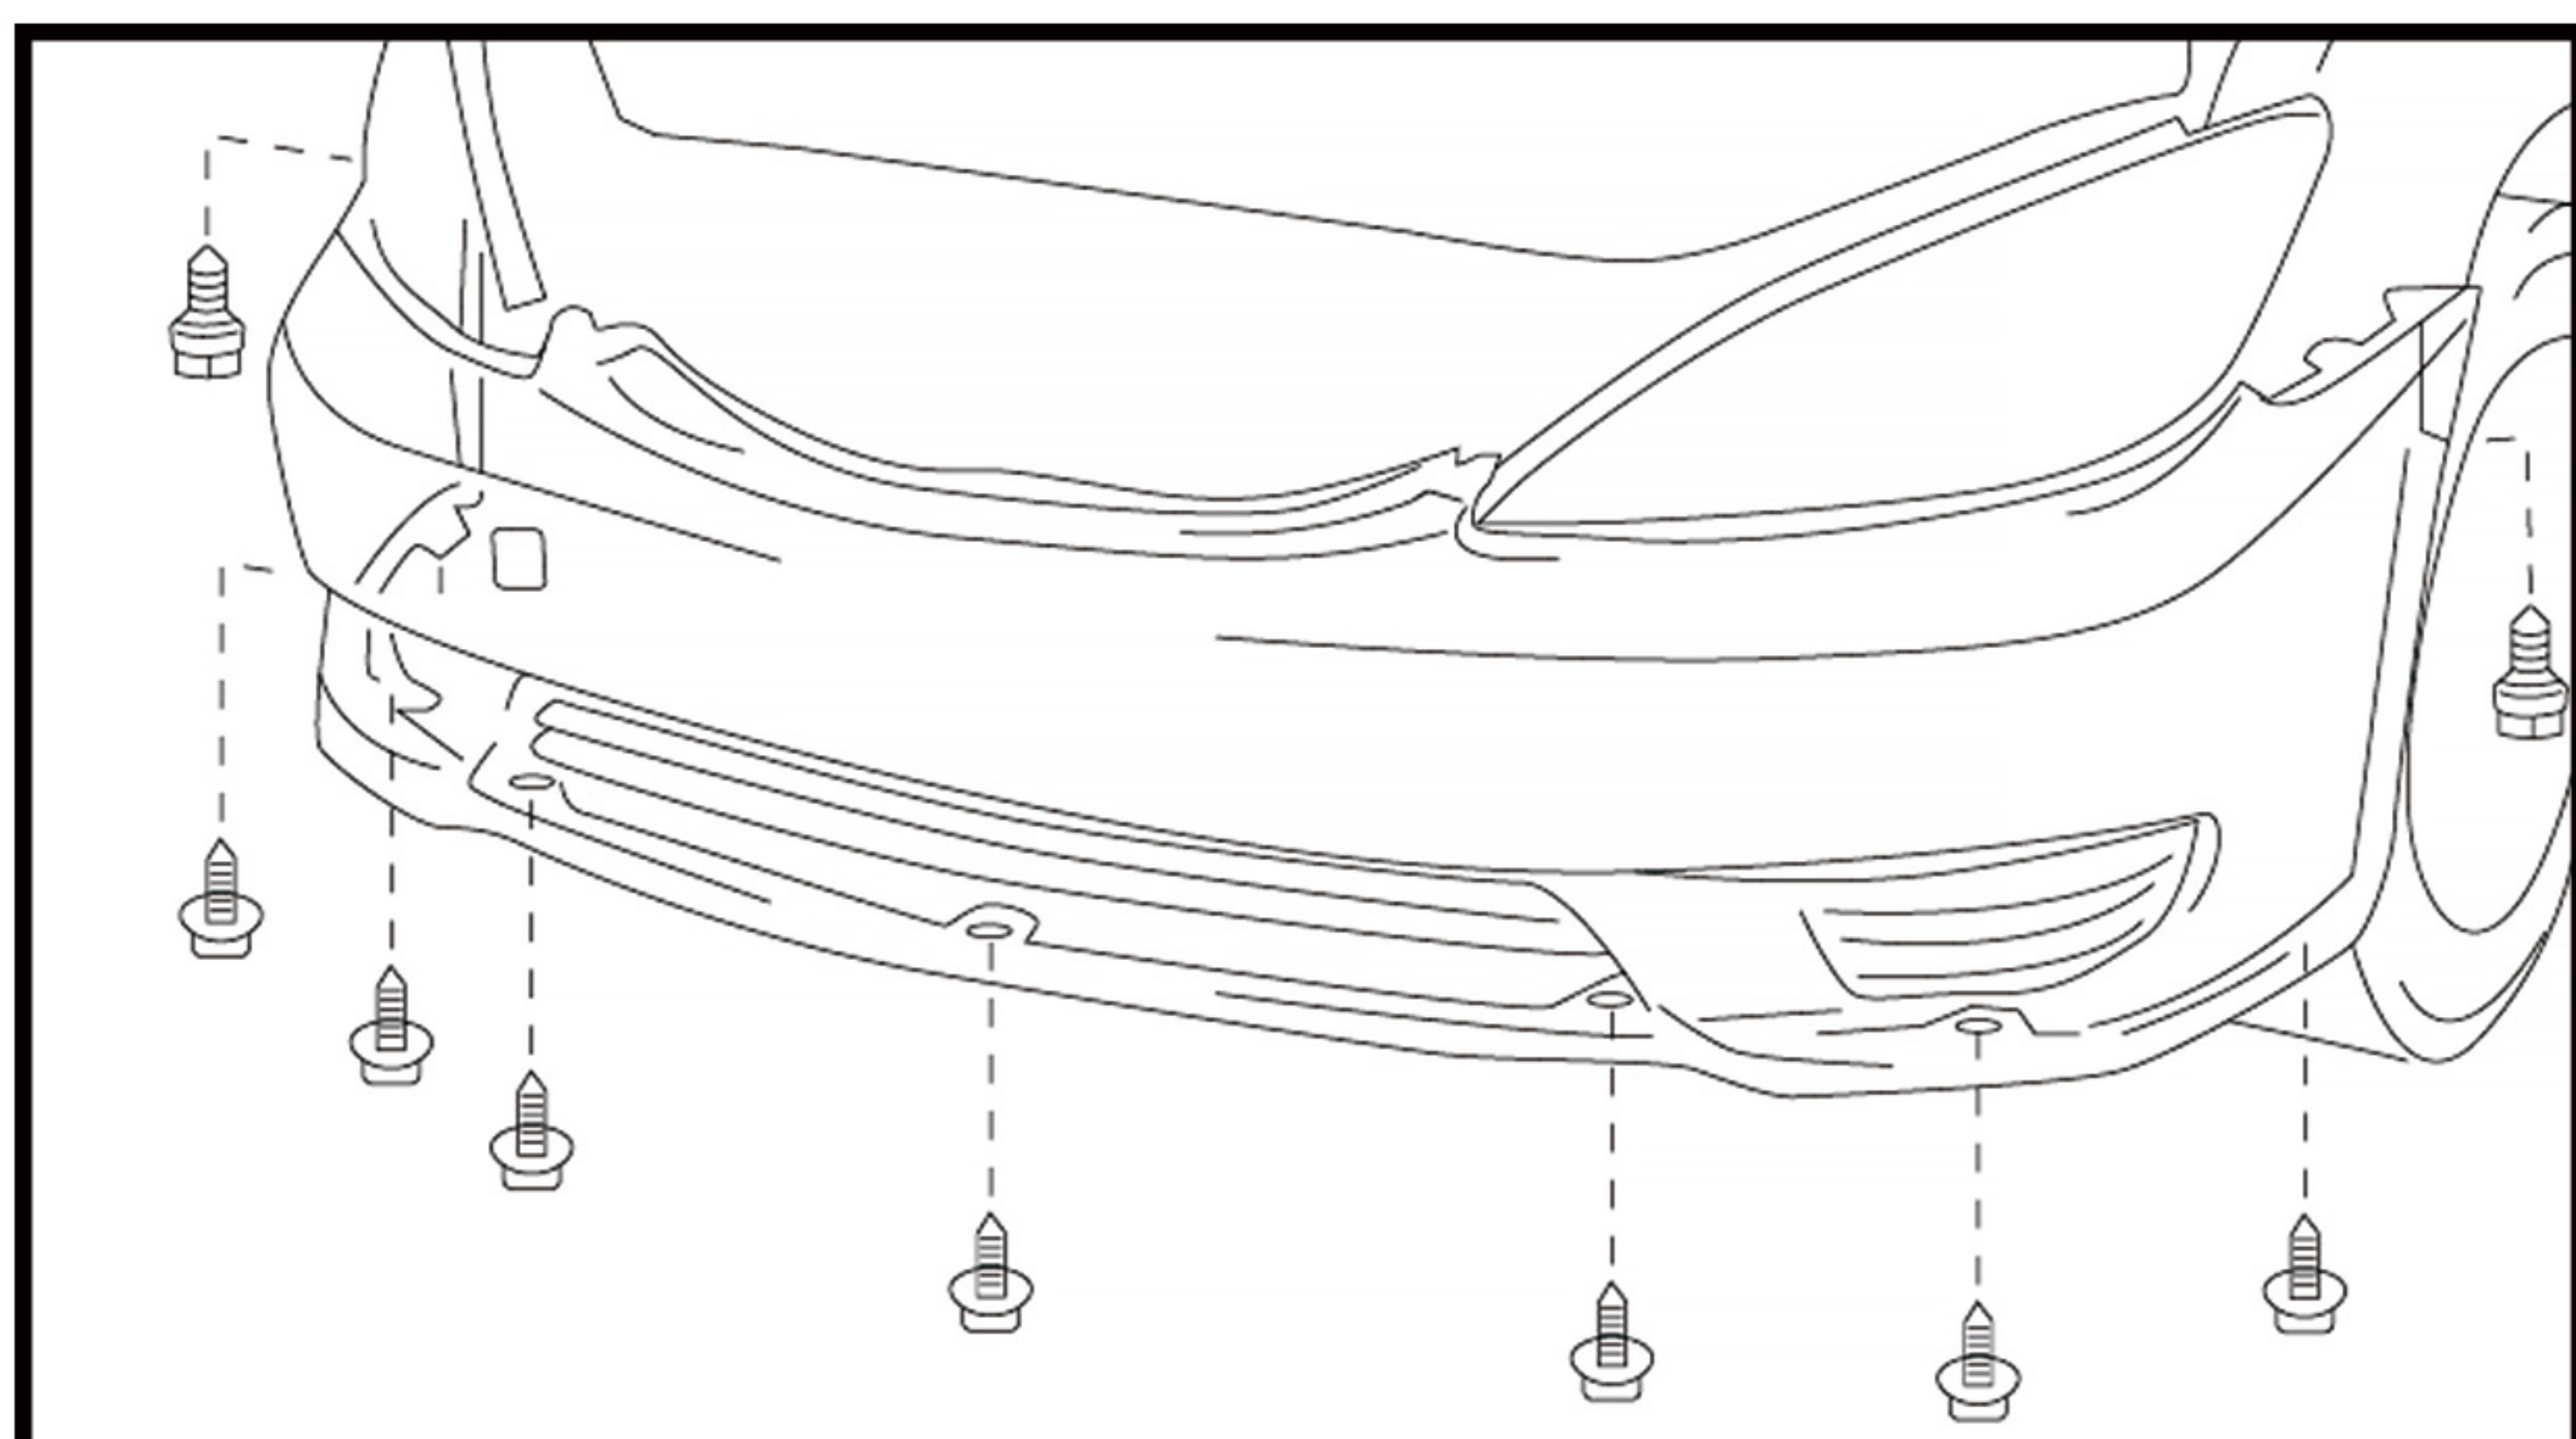

1. In both side front wheel well, twist the pin hold clip 90 degrees and remove it.
2. Remove (9) bolts under the front bumper cover.
3. Disengage (6) claws by pulling the front bumper cover outside.
4. Disconnect fog lamp harness if equipped.
5. Remove the front bumper cover.

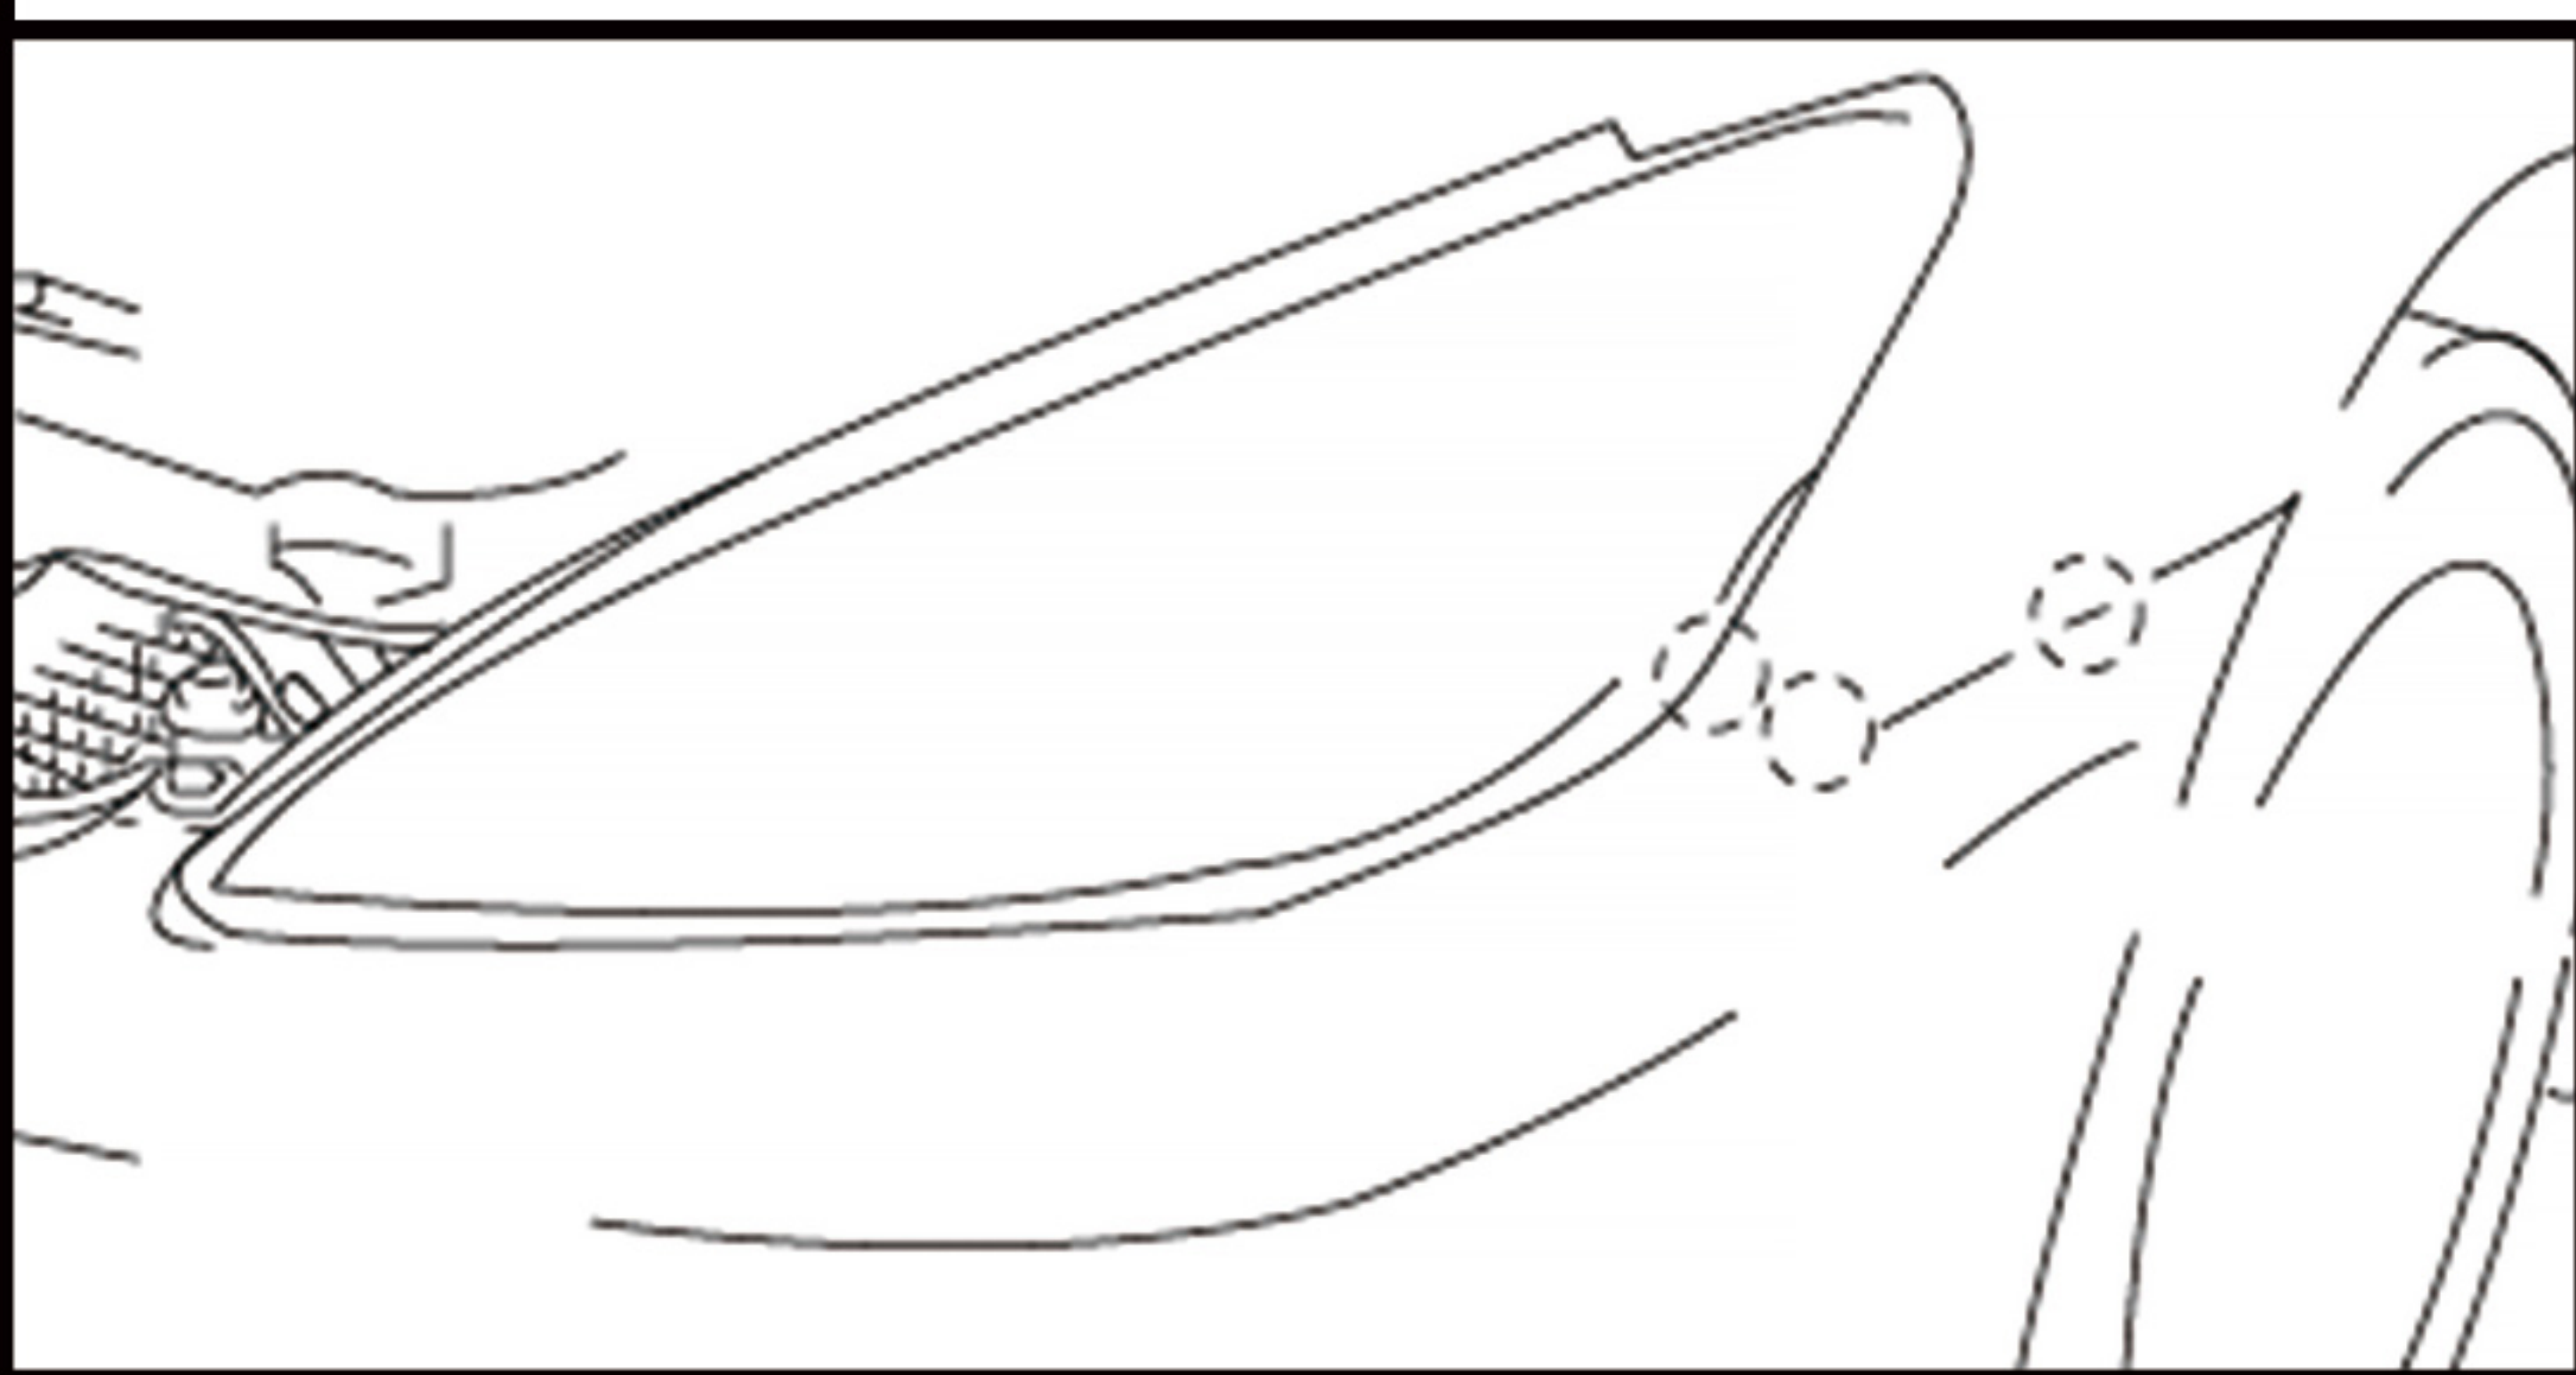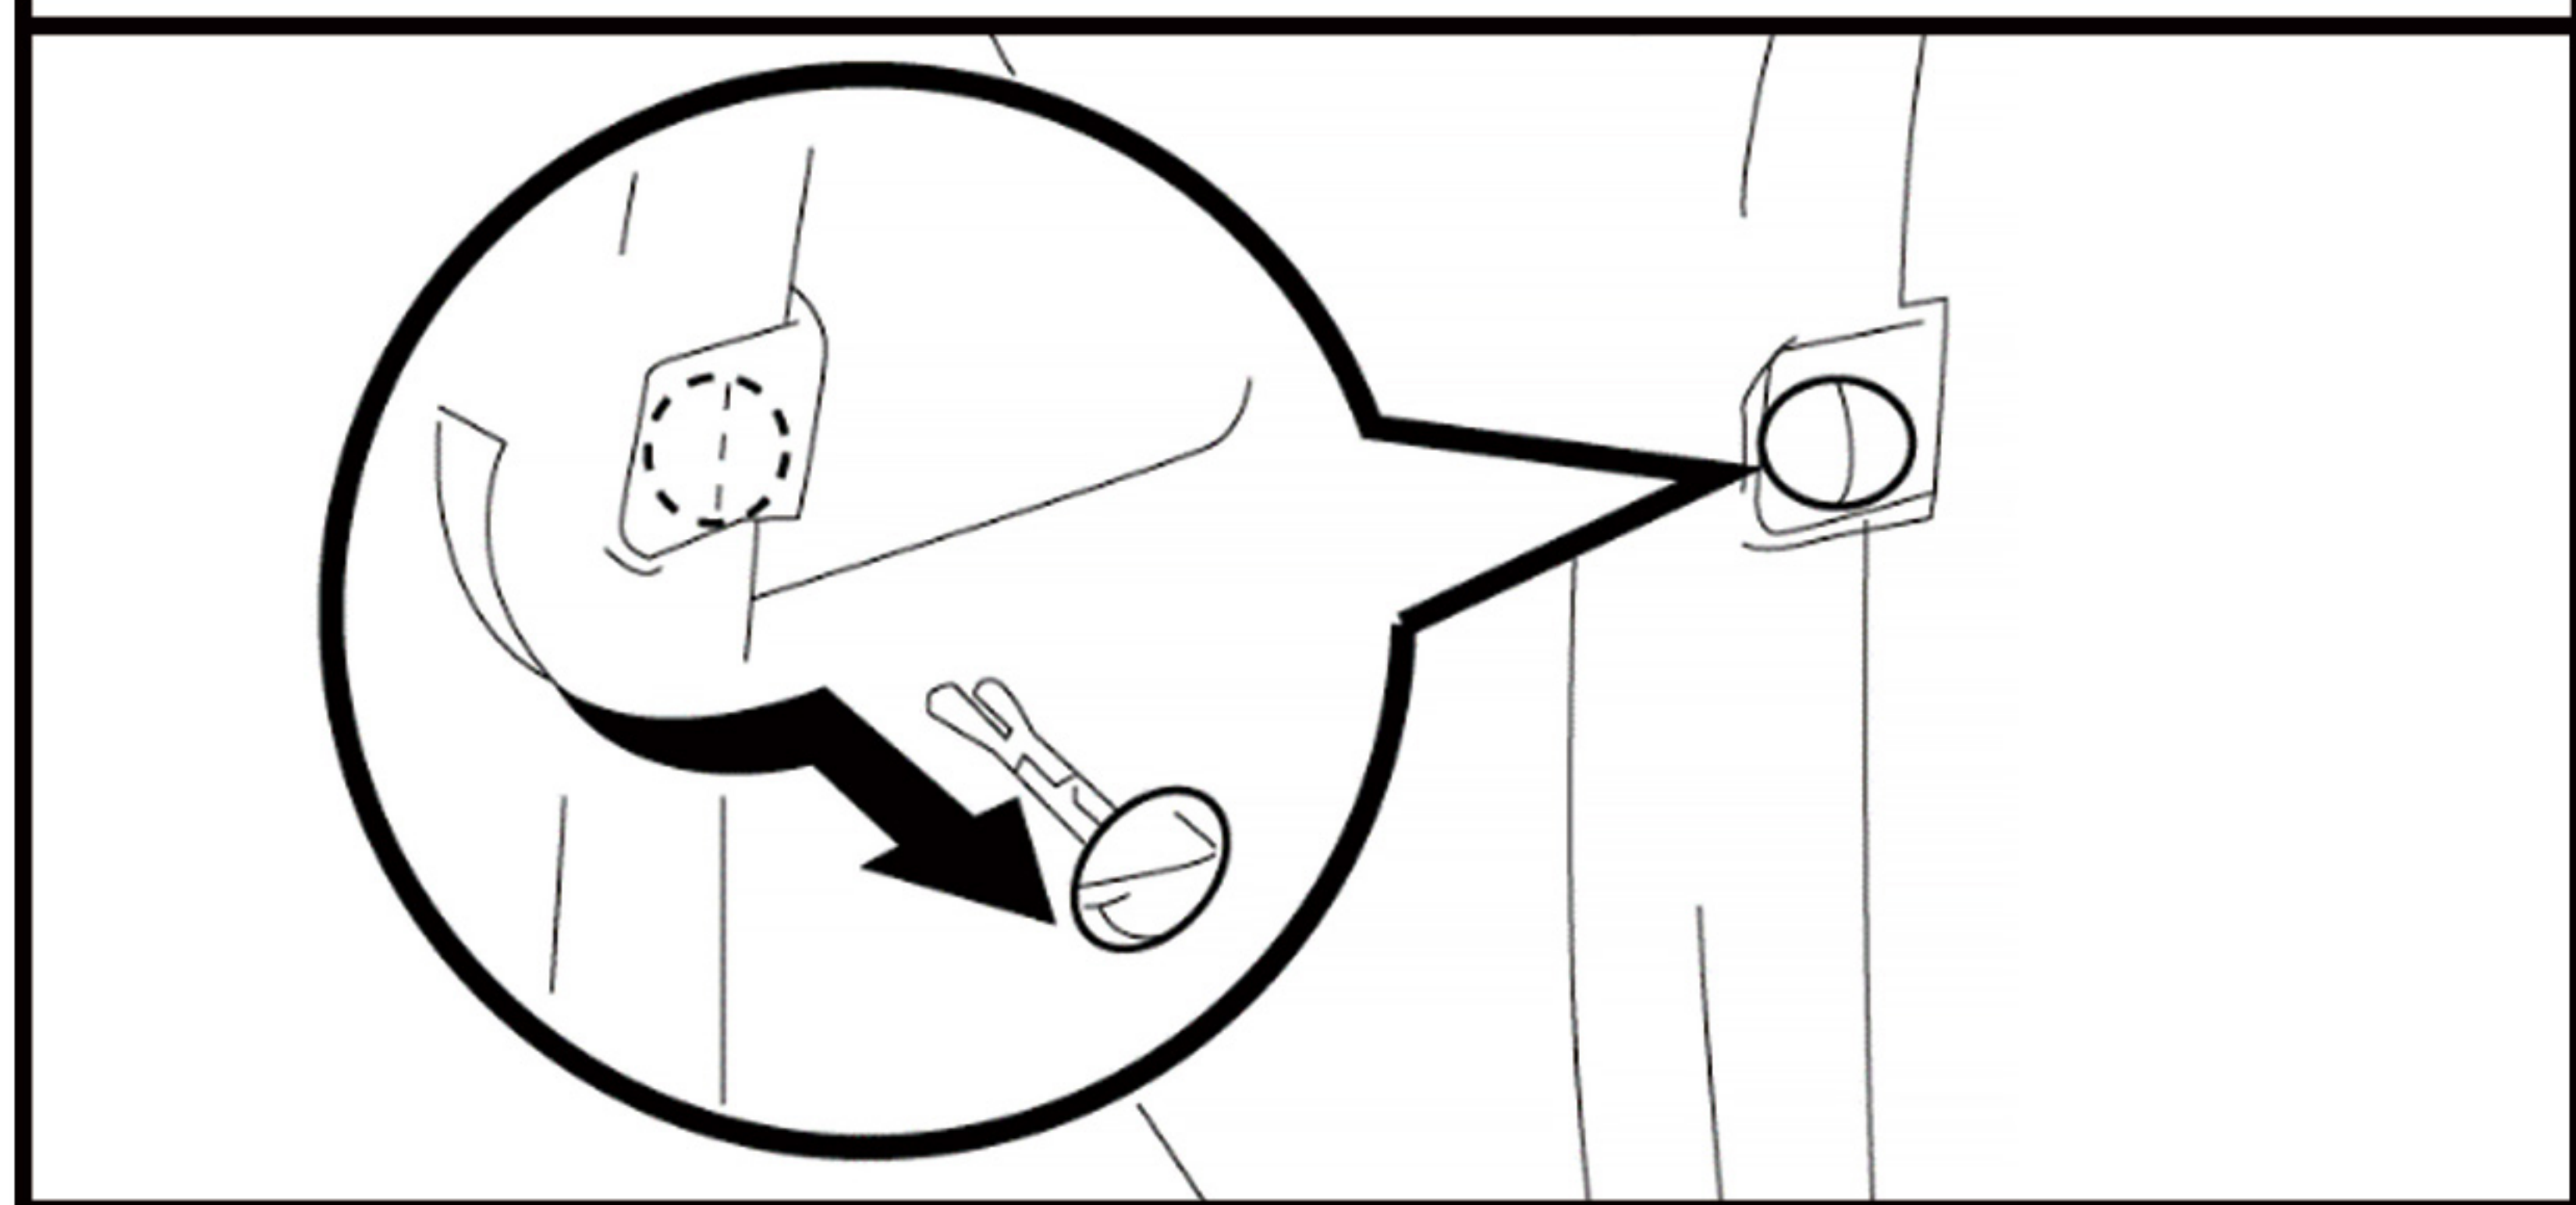

## STEP 3

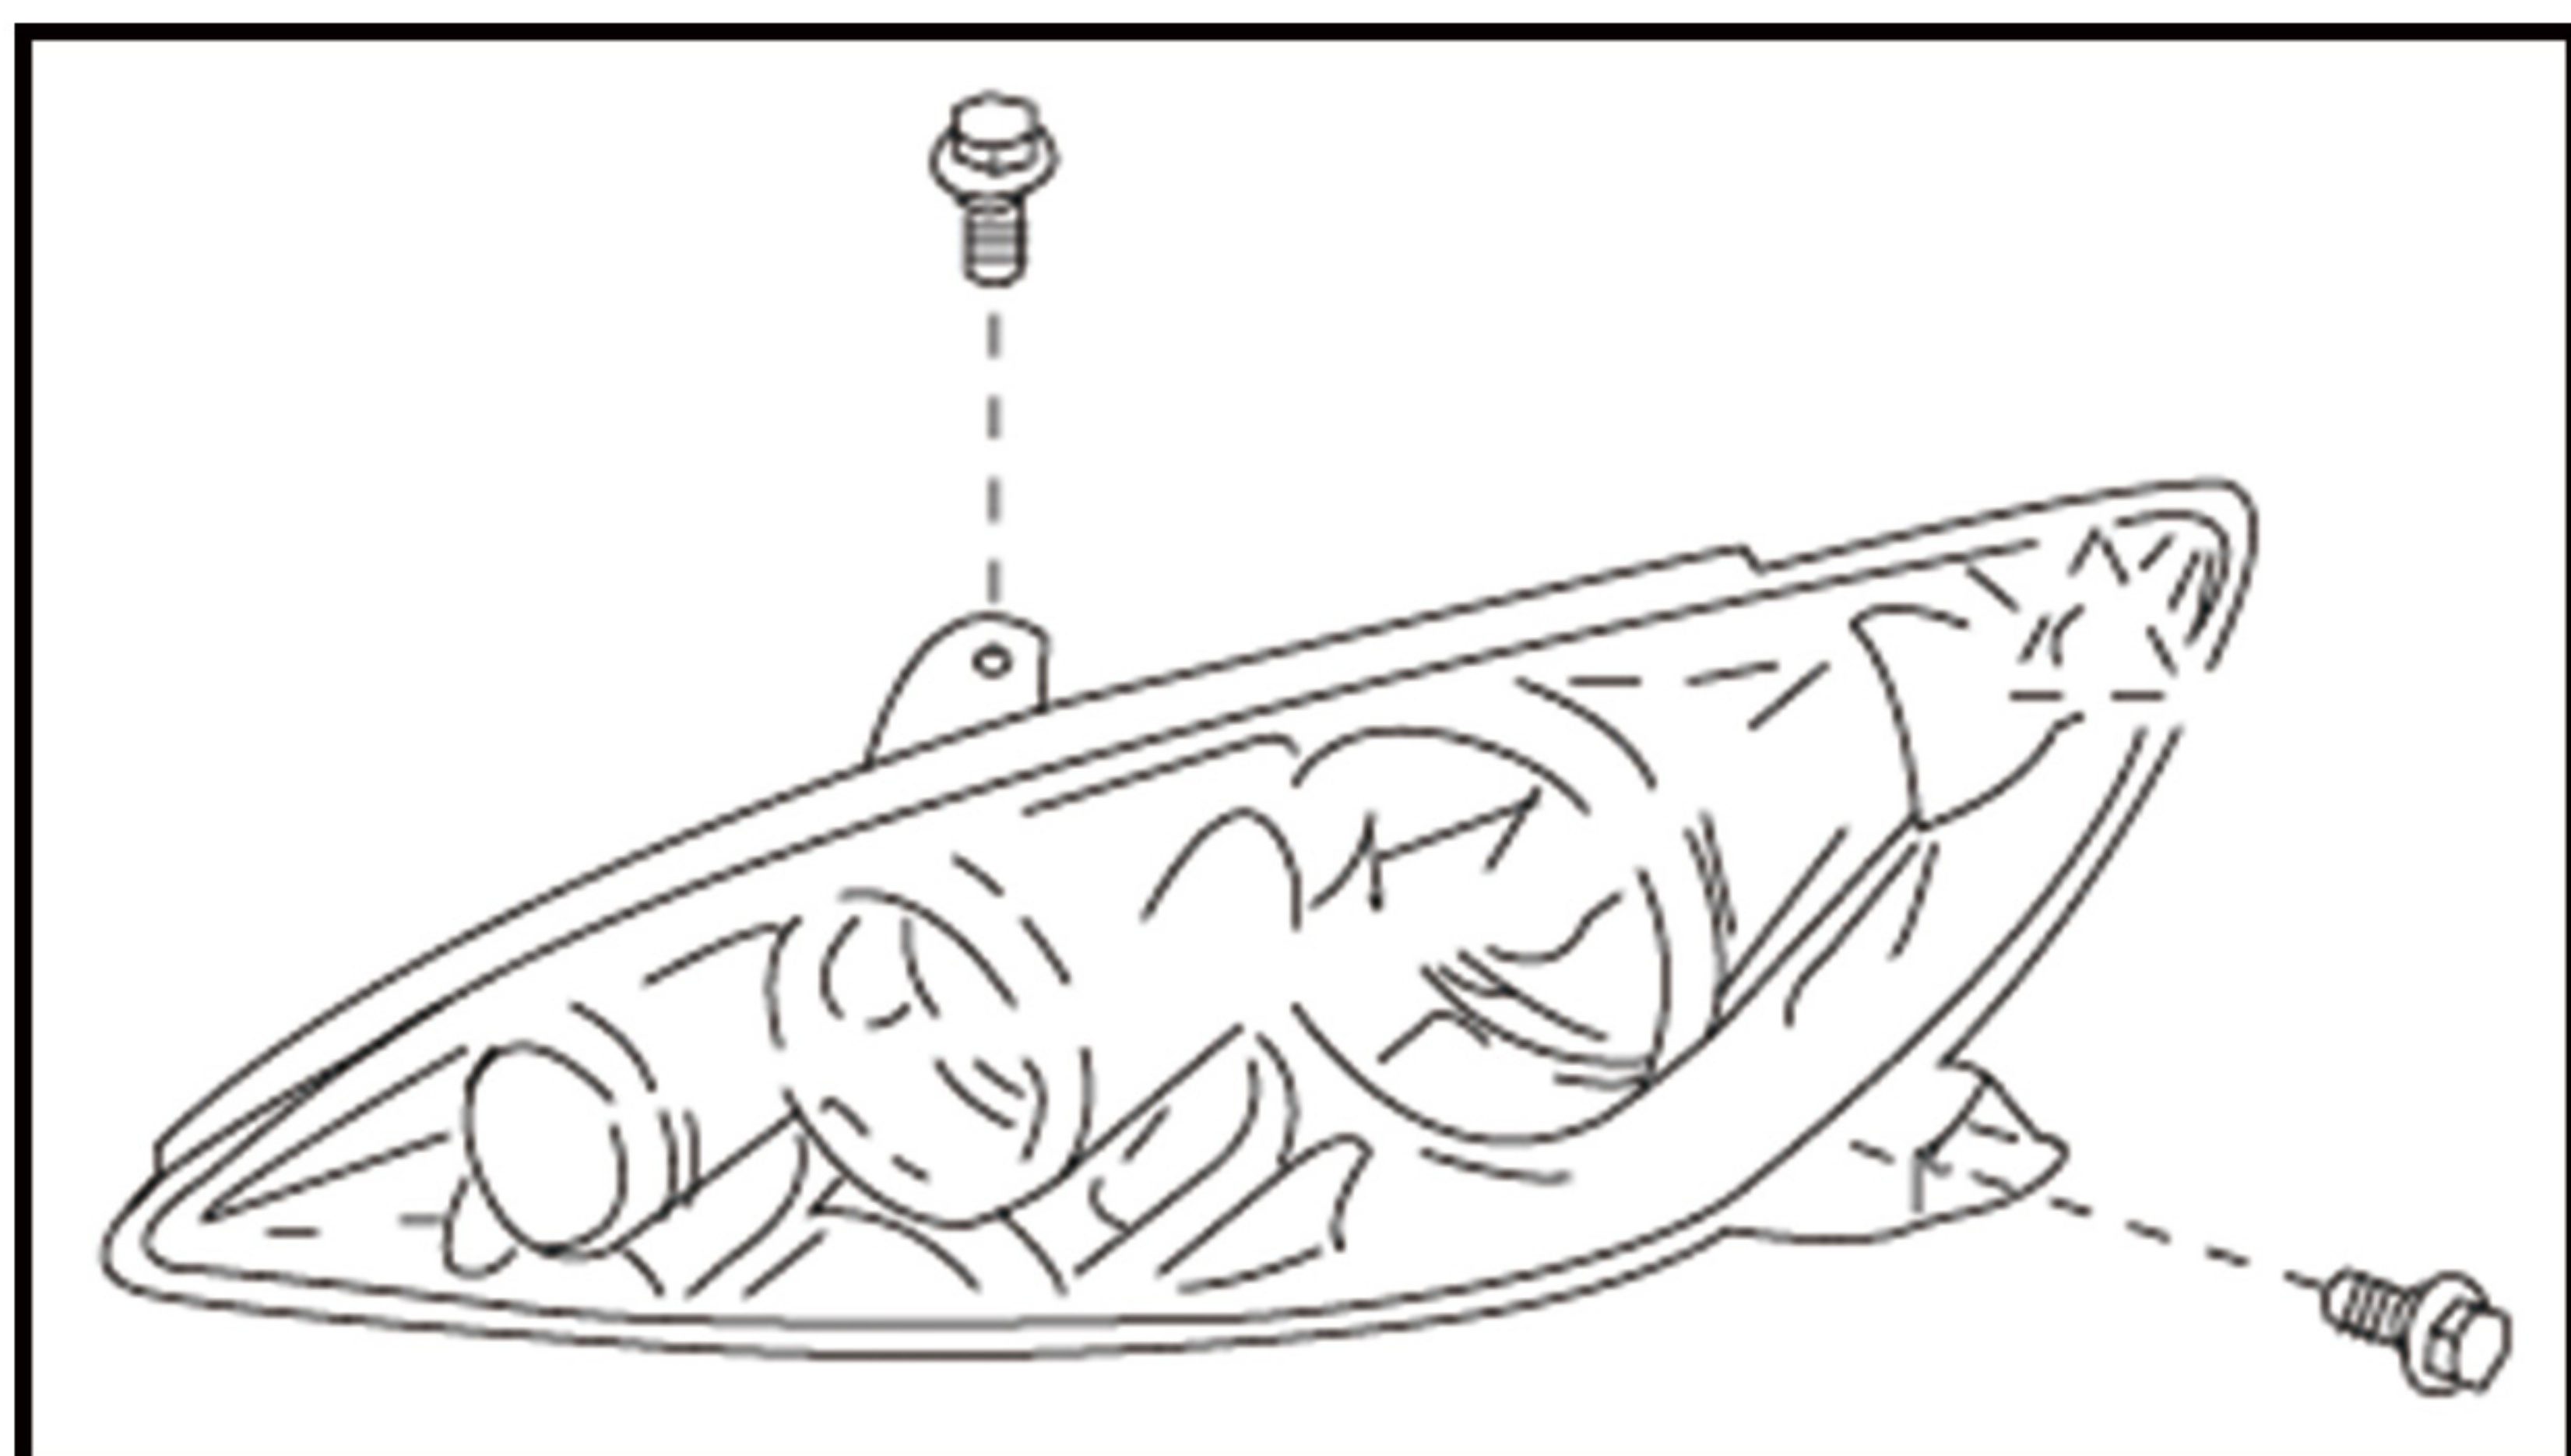

1. Remove (2) bolts on headlamp, (1) bolt on the top of the headlamp and (1) bolt on the fender side.
2. Pull the headlamp forward, release headlamp from vehicle.




## STEP 4

1. Disconnect headlight and turn signal light connectors.
2. Twist headlight bulbs and signal light socket counterclockwise and remove from old headlamp.
3. Insert headlight bulbs and signal light socket into the new headlamp and twist clockwise to secure.

## STEP 5


1. Place the new headlamp on vehicle, connect headlight and turn signal light connectors.
2. Align the guiding pin with the mounting hole on body panel. The tab under the headlamp must be held by the claw on frame.
3. Install (2) bolts, (1) bolt on the top of the headlamp and (1) bolt on the fender side.

## STEP 6

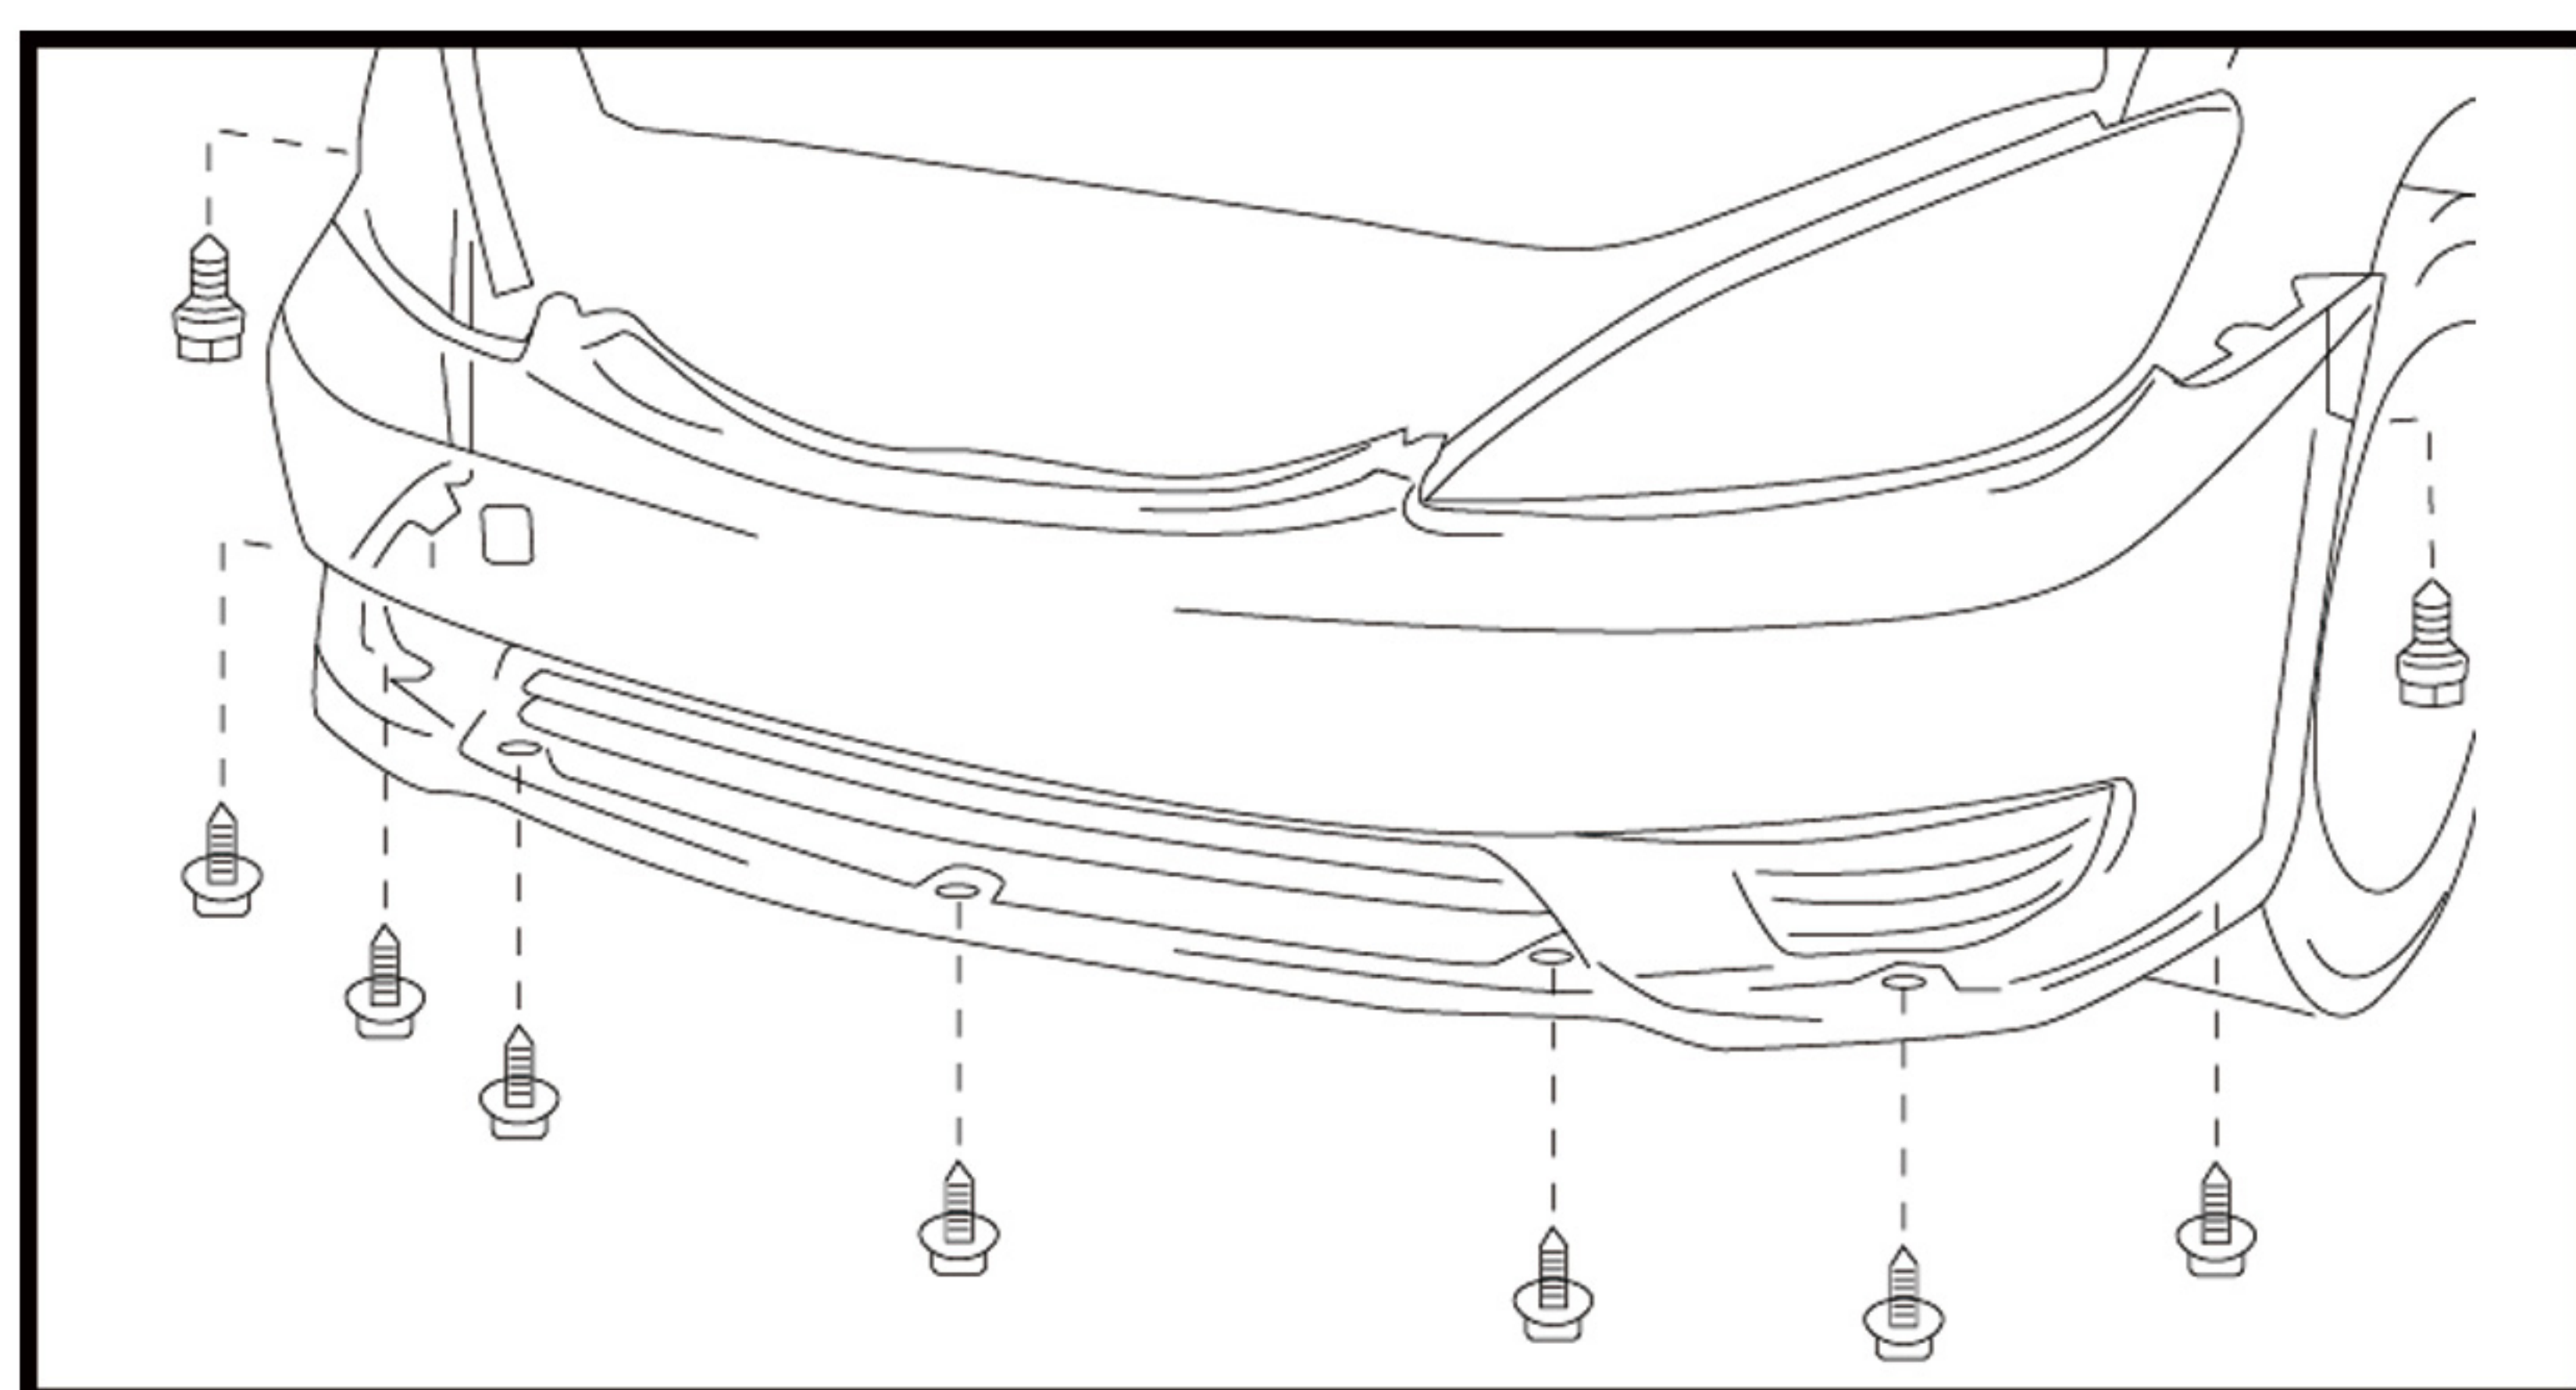

1. Repeat step 3 to step 5 on the other side.
2. With assistance, lift and attach front bumper cover on bumper reinforcement.
3. Connect fog light harness if equipped.
4. Pop on the claws behind bumper cover.
5. Install (9) bolts under the front bumper cover.
6. Insert and lock the pin hold clip in both side front wheel well.
7. Install (2) bolts and (1) rivet to secure the front bumper cover.

## WARM TIPS

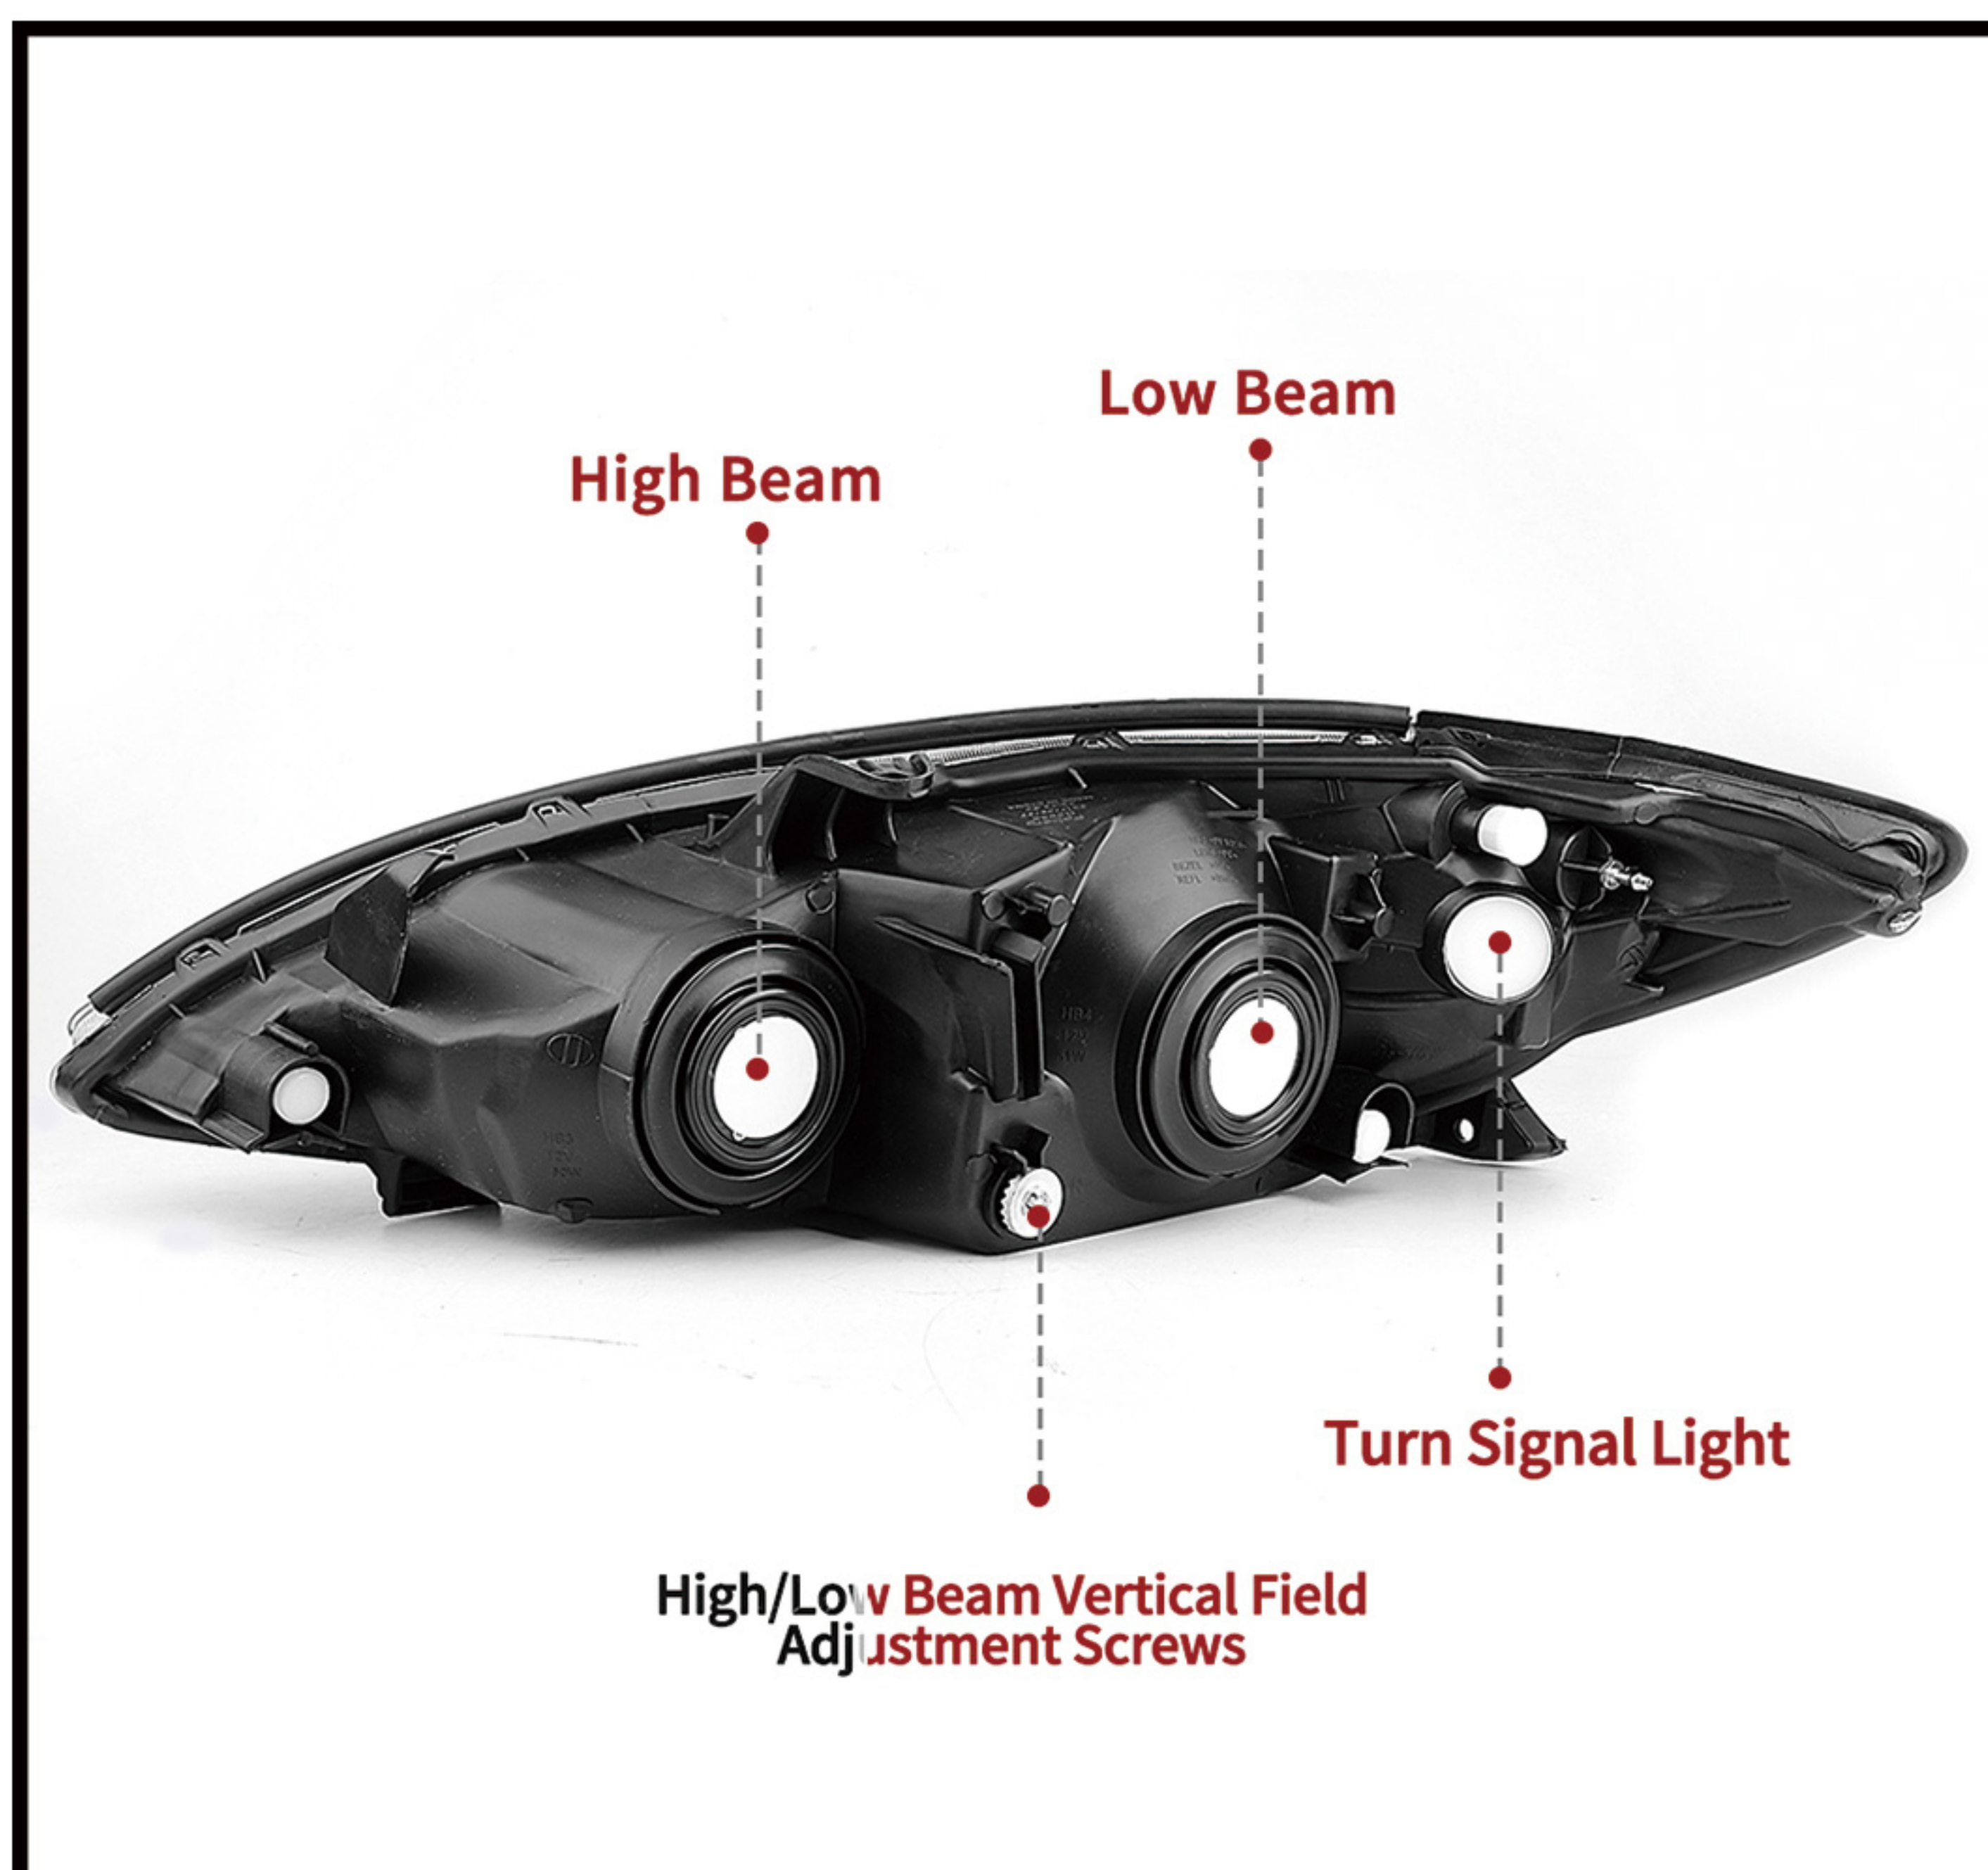

Before you begin to adjust the light, make sure check the alignment of your lights first. Park the vehicle about 10 to 25 feet from the wall with the lights aimed at the wall. The centerlines of the headlights should not be any higher than 3.5 feet above the ground.

1. Find the adjustment screws.
2. Adjust the headlights individually.
3. Adjust the vertical field.
4. Test your results.