










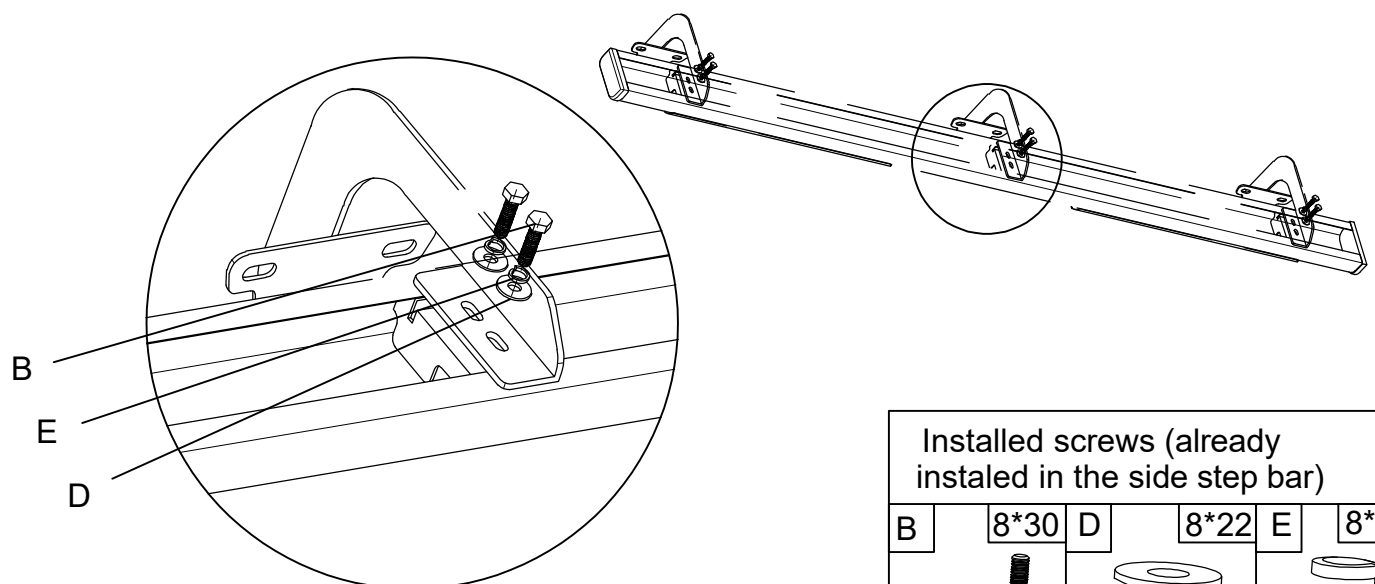
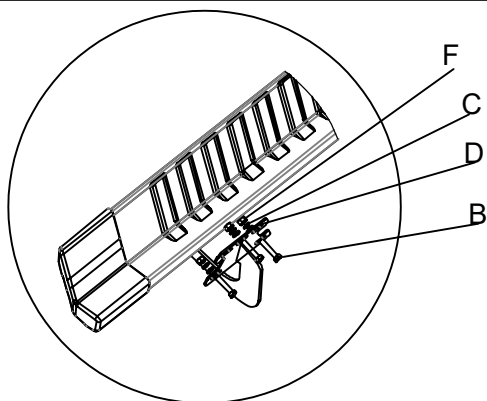
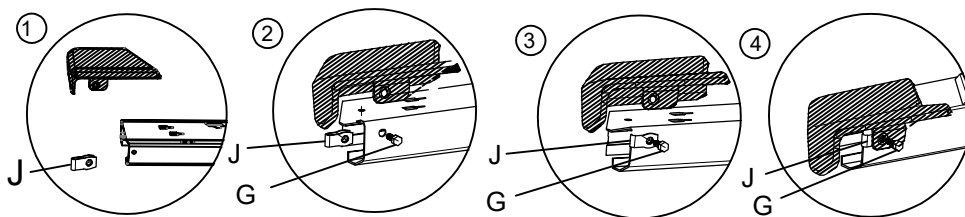


# INSTRUCTION

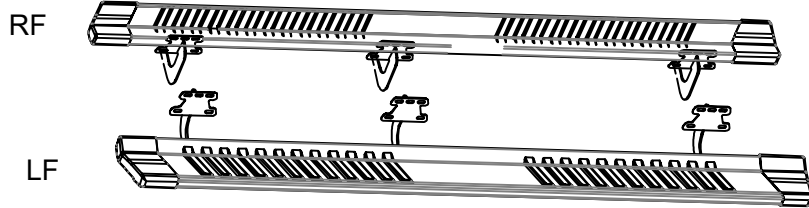



screws install on the car

B	8*30	C	8*2
18pcs		18pcs	
D	8*22	F	M8
18pcs		18pcs	
J	M6*25	G	6*25
4pcs		4pcs	
L/R		L/R	
L			
3pcs			
R			
3pcs			



Installed screws (already installed in the side step bar)

B	8*30	D	8*22	E	8*2
12pcs		12pcs		12pcs	