

BEFORE INSTALLATION



- Professional Installation would be highly recommended, please seek assistance at local automotive shop if you have any difficulties in installing.
- Safety comes first ! Do not start to work on any vehicle without protection.
- An assistant would be better assist you in the bumper disassembly work.
- Keep cautions to prevent being scratched when working on any parts from the body of the vehicle.
- Do not touch the bulbs or the wire assembly before they are cooled to avoid the burns.

PRODUCT NUMBER

OEM Part Number: 22740621, 16532519, 22740620, 16532520



STEP 1

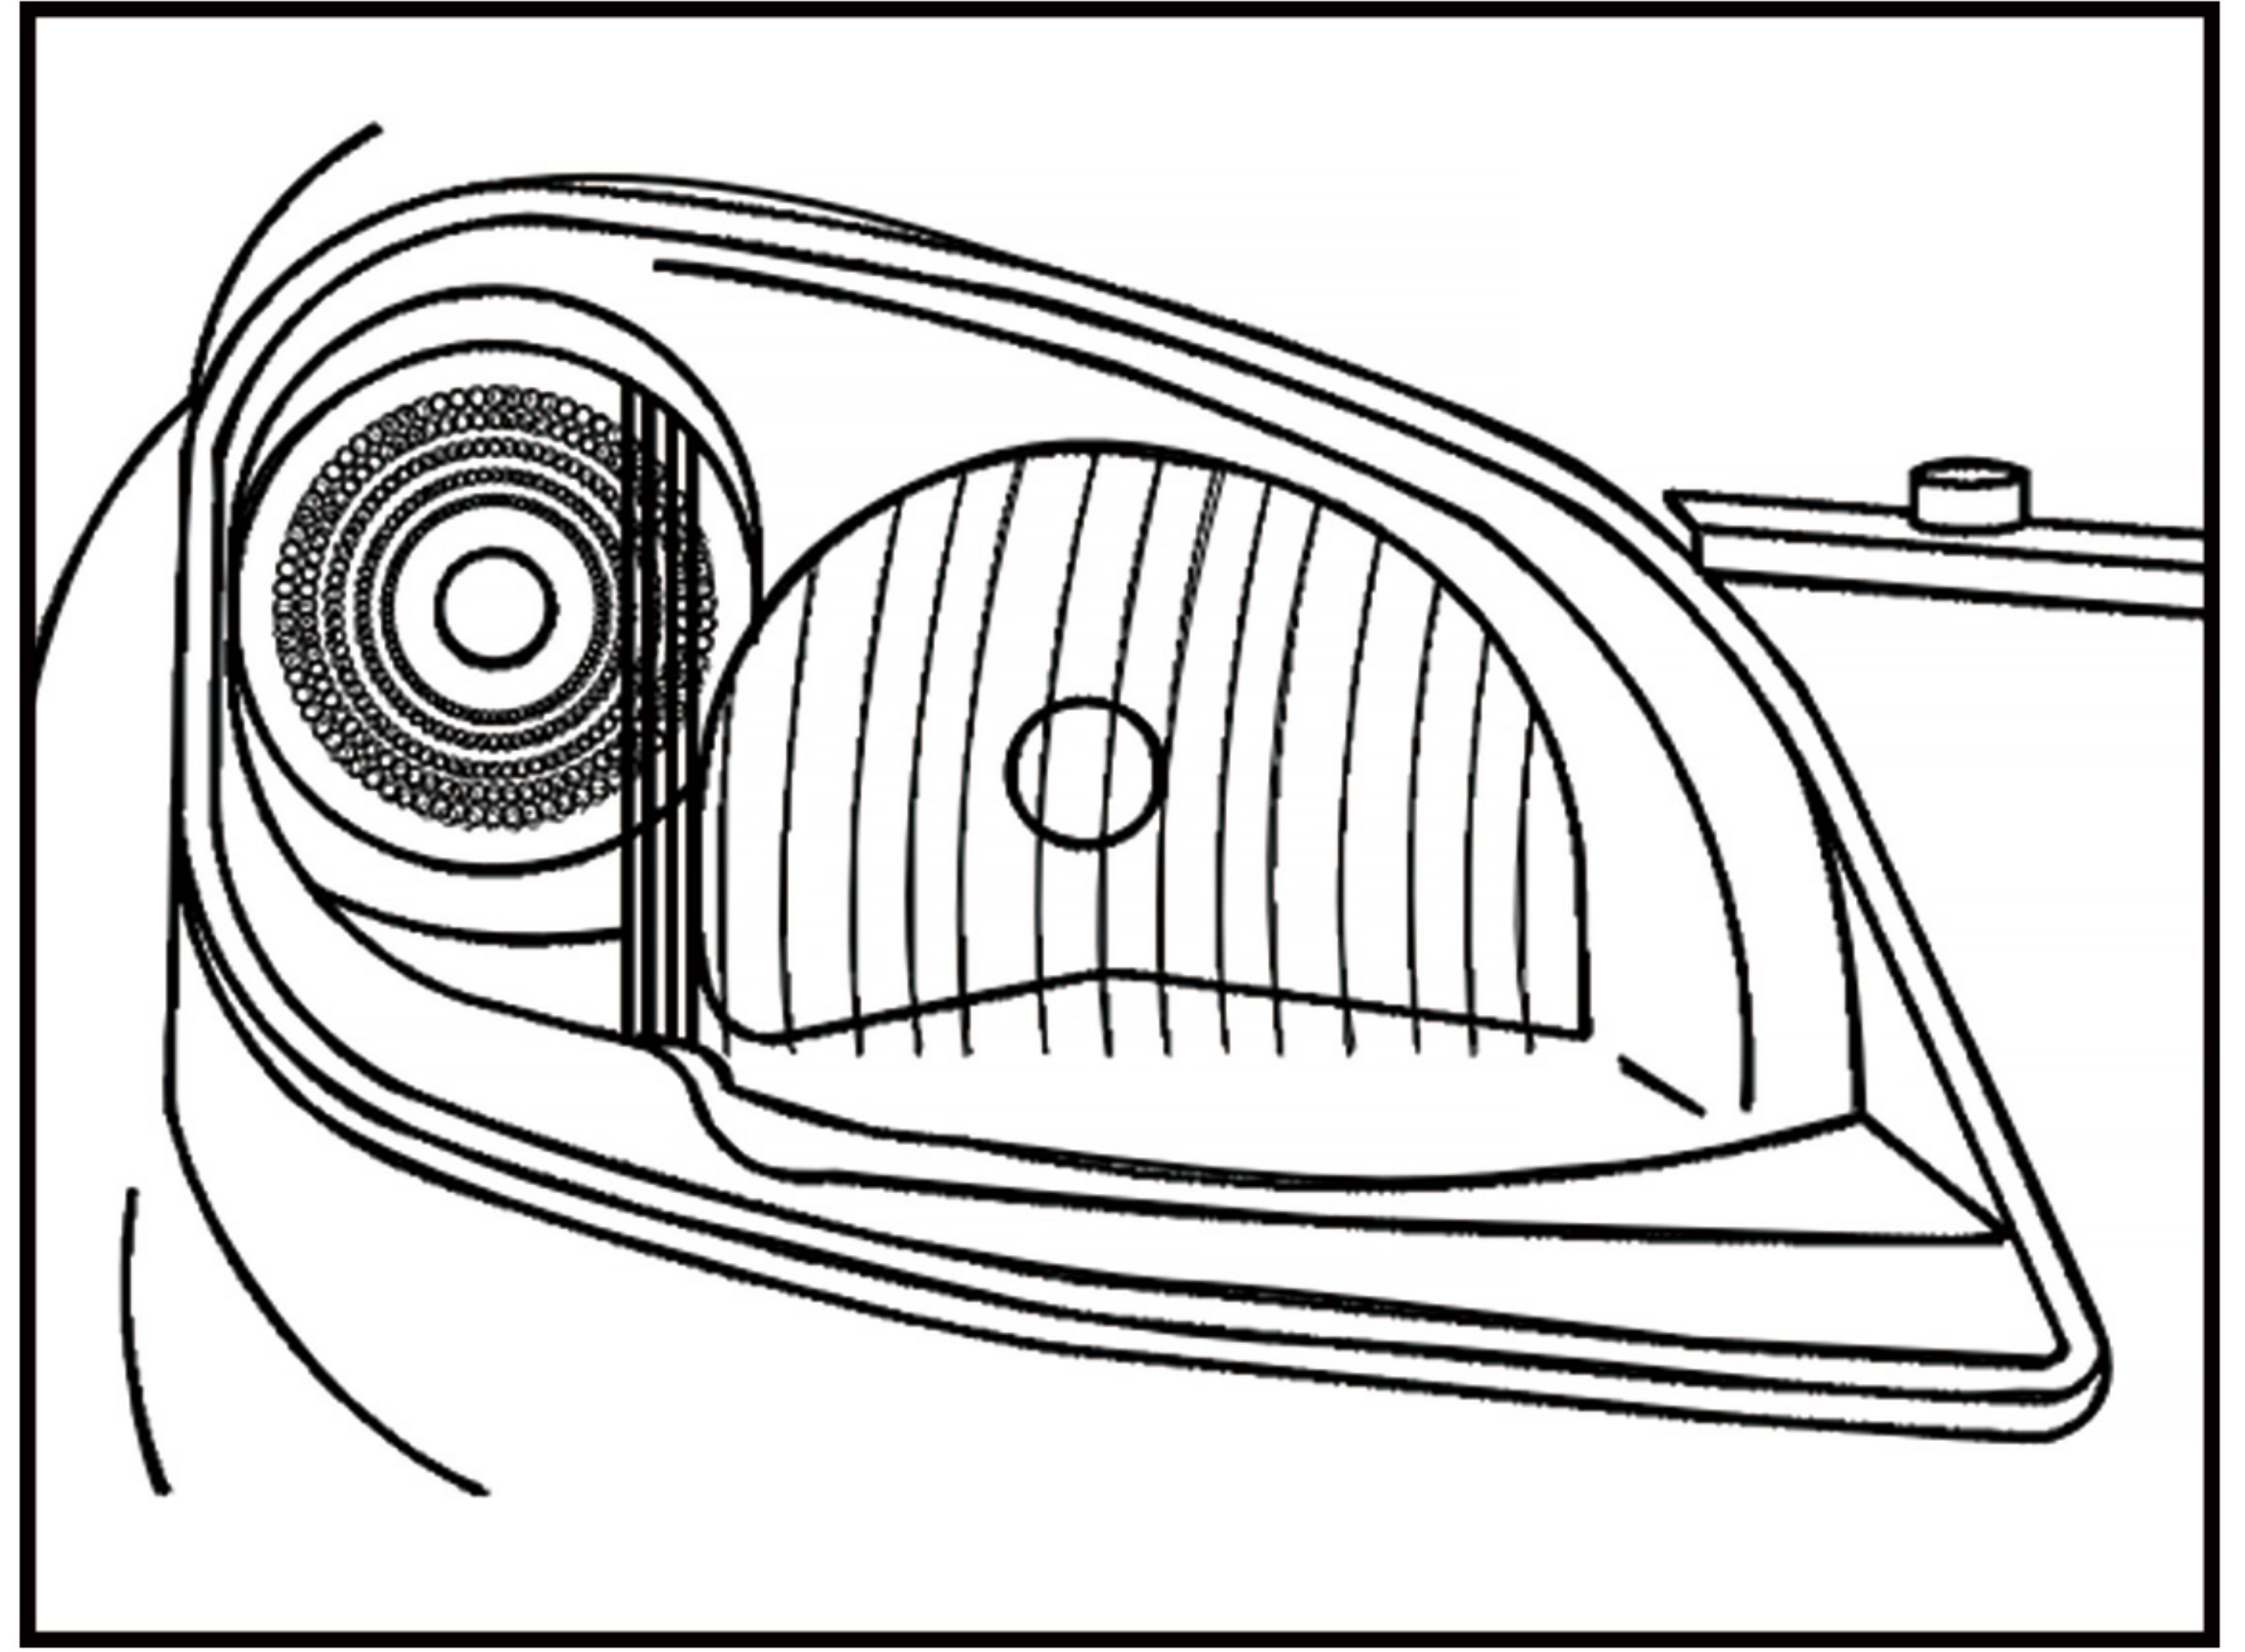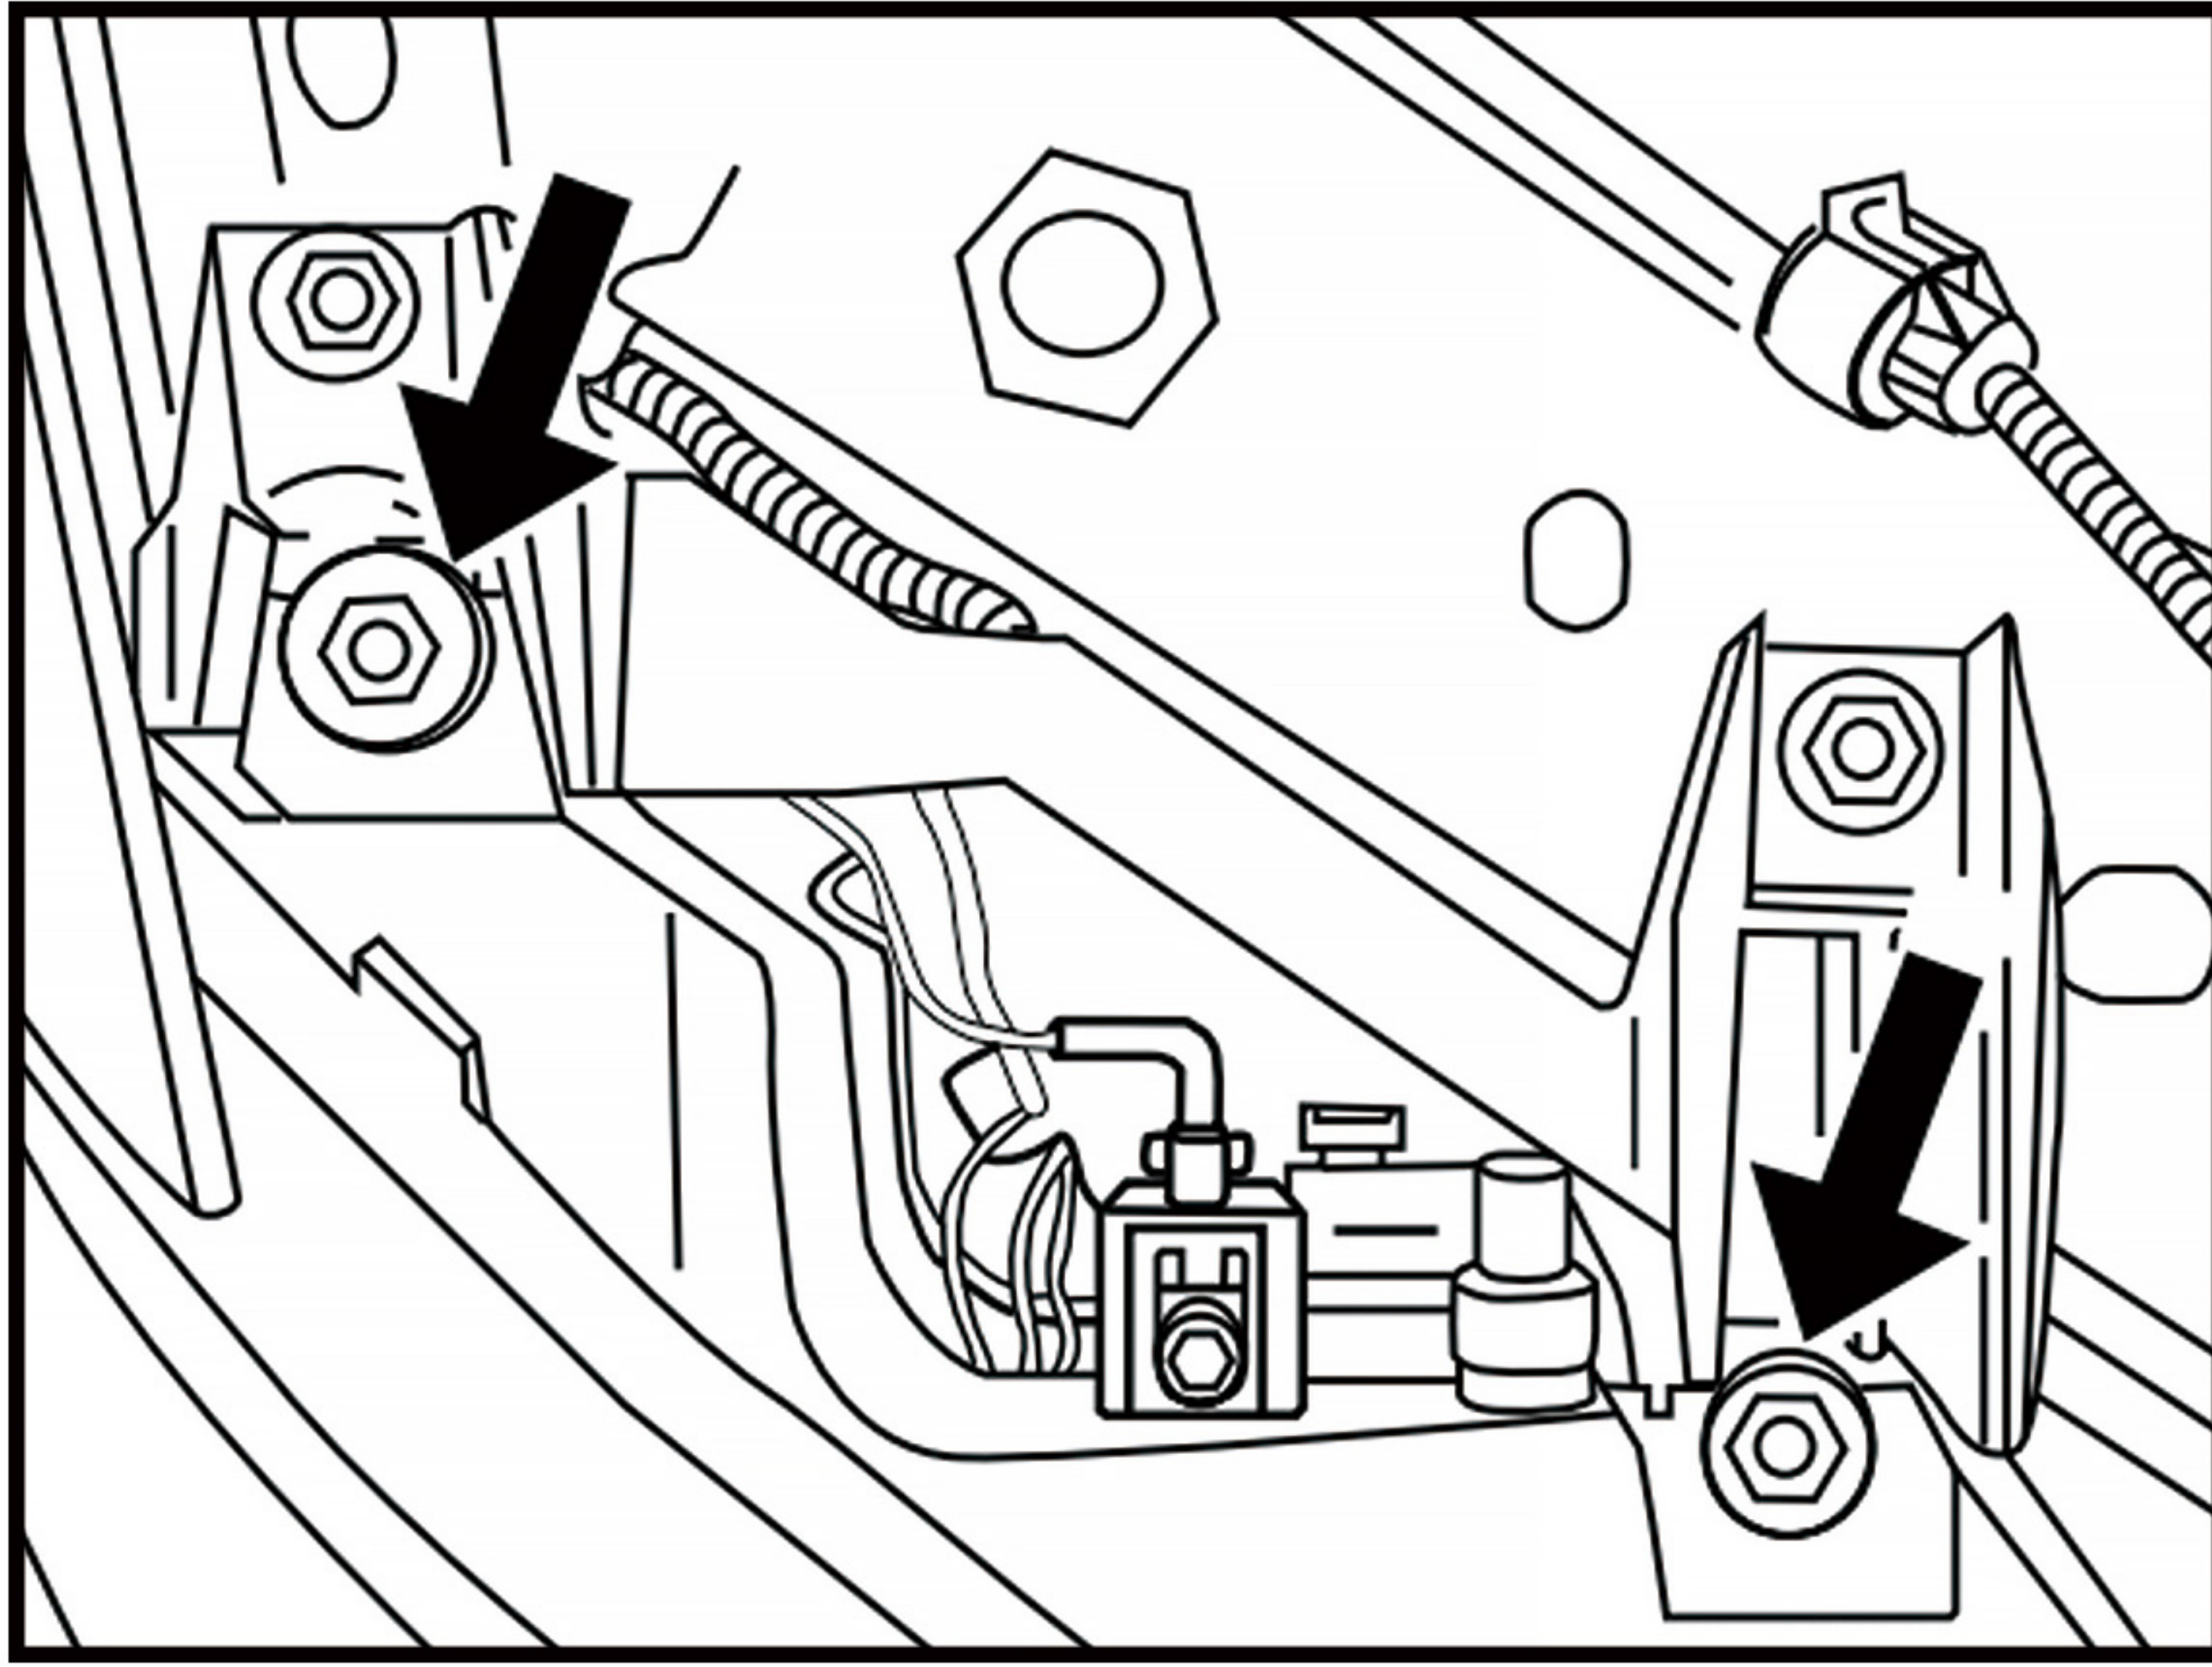

1. Open the hood.
2. Remove (2) bolts from the top of the headlamp.
3. Catch the corner of the headlamp and pull outward.
4. Disconnect headlight, signal light, side mark light connectors.
5. Remove the old headlamp away from vehicle.

STEP 2

1. Twist headlight bulb retainer counterclockwise.
2. Remove the retainer and headlight bulb from the old headlamp.
3. Twist signal light socket, side mark light socket counterclockwise and remove from the old headlamp.
4. Install headlight bulb, signal light socket, side mark light socket into the new headlamp.


STEP 3

1. Connect headlight, signal light, side mark light connectors.
2. Line up the two tabs on the bottom of the headlamp that fit into two slots in the headlamp bracket.
3. Secure the headlamp to radiator bracket with (2) bolts.

STEP 4

1. Repeat above steps on the other side.

WARM TIPS

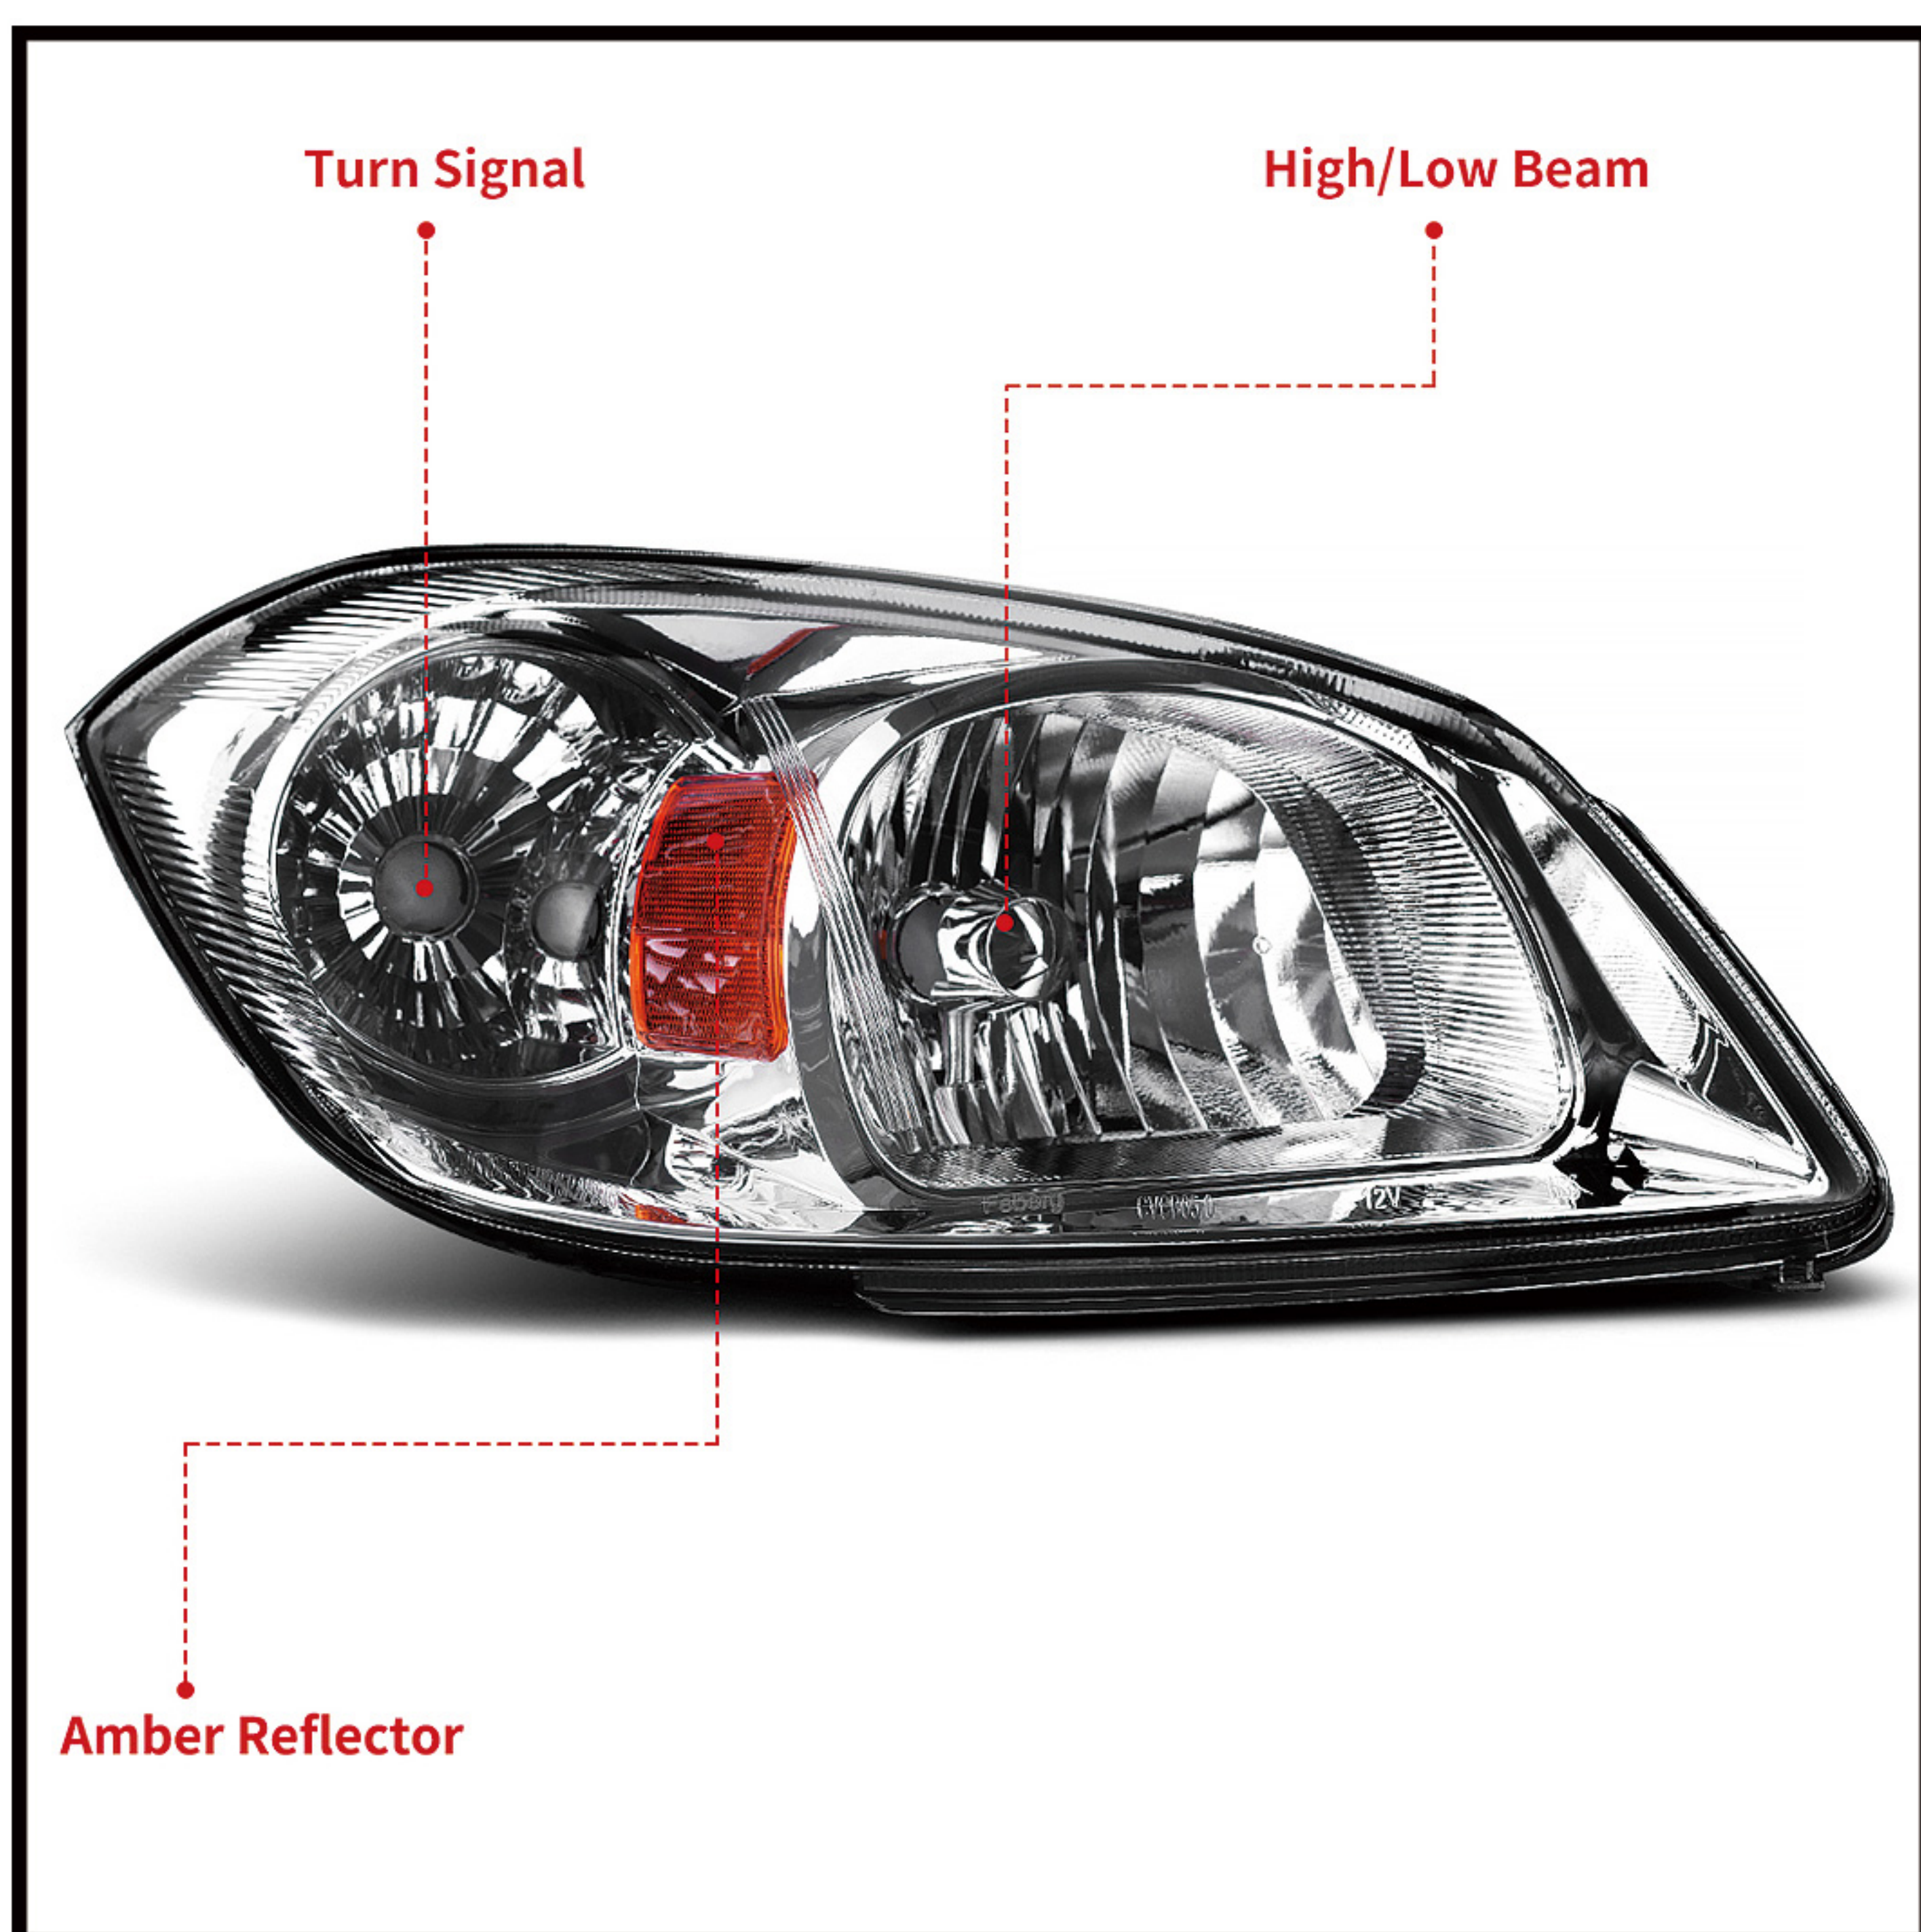

Before you begin to adjust the light, make sure check the alignment of your lights first. Park the vehicle about 10 to 25 feet from the wall with the lights aimed at the wall. The centerlines of the headlights should not be any higher than 3.5 feet above the ground.

1. Find the adjustment screws.
2. Adjust the headlights individually.
3. Adjust the vertical field.
4. Test your results.