


ASSEMBLY INSTRUCTIONS

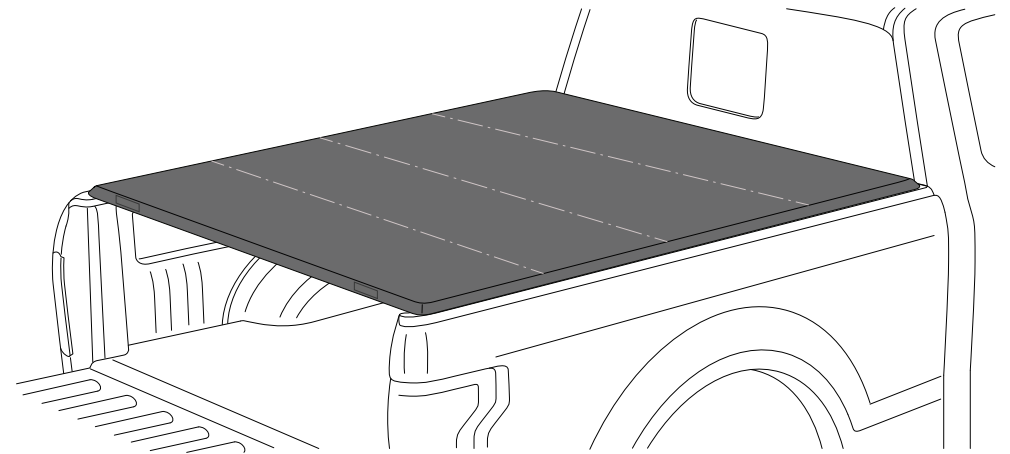

Tri-Fold Soft Tonneau Cover

Part List



①	X1	Cover Assembly
②	X4	Clamp Foam Pad
③	X1	Tailgate Seal Strip
④	X2	Replacement Rear Clamp
⑤	X1	LED Light
⑥	X1	Front Seal Strip (for Ford ONLY)
⑦	X6	Mounting Block (for Toyota/Nissan/Jeep ONLY)
⑧	X1	Allen Wrench (for Toyota/Nissan/Jeep ONLY)

Warning:

1. Tonneau cover must be completely secure in the closed position or opened position while driving. DO NOT DRIVE with cover in partially opened position.
2. Clean the debris before fold the tonneau cover.
3. Period check to ensure all clamps remain secure and tight.
4. Remove the tonneau cover before tow the truck from rear.
5. Do not drive without safety clamps


Step 1:

1. Clean the bulkhead and bedrail before installation.
2. For Ford truck stick the front seal strip on the front of bed rail.

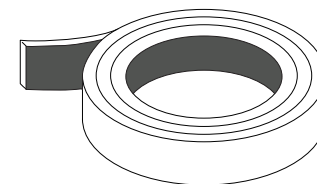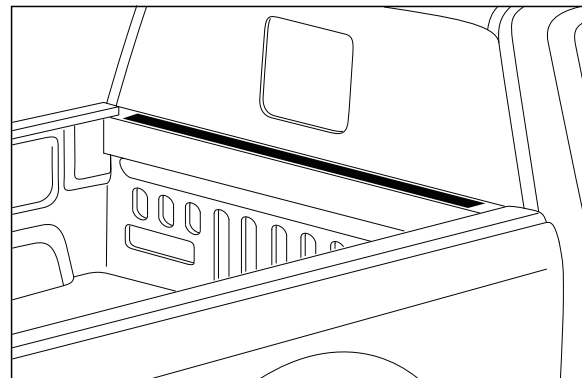


Step 2:

1. Place cover assembly on front truck bed rail against the cab.
2. Release safety buckles.

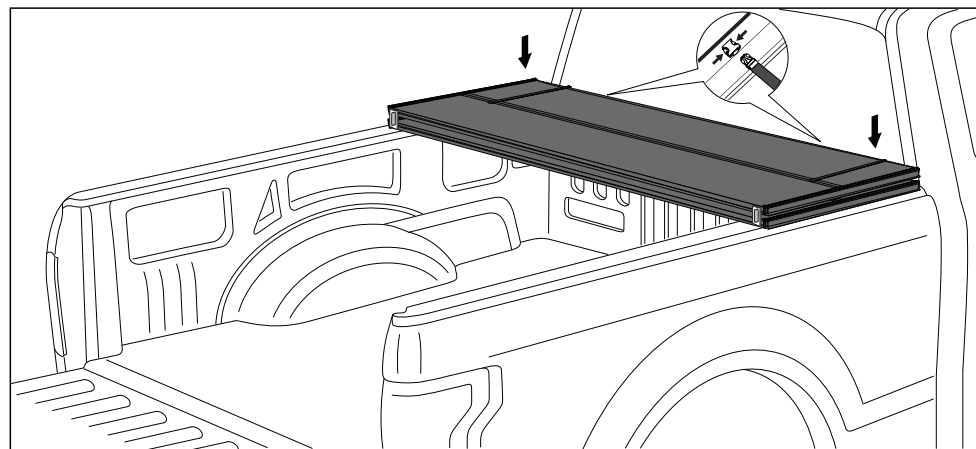


Step 3:

1. Fully unfold the cover towards rear.
2. Ensure the cover aligns on truck bed.

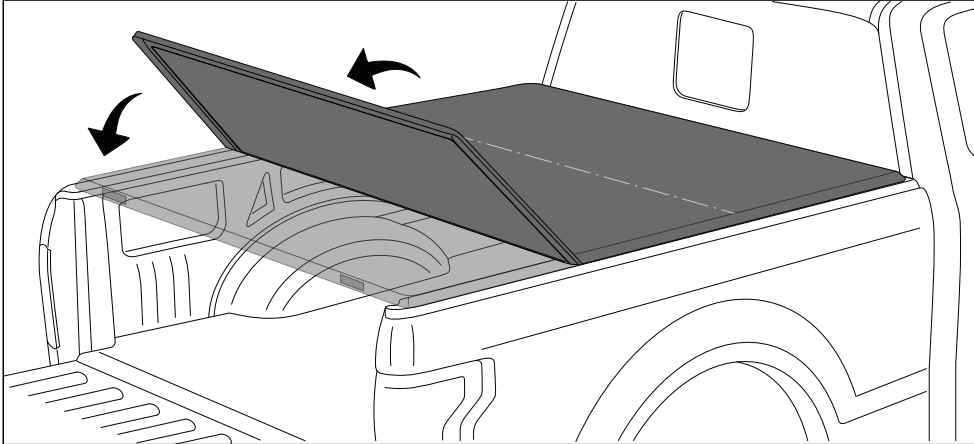

Step 4:

Carefully refold the cover without moving position on the truck bed.

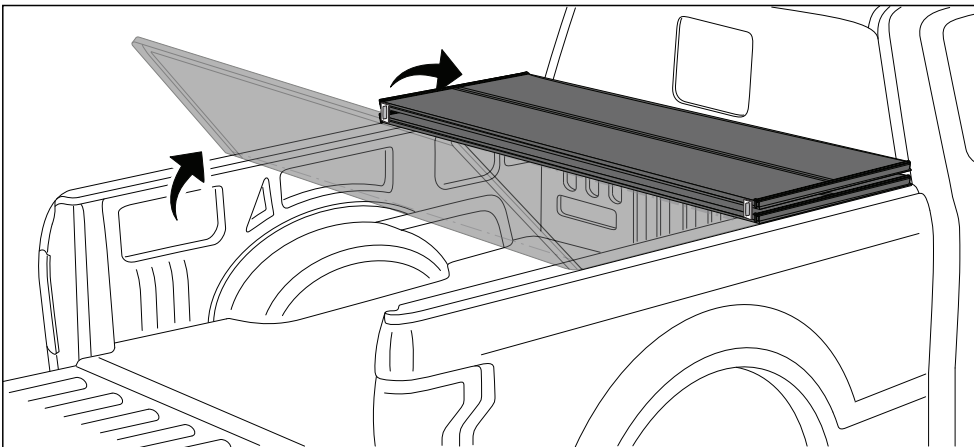

Step 5:

Secure the front clamps.







1. Slide front clamp to proper slot.
2. Pull down the front clamp to vertical position.
3. Hook the J-shaped clamp under the metal bed rail lip and tighten the knob.

Note:


Cutting the bedliner is necessary.

The clamps may not precisely vertical.

For trucks with utility rail refer special instruction to install mounting blocks.

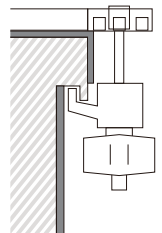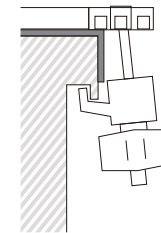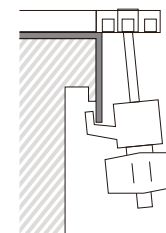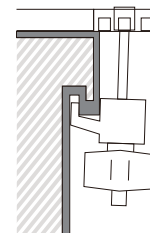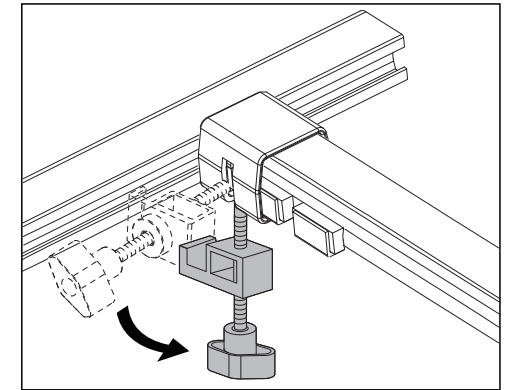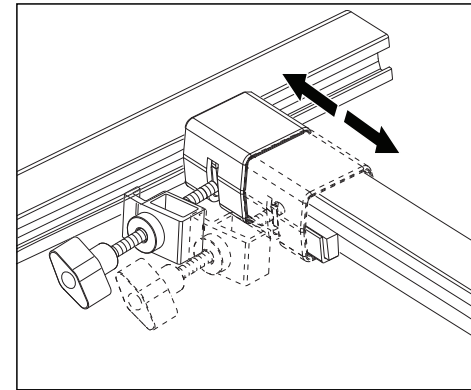


The clamps may not precisely vertical.

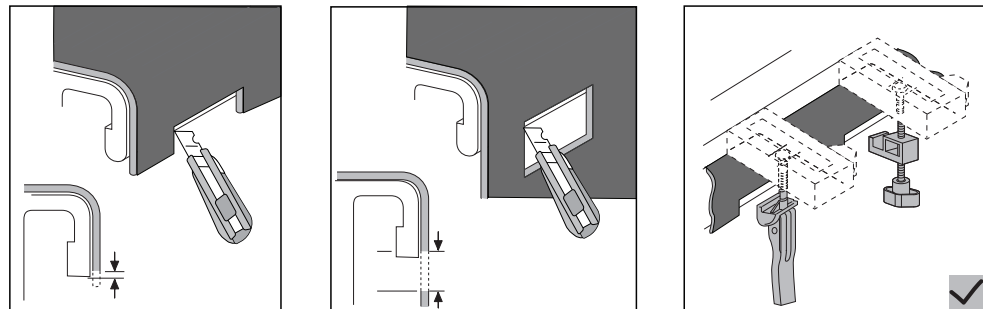

Step 6:

1. Loosen the safety clamp and attach the to the bed rail lip on both side.
2. Hand tighten the knob clockwise. DO NOT use wrench or overtighten.
3. Adjust the strap to proper length. and pull the the other end of the strap to tight.

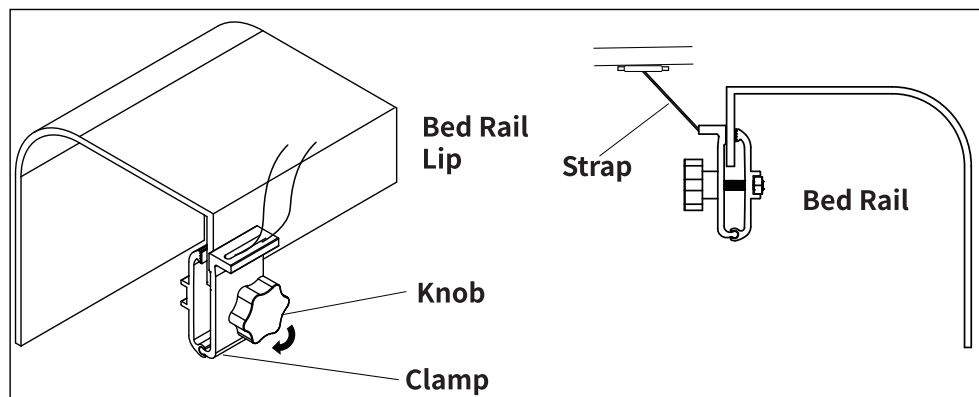



Step 7:


Carefully unfold the cover and secure the rear clamps.

1. Slide clamp to proper slot.
2. Pull down the clamp to vertical position.
3. Stick the clamp pad to mounting position on bed rail.
4. Turn the clamp handle to adjust the clamp to proper length.
5. Hook the J-shaped clamp under the metal bed rail lip and push the clamp handle to vertical position.

Note:


The clamps may not precisely vertical.

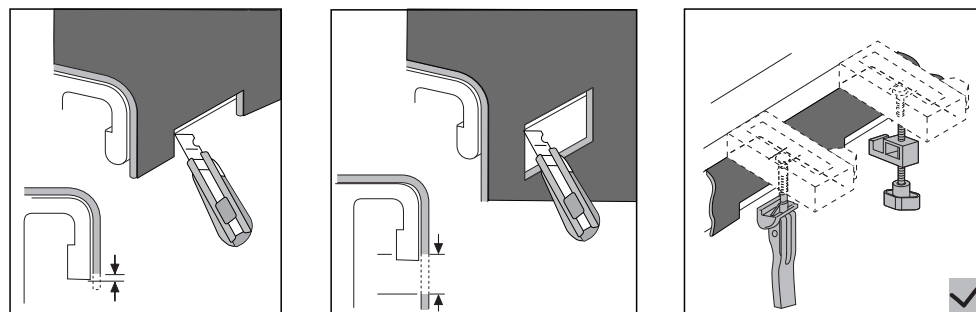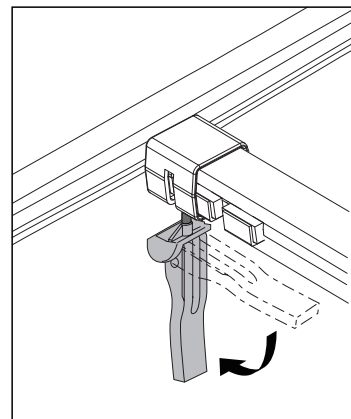

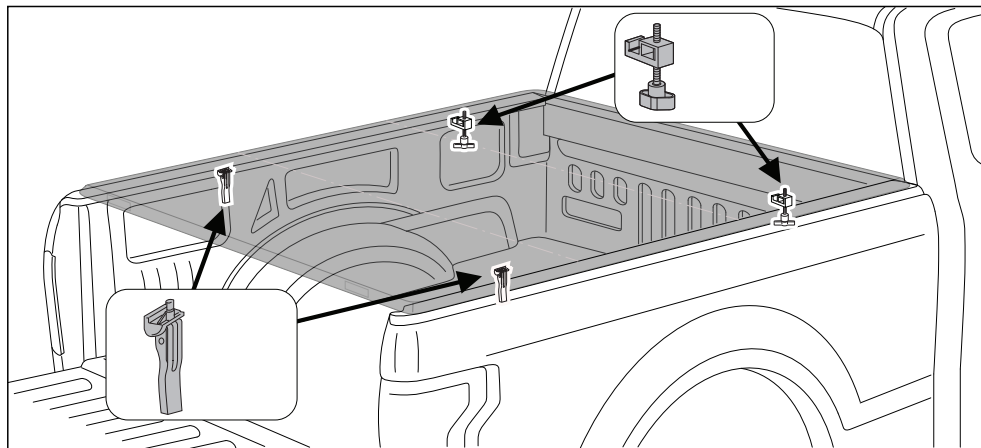



Step 8:

1. Seal the tailgate with seal foam strip.
2. Close the tailgate. Installation completed.


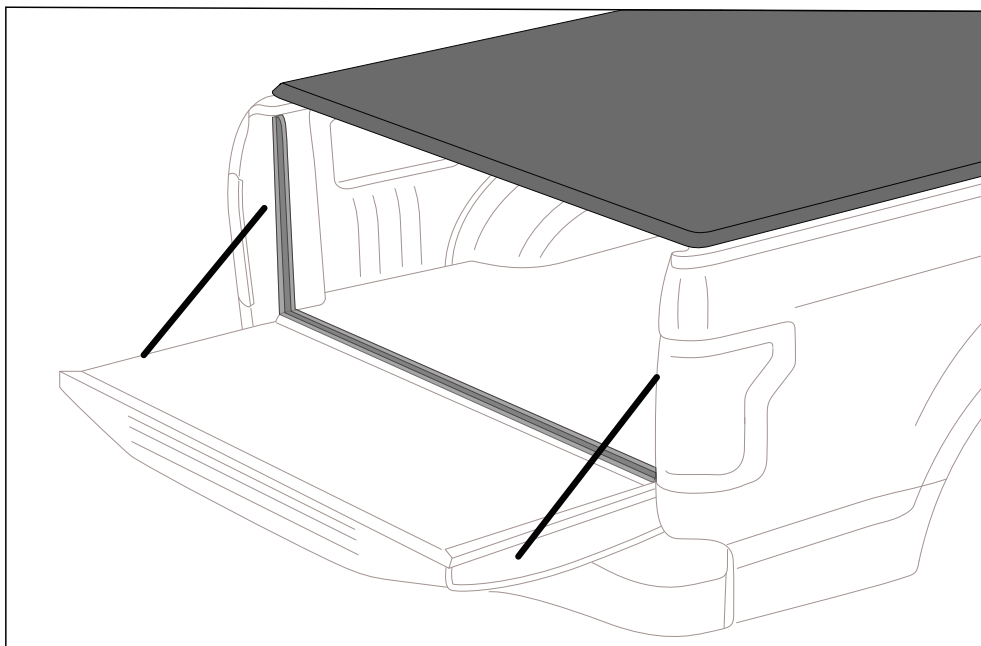


Fold up the Cover:

1. Open the tailgate.
2. Release and fold up the rear clamps.

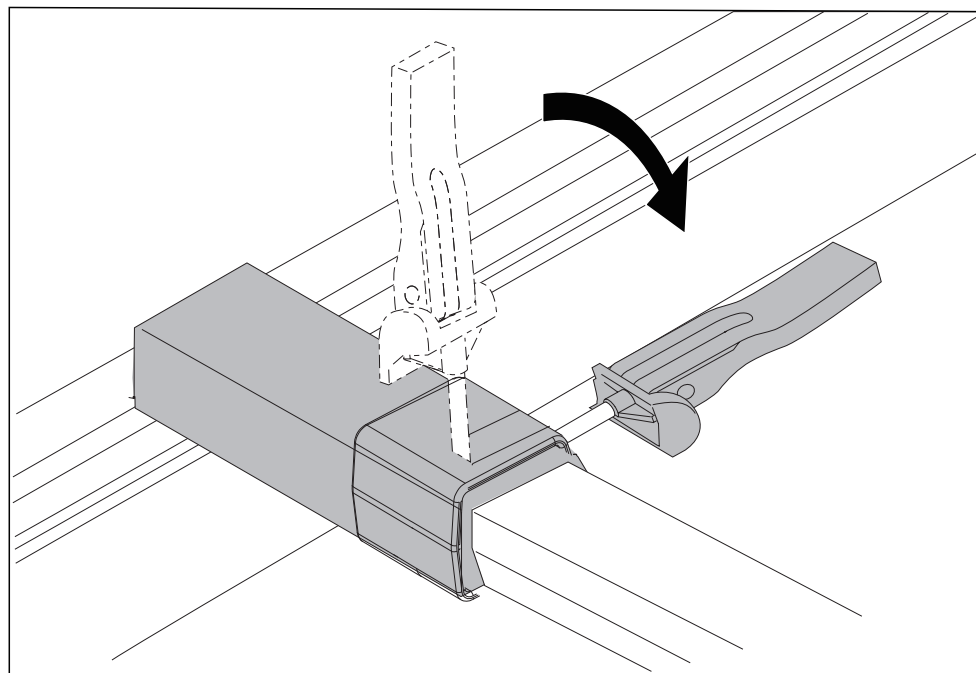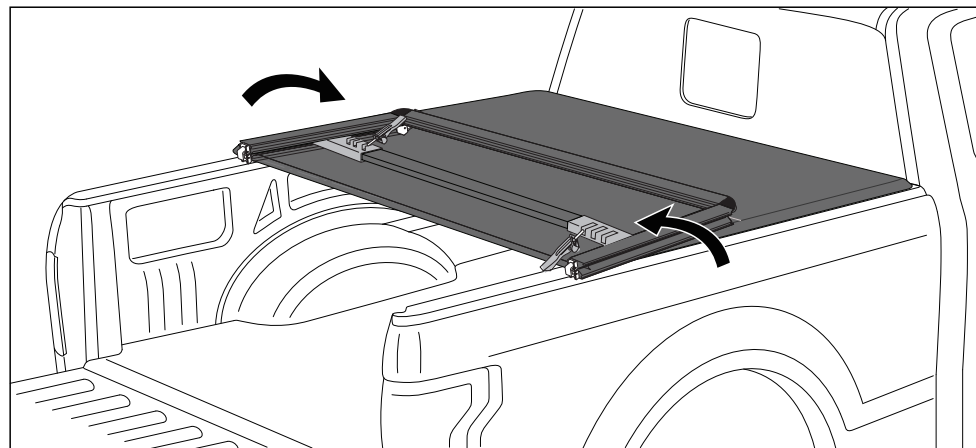

3. Fold up the cover towards front.
4. Secure the safety buckles.

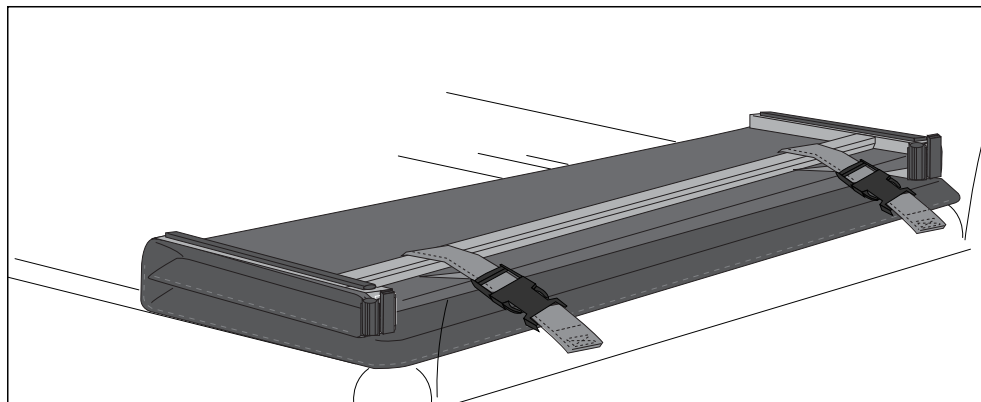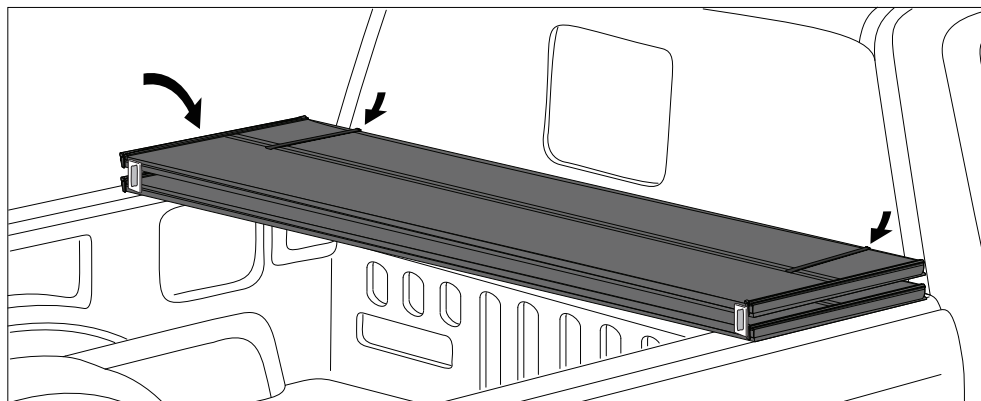

5. After the tonneau cover installed, periodic check to ensure all clamps and buckles remain secure and tight.

Special Instruction for Trucks with Utility Rail:

For trucks with utility rail:

1. Slide mounting block into track rail.
2. Attach front clamps onto mounting block.
3. Attach rear clamps onto mounting block.
4. Tighten set screw on mounting block.

