
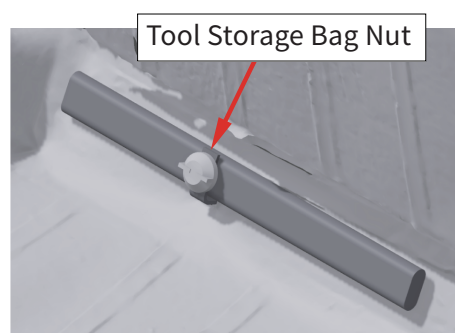




Step 1:

1. Flip the rear seat cushions in the upward position.
2. With 10mm socket and socket extension bar, remove and retain the jack nuts and jack.
3. Remove and retain the tool storage bag nut and tool storage bag
4. Remove the storage tray bolt (driver side corner) and storage tray from vehicle (if equipped).

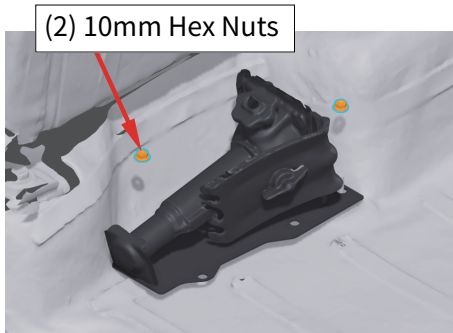



Step 2:

1. Place the storage case under the second row seats.
2. Feed (2) jack threads through the existing holes under the storage case.

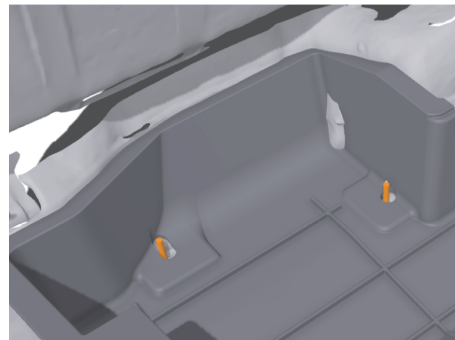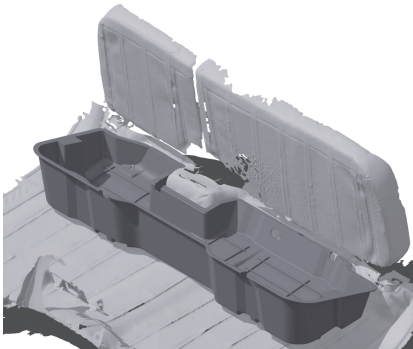


Step 3:

1. Take jack relocation rod to the door-close thread, secure with 10mm nut.
2. Reinstall the jack assembly and secure with (2) factory jack nuts.

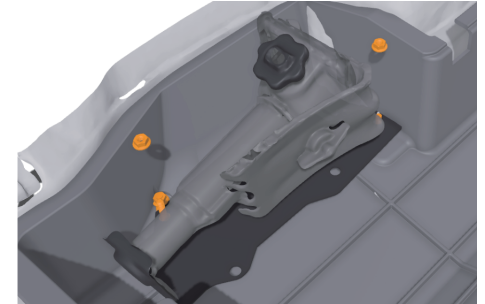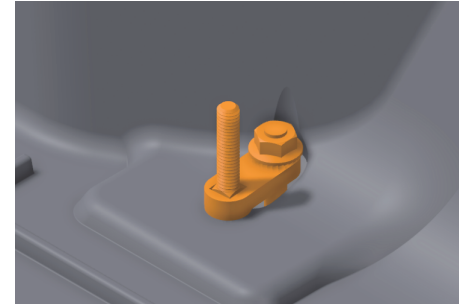



Step 4:

1. Flip the tool storage bag upside down (so that the tire iron handle points downwards) and refit the bracket to the bag.
2. Install the tool storage bag inside the rear under seat storage case and secure with the tool storage bag nut and tighten.

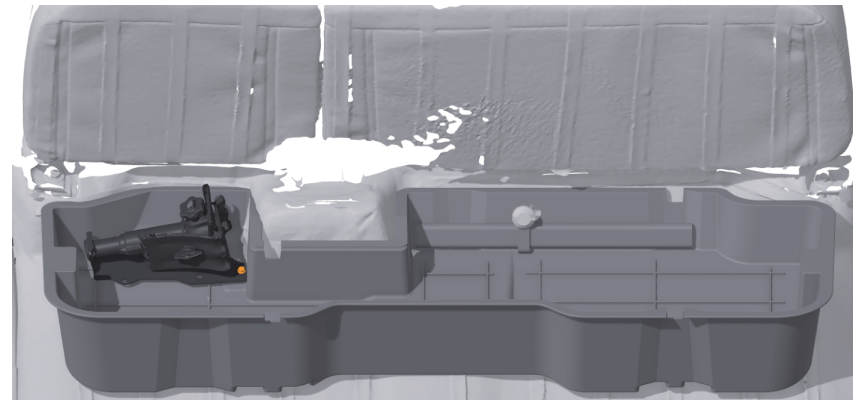

Step 5:

1. Install the center mini case.
2. Flip down the rear seat cushions.

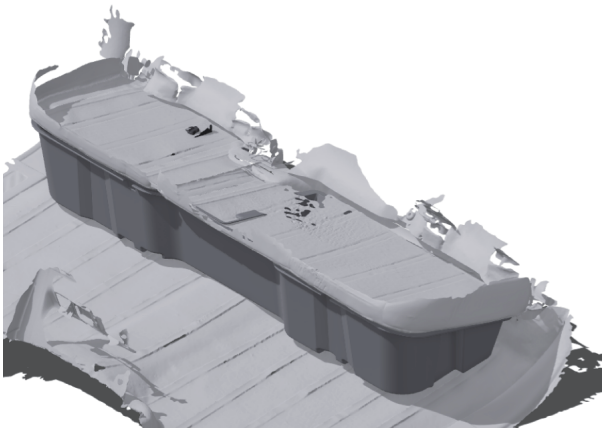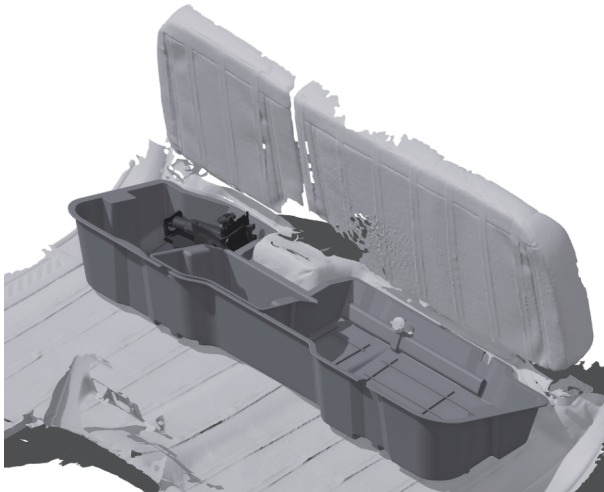

Part List:

	Qty.	Description
①	×1	Storage Case
②	×1	Center Mini Case
③	×1	Jack Relocation Rod

